 
 


Adding a system into FreeIP


- 1) Click on the menu button (Top left, 3 bars) and select the square icon with an arrow to the right hand side of the camera icon.

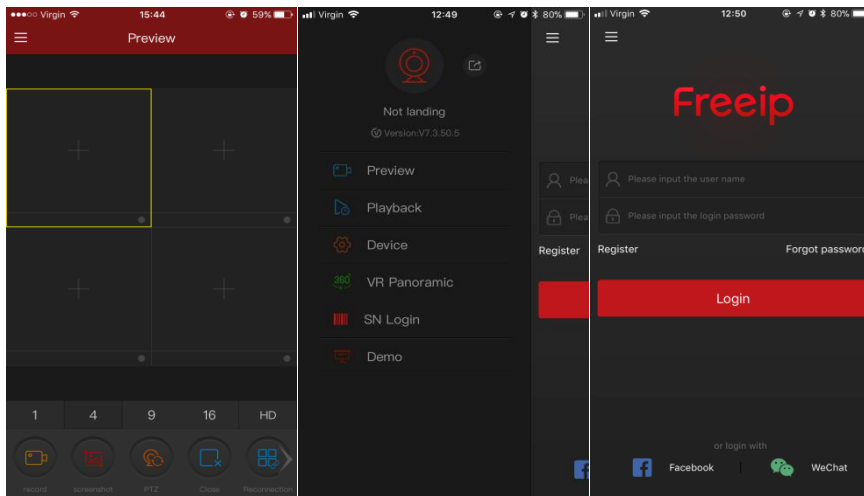

- 2) It will then ask you to create an account. Select “register” then create an account by filling out the boxes on screen. The mailbox will be what the end-user will be logging in with so make sure it’s an email they have access to. (Ensure it’s all lower case)

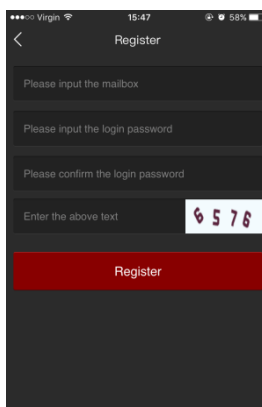

- 3) Once an account is created, log in to it (Ensure all log in details are lower case) and then head to the “Device” tab in the menu. Now Select “+ Serial Number Input”. Now press “Serial number added”.

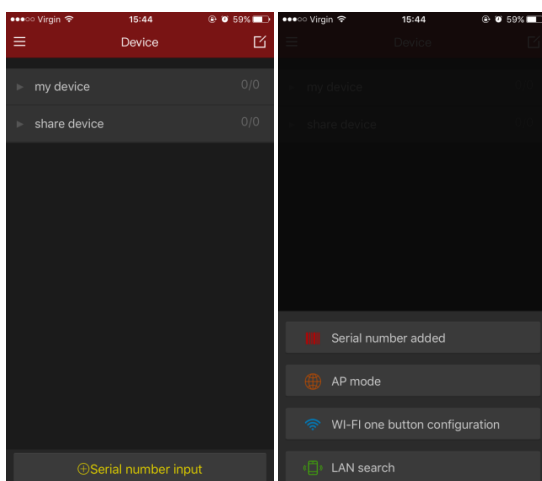

- 4) Now it will give you the option to scan the barcode which can be found in the following menu on the NVR. Right click > Menu > Network > P2P. Scan the QR code with a long digit number underneath it.

Alternatively, you can press “Input” in the top right to type the Serial Number in manually. The device username will be “admin” and the password by default is “12345” unless changed.

