

# How to Setup DDNS in a Dahua Device

06 November 2020 11:38

## How to Setup DDNS in a Dahua Device


This guide will help you setup and configure Dynamic DNS within your Dahua device.

**Step 1:** Log in to the CCTV using the local IP address.


**Step 2:** Click “Network.”



**Step 3:** Click “DDNS” and then click “Enable.”

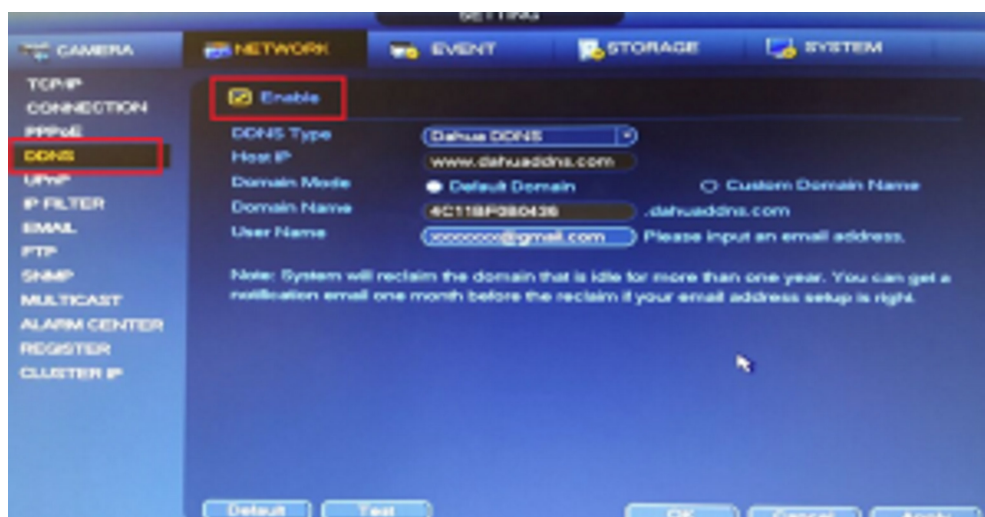

**Step 4:** Select No-IP from the “DDNS Type” drop down.

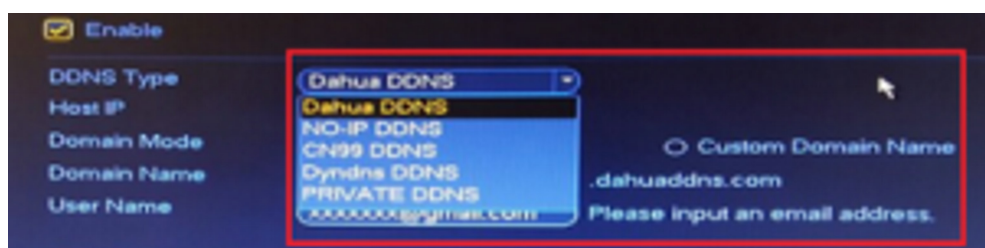

**Step 5:** Input the following information:

- **Host IP:** If this section does not automatically fill in add the following: dynupdate.no-ip.com
- **Domain Mode:** Click “Custom Domain Name.”
- **Domain Name:** This will be the hostname you created within No-IP. (Please contact Traders Warehouse Tech Support team, who can help setup a No-IP hostname if not already created)
- **Username:** The e-mail address of your No-IP account.

**Step 6:** Click “Ok” or “Test” at the bottom of the page.

Congratulations, the Dahua device will now send No-IP updates whenever the IP address changes.

**\*\*\* Please remember that when using DDNS that the below ports will need opening \*\*\***

Below is list of ports that Dahua systems typically use and require opening on the internet router.

TCP 37777  
UDP 37778  
TCP 80  
TCP 554