How to Setup Motion detection Alerts on a PRO-VIEW DVR

- 1. First you need you enable Notification's on the SoCatch app
- 2. With the PRO-VIEW system setup within the app, Select the Control option from within the app



4. You need to change from UnNotify to Notify

3.



6. With **Notify (gold icon)** now selected, notifications will now be enabled in the SoCatch app



- 8. You now need to enabled Motion Detection on Camera/Camera's from with the PRO-VIEW DVR
- 9. Select Event Setup



- 10.
- 11. Select Motion Detection in the top left screen option
 - a. Select the Channel (camera's you want to enable) ie- CH03
 - b. Notification tick on camera's you want notifications enabled

12.

Event Setup					
Motion Detection	ີ				
	CHO1	CH02	CHOS	CH04	
		Sc	atup		
Enable					
Motion Area	Setup) (Setup	Setup	Setup	
Notification					
		Event	Handler		
Log			\checkmark		
Event Record	CHO1	CHO2	CHO3	🖂 (CH04 🖂	Disable 🖂
Popup	Disable) (Disable	🖂 (Disable	🖂 (Disable 🖂	Disable 🖂
Popup Channel	CHO1) (CHO2	CHOB	🖂 (CH04 🖂	Relative 🖂
Buzzer					
Relay	Disable	Disable	🖂 (Disable	🖂 (Disable 🖂	Disable 🖂
PTZ	Disable) (Disable	🖂 (Disable	🖂 (Disable 🖂	Disable 🖂
Go Preset					
Resume Preset					
Mail to	Recei	ver Setup	.) (Not	fication Setup.	
	(0		Can	cel	


13. Now click on the **Setup option**

Event Setup						
Motion Dataction	ັກ	\bigtriangledown				
	CHO1	CH02	C	CHOS	CH04	
		Se	qub			
Enable						
Motion Area	Sotup) (Setup	(<u>s</u>	GWD) 🗌 Sotup	
Notification						
		Event	Handler	2		
Log				\checkmark		
Event Record	CH01 🗸	CHO2	🕞 (CHC)S 🗸) (CH04	🖂 Disable 🖂
Popup	Disable 🗸	Disable	🖂 Dis	able 🖂) (Disable	🖂 Disable 🖂
Popup Channel	CHO1 -	CHO2	🕞 (CHC)S 🗸) (CH04	🖂 (Relative 🖂
Buzzar						
Relay	Disable	Disable	🖸 Dis	able 🖂) (Disable	🕞 Disable 🕞
PTZ	Disable 🗸	Disable	🖂 (Dise	able 🖂) (Disable	🖂 Disable 🖂
Go Preset			\triangleright	0 >		
Resume Preset				0 >		
Mail to	Recal	or Setup		Notifi	cation Setu	
	()			Cance	el	

14. You can now set motion detection

- a. You can setup motion detection for the whole camera viewing area.
- b. You can also setup motion detection are for just set area, to do this select **Disable All Region** and **Draw the area detection** as in the example given below.

15.

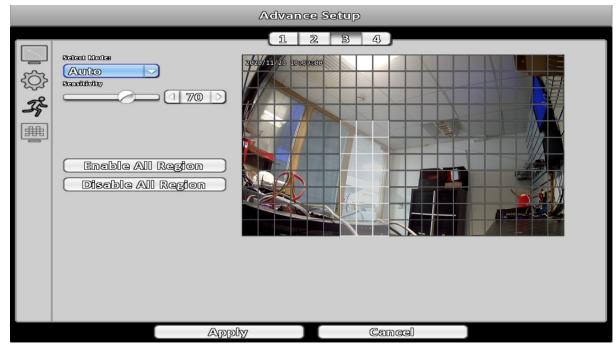

16. You can also set the Motion Detection Sensitivity

- a. The default is 70
- b. If the sensitivity are set to high and you start receiving too many notification alerts caused by false motion alerts from the camera you can try adjusting the Sensitivity Alerts settings
- c. Click Apply to save any changes

17.

	Advance Setup
exist Modes Image: State of the state o	
	Apply Cancel



19.

Motion Detection	บ	\bigtriangledown			
	CHO1	CH02	CHOS	CH04	
Setup					
Enable					
Motion Area	Setup	Setup	Setup	Setup	
Notification					
		Event l	landler		
Log			S		
Event Record	CH01	CHO2	CHOB 🖂	CHO4	Disable 🖂
Popup	Disable	Disable	🗩 Disable 🖂	Disable 🖂	Disable 🖂
Popup Channel	CHO1	CHO2	CHOS 🖂	CHO4	Relative 🖂
Buzzer					
Relay	Disable	Disable	🗩 (Disable 🖂	Disable 🖂	Disable 🖂
PTZ	Disable	Disable	🗩 Disable 🖂	Disable 🖂	Disable 🖂
Go Preset					
Resume Preset					
Mail to	Receit	ver Setup		adion Satup.	
	C	DK J	Cancel		

20. You can view mobile devices that are set to receive notification alerts

IOS	(Phone XR	
	OK	Cancel	

- 22.Click Ok and test camera motion detection alerts are received on your mobile device form the SoCatch app
- 23.You can turn off notification alerts from the SoCatch app by clicking on the UnNotify option form the control menu from within the app

