

AVTECH NVR\DVR – Change User Name and Password

CHANGE USER NAME AND PASSWORD



 
It's highly recommended to change the user name and password of this device to keep your account safe. Otherwise, any person could access this device if he knows the default user name and password.

If you didn't go through the setting wizard at the first place, you'll be prompted to change the user name and password:

WARNING	
PLEASE BE ADVISED TO MODIFY THE DEFAULT ACCOUNT TO ENSURE YOUR INFORMATION SECURITY.	
<ul style="list-style-type: none"><input checked="" type="radio"/> MODIFY<input type="radio"/> REMIND ME LATER<input type="radio"/> DON'T REMIND ME ANYMORE	
<div style="text-align: right;"><input type="button" value="CONFIRM"/></div>	

Choose **MODIFY** to start the change immediately.

To change later, select **MENU → ACCOUNT → USER LIST**, and choose  to change the default user name and password for "admin".

USER LIST		
EDIT	USER NAME	GROUP
<div> </div>	admin	SUPERVISOR