



Red Hikvision GUI - Camera Motion Detection - Audio warnings on Recorder turn on/off

02 December 2020 14:23

1. One the Menu option - select Camera

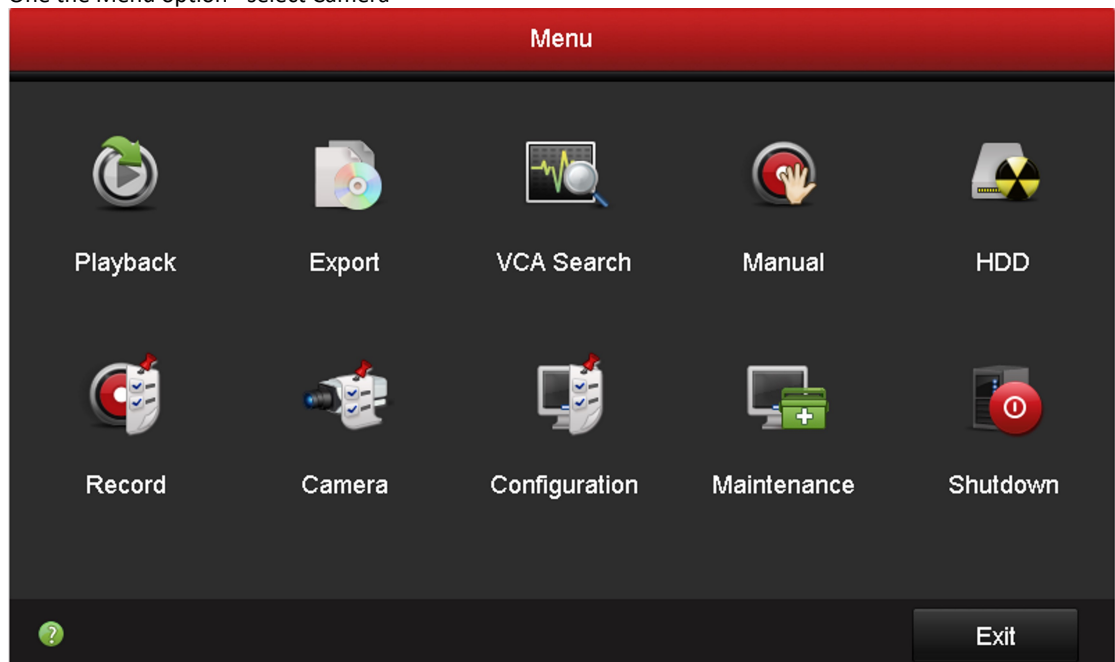


3. Select Motion - now select the required camera and Enable Motion Detection

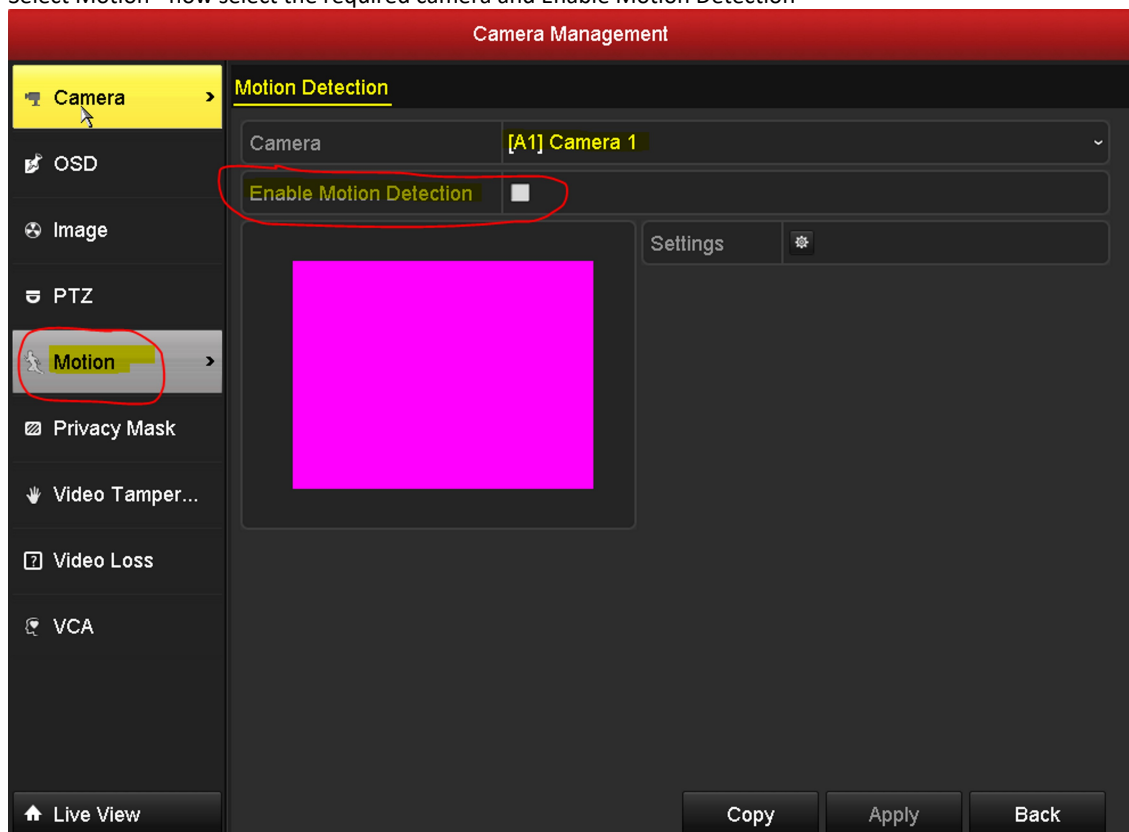

5. Now click Settings - cog icon

6.

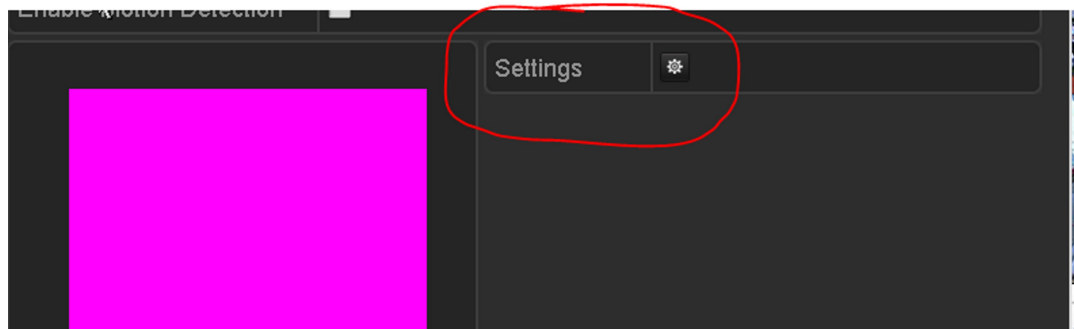

7. Now select Linkage Action and tick Audible Warning to enable bleeping on Recorder when motion is detected on the camera
8. Enable/Disable this setting from all the other required camera's

9.

