



How to change video output on Hikvision system

03 December 2020 09:59

1. You can change the output connections on the back of the Hikvision system to your preferred connection ie - VGA\HDMI
2. From the Menu screen go into Configuration

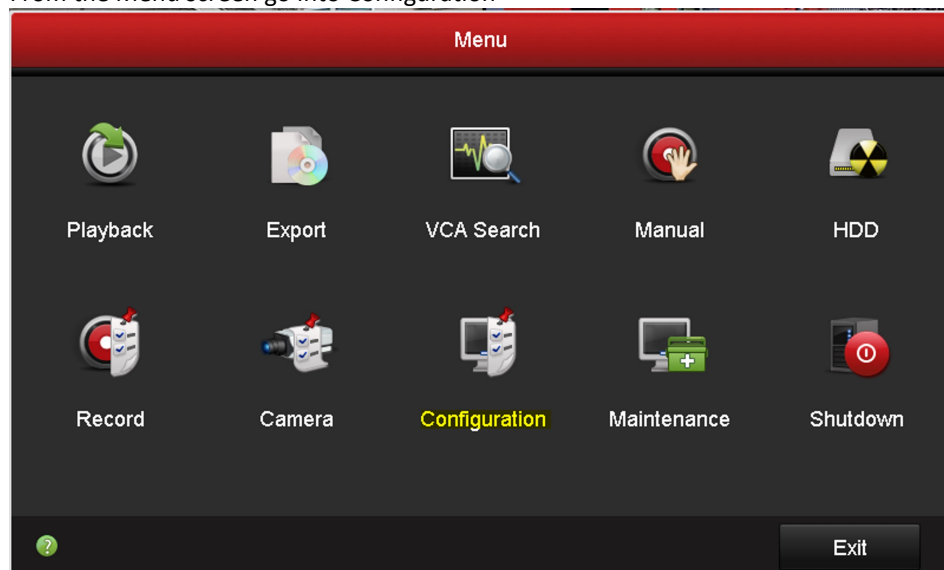

4. Select - Live View and change the Video Output Interface option to the required setting

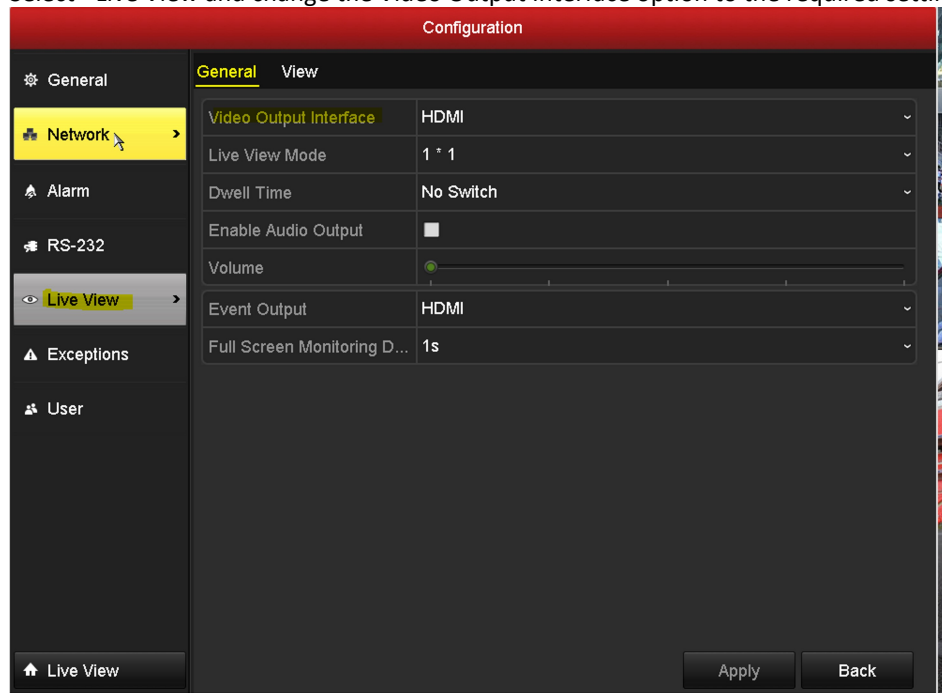

6. Click Apply when done.