

# BitVision Hard Disk Drive Setup Guide

## HDD - Menu

In the Menu interface, click "HDD" to enter the disk management interface.

You can see the hard disk information and format the hard disk. As shown in Figure 5-16:

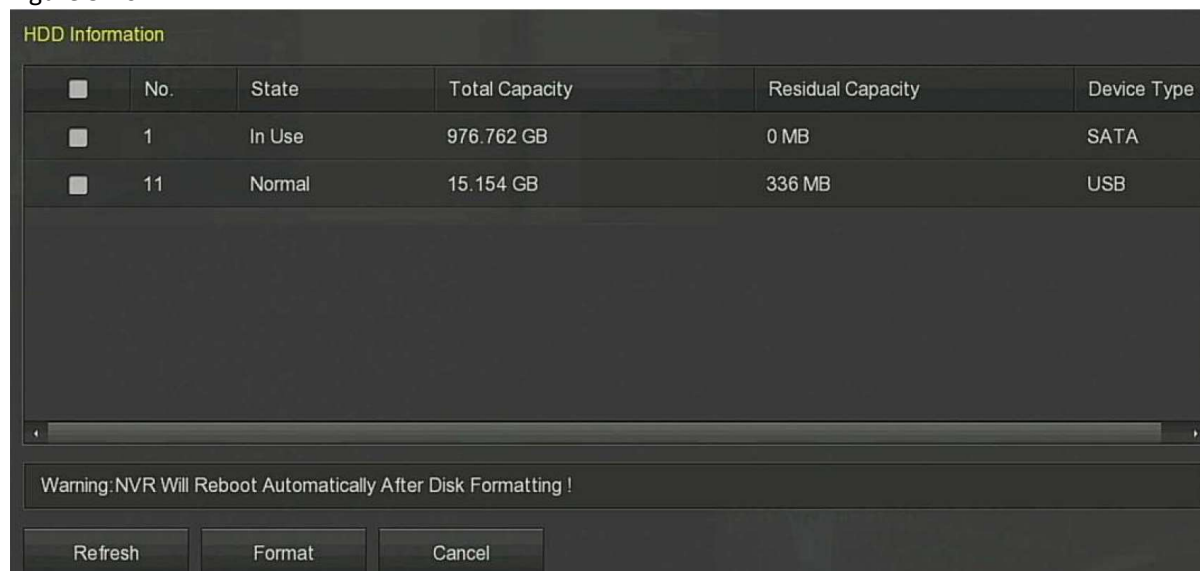


Figure 5-16

- **No.:** The number of HDD that connect the system.
- **State:** Detect the current working status of HDD, you could use only that displays "In use"; after formatting is completed, you need to restart NVR, the status displays "In use".
  - **Total Capacity:** The total available HDD capacity, the single HDD capacity cannot exceed the maximum capacity: 8TB.
  - **Residual Capacity:** Display the residual capacity of the current HDD;
  - **Device Type:** SATA.
- **Refresh:** Click update disk list information.
- **Format:** Formatting the HDD, select the HDD → click "Format" → "Confirm".

## HDD Troubleshooting

- "No Disk" indicates that the device is not connected, or the hard disk is not detected.
- The hard disk information is displayed on the HDD interface when the hard disk is used normally.
  - **The hard disk must be formatted first when the hard disk is connected to the NVR for the first time or when "Not formatted" is displayed.**
  - The device does not need to format the hard disk when the hard disk status shows "Use".
  - **After formatting the hard disk, restart the NVR to takes effect**