


# How to enable camera Poll on XVR

02 February 2021 09:56

Below is guide on how to enable automatic switching between camera's on a Bitvision XVR range


1. Login to the cctv system and right on the screen
2. Select Poll option

3.

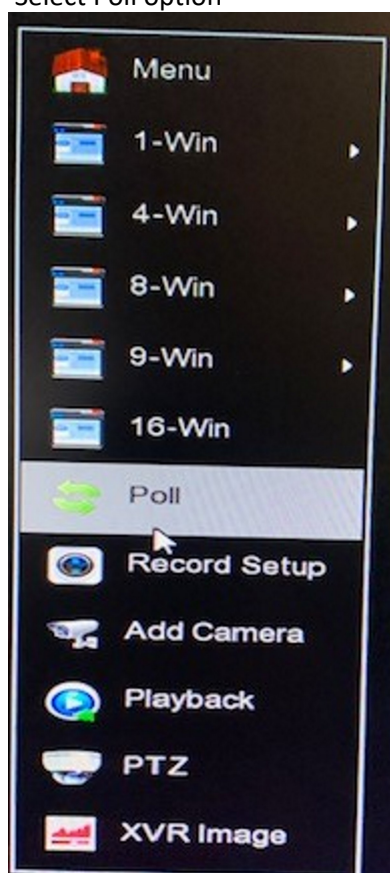

4. Click the Enable option and set the time in seconds to switch between connected camera's

5.

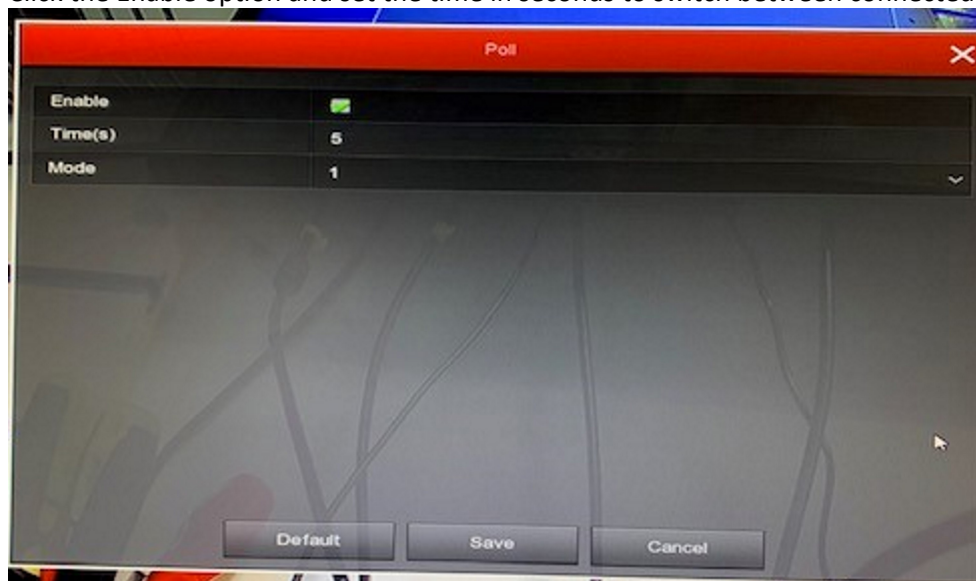

6. Click save to save changes