


How to setup push notifications on Bitvision system


1. You need to make sure that P2P remote access has been enabled and is showing as **Online** and the Push Interval has been set.

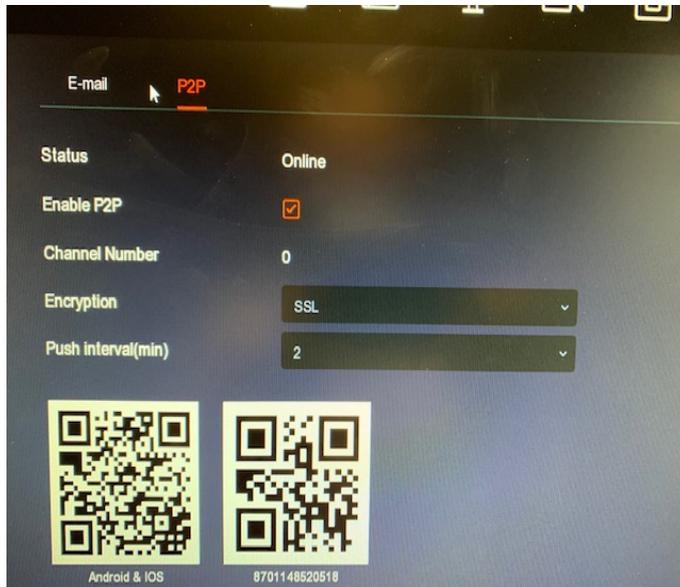

- 2.
3. Follow the steps below to Register BitVision Account

3.2.2 Register BitVision Account

New users need to register an account to log in, as shown in Figure 3-5 below:

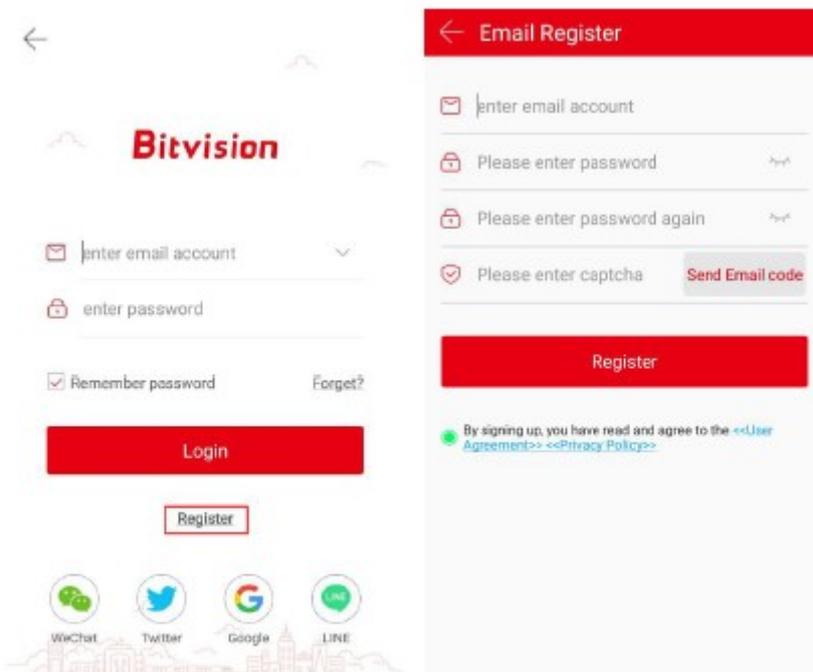

①

②


4. Open the BitVision App, enter the login screen, click "Register"

- Enter a email address,
- Enter a password and then the same password again,
- Please enter captcha – there is sticker on the bottom of the BitVision device that contains a captcha code that needs to entered here.




- click "Send Email code",
- enter the captcha code received in the registered email address,
- Now Click Register
- You need to make sure you have click the option to you have read and agree to the 《User Agreement》 《Privacy Policy》 → "Register".


5. You should now see the BitVision device added to the app, click three dots on the left hand side of the screen to bring the following options

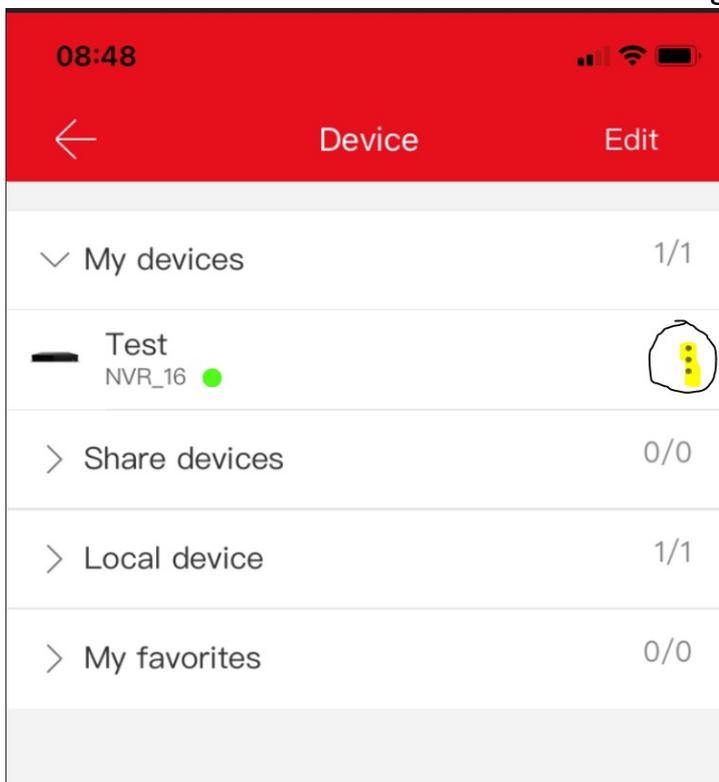

- 6.
7. Make sure the Message interval setting is enabled and the time relates to the push notification Message interval setting

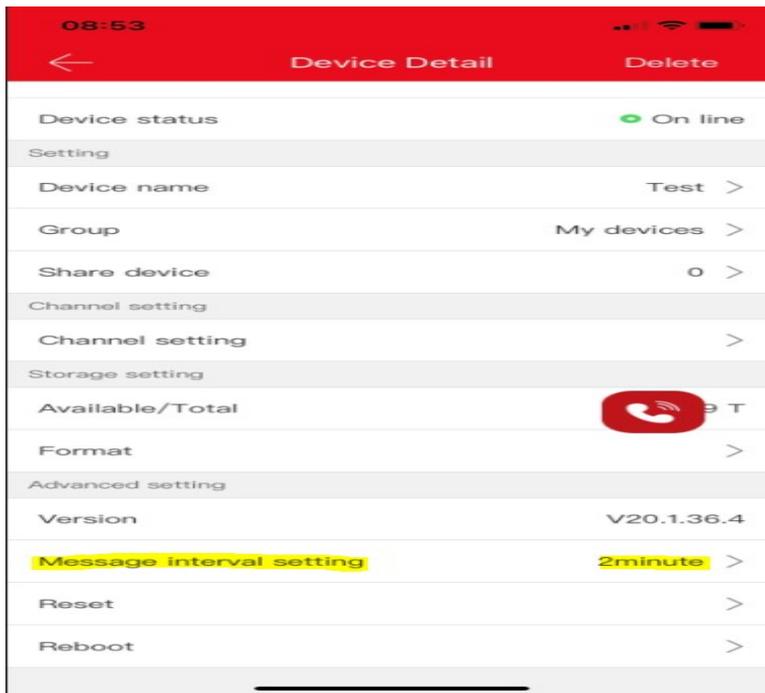


- 8.
9. You now need to setup push notification on the BitVision device
10. In the System option select Norma Event and the setup and Enable Motion Detection and Set Area for motion detection to trigger

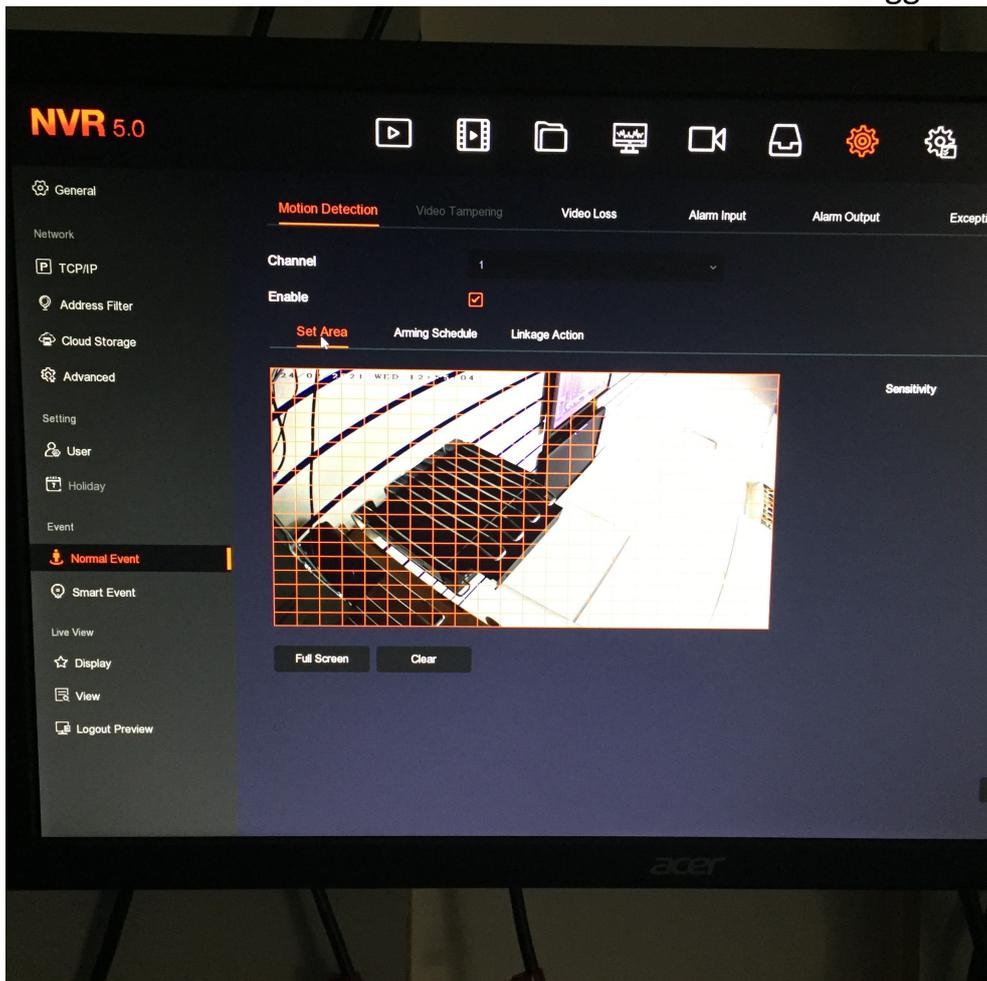


11.

12. Now set your Linkage Action enabling Channel Recording and Full Screen Monitoring if required

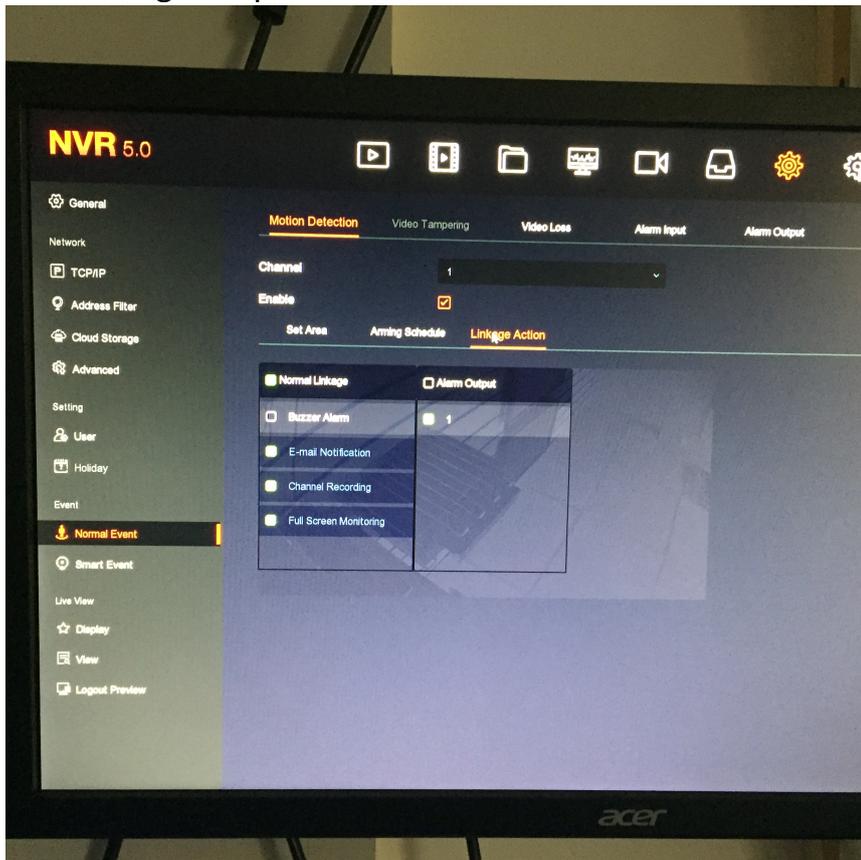


13.

14. You will need to Allow Notifications for the BitVision App on your mobile device so that Motion Detection Alerts pop up on the phone

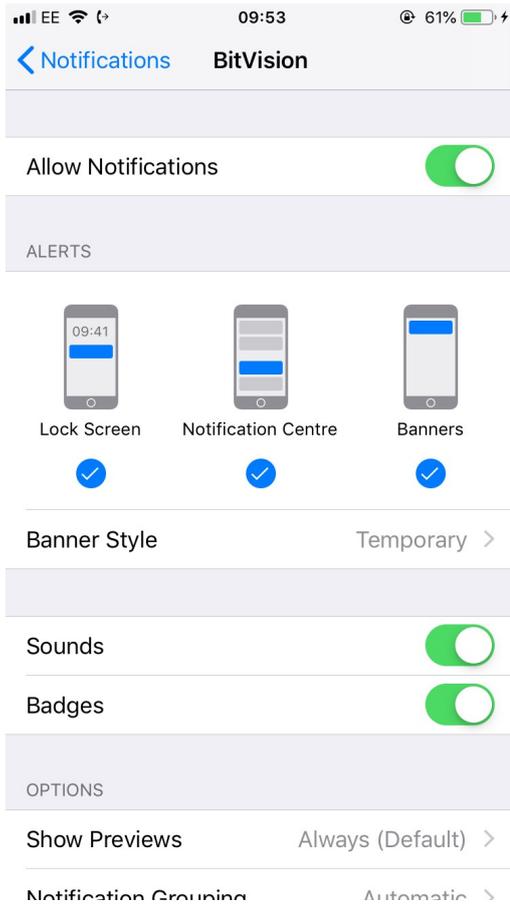

15. Notification Grouping

16. Within the BitVision App go to Event message to see your notifications

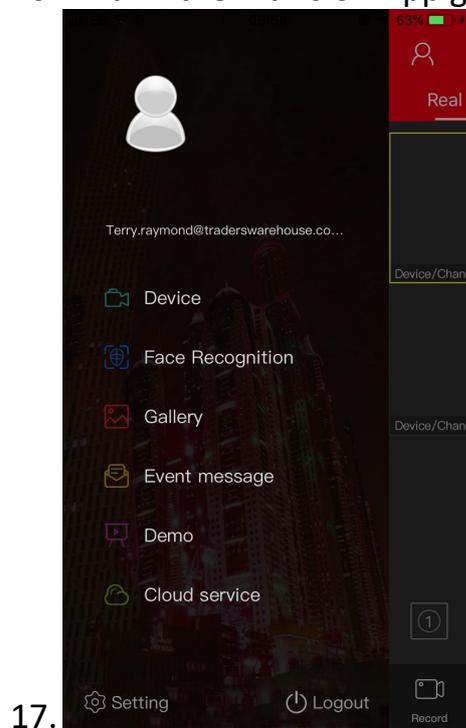

17.