How to setup Line Crossing on a HIKVISION System

1: Line Crossing Detection

Line crossing detection function detects people, vehicles, or other objects which cross a pre-defined virtual line and then some certain functions can be performed when the alarm is triggered.

Steps


(1) Click **Configuration>Event>Smart Event**, Enter the **Line Crossing Detection** setting interface.

(2) Check the **Enable** checkbox of Line Crossing Detection to enable the function.

(3) Click the **Draw Area** button and draw a virtual line of where you wish the alert to take place on the camera view.

(4) Set the **Max. Size and Min Size** for a valid target. Click Max. **Size** button and draw Rectangle area. click Min. Size button and draw Rectangle Area.

(5) Save Changes at the bottom of the page when you have set Area Settings

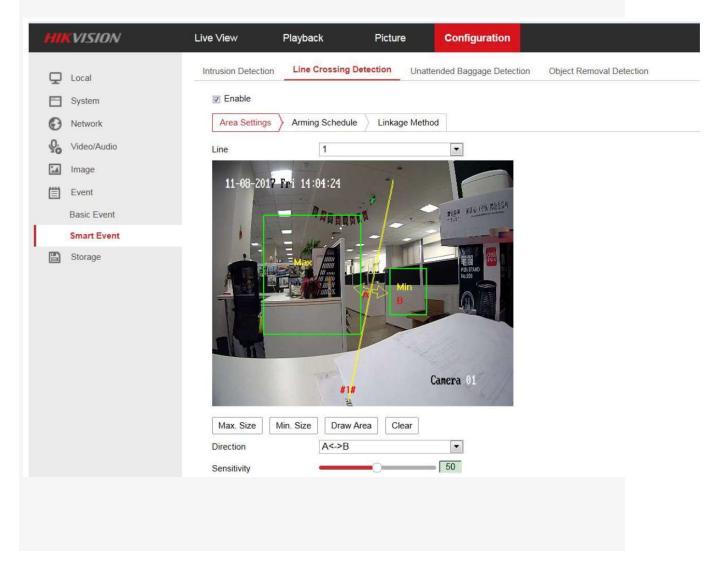

NOTE:

Max.Size: The maximum size of a valid target. Targets with larger sizes would not trigger detection.

Min.Size: The minimum size of a valid target. Targets with smaller sizes would not trigger detection.

(5) Select the **Direction** for Line crossing detection. for example, A>B means only objects crossing from Side A to Side B will be detected.

(6) Click Stop Drawing when you have finished and then setup Sensitivity.

(7) Click **Arming Schedule** to set the arming schedule.

(8) Click **Linkage Method** and select the linkage methods for the line crossing detection.

(9) Click **Save** to save all settings.

(10) If you require Line Crossing Detection alerts sent to a mobile device you need to enable **Notify Surveillance Center** in the **Linkage Method** option and **Save** changes

Area Settings Arming Schedule Linkage Method				
Normal Linkage	Trigger Alarm Output	Audio and Light Alarm Link	Trigger Recording	PTZ Linking D1 🗸
Audible Warning	□ A->1		☑ D1	Preset No.
Send Email			□ D2	1
Notify Surveillance Center			□ D3	Patrol No.
Full Screen Monitoring			□ D4	1
			□ D5	Pattern No.
			□ D6	1
			□ D7	
			□ D8	

🖹 Save