

## Configuring Linkage Method

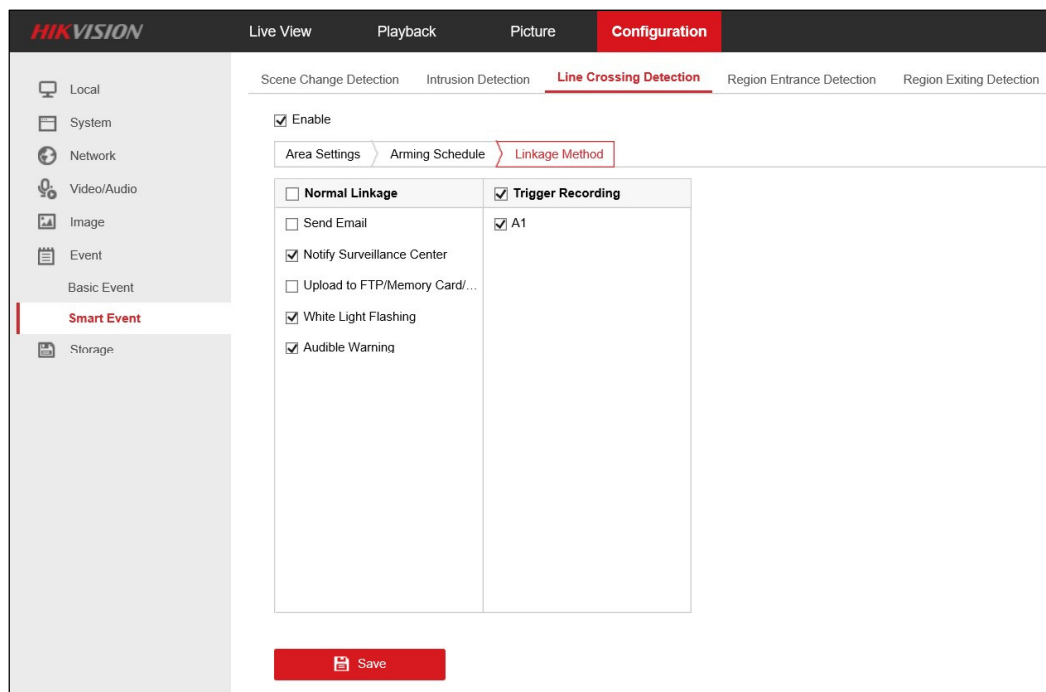


Figure 7, Linkage Method

1. Click the **Linkage Method** tab to display the **Linkage** section.

2. Check the alarm action checkboxes you wish to configure:

- **Normal Linkage**

- **Send Email** – An alarm will cause the system to send an e-mail notification to the pre-defined e-mail address.
- **Notify Surveillance Center** – An alarm will cause notification to be sent to the pre-defined Surveillance Center.
- **Upload to FTP/Memory Card** – An alarm will cause the system to upload a notification to a pre-defined FTP site or memory card.
- **White Light Flashing (Strobe Light and Audio Alarm/SL models only)** – An alarm will cause the camera's white light to flash (strobe).
- **Audible Warning (Strobe Light and Audio Alarm/SL models only)** – An alarm will cause the system to generate an audible alarm.

- **Trigger Recording\***

- **A1** – An alarm will cause this camera to start recording.

3. Click **Save** to save the alarm action settings.

---

\* Available alarm outputs will vary by NVR and camera.

## Configuring White Light Output (Strobe Light and Audio Alarm/SL Model Only)

1. Go to **Configuration > Event > Basic Event > White Light Alarm Output**.
2. Set **Flashing Duration** from 1 to 60 seconds.
3. Set **Flashing Frequency** to **High** (interval 0.6 seconds), **Medium** (interval 1 second), or **Low** (interval 1.5 seconds).
4. Click **Save** to save the settings.

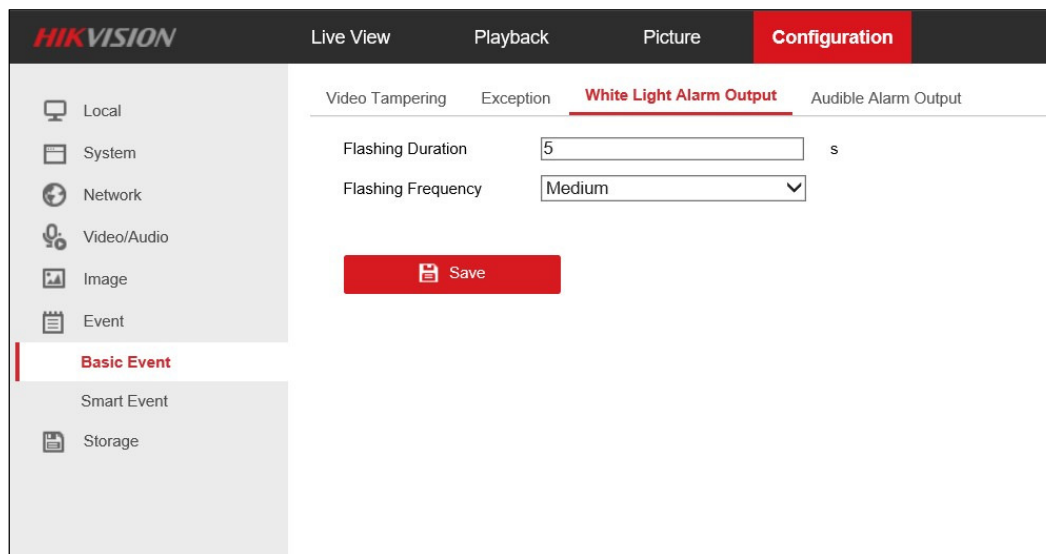


Figure 8, White Light Alarm Output

## Configuring Audible Alarm Output (Strobe Light and Audio Alarm/SL Model Only)

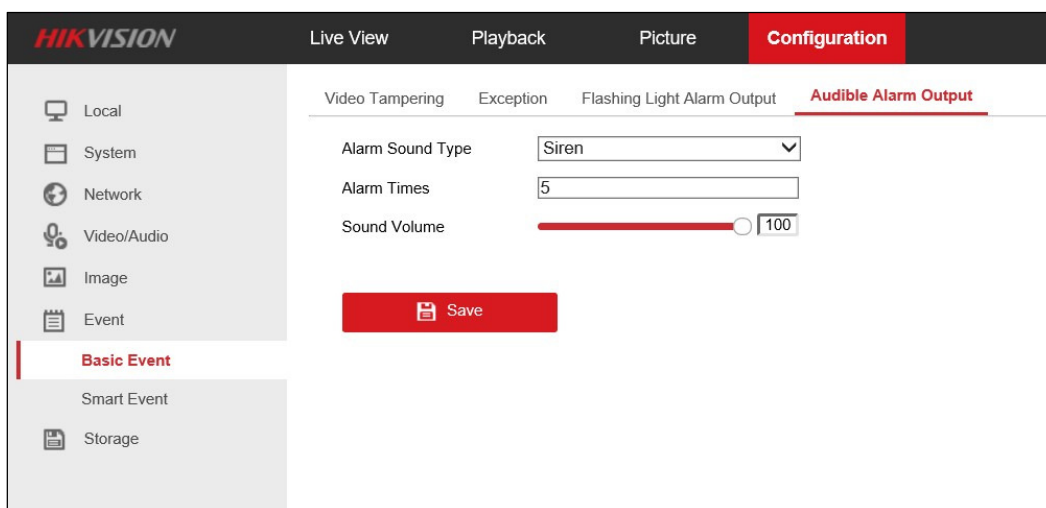


Figure 9, Audible Alarm Output

1. Go to **Configuration > Event > Basic Event > Audible Alarm Output**.

2. Set **Alarm Sound Type** – Click the drop-down list to select one of 10 types of built-in alarm sounds.

**NOTE:** Importing local audio files is not supported.

#### Details of 10 Types Built-in Alarm Sounds

Number	Details of Alarm Sounds
1	Siren
2	Warning, this is a restricted area
3	Warning, this is a restricted area, please keep away
4	Warning, this is no-parking zone
5	Warning, this is no-parking zone, please keep away
6	Attention please, the area is under surveillance
7	Welcome, please notice that the area is under surveillance
8	Welcome
9	Danger! Please keep away
10	(Siren) and Danger! Please keep away

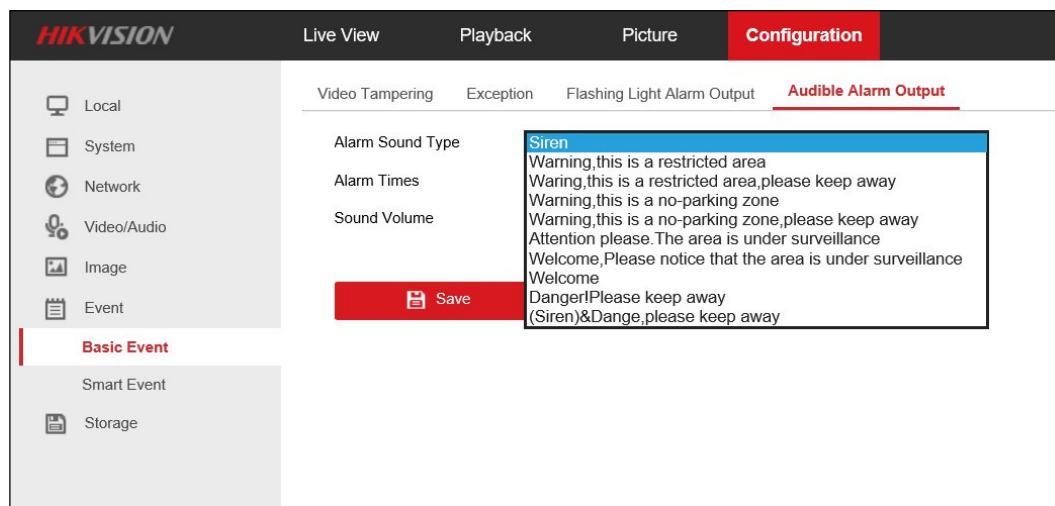


Figure 10, Alarm Sound Type Pull-Down List

3. Set **Alarm Times** – Enter how many times the alarm sound will repeat, from 1 to 50 times
4. Set **Sound Volume** – Volume can be set from 1 (softest) to 100 (loudest).