



Enabling Virtual Host on Hikvision NVR

Step 1. Login to the web page of the NVR by the IP address of your NVR followed by the HTTP port (as shown in the picture below). Your IP address may be different from the one pictured.

Note: If you do not know the LAN IP of your NVR, use Hikvision SADP Tool, which can be downloaded. It scans your network for any Hikvision devices that are connected and allows you to see and/or change their network settings, including the internal IP.

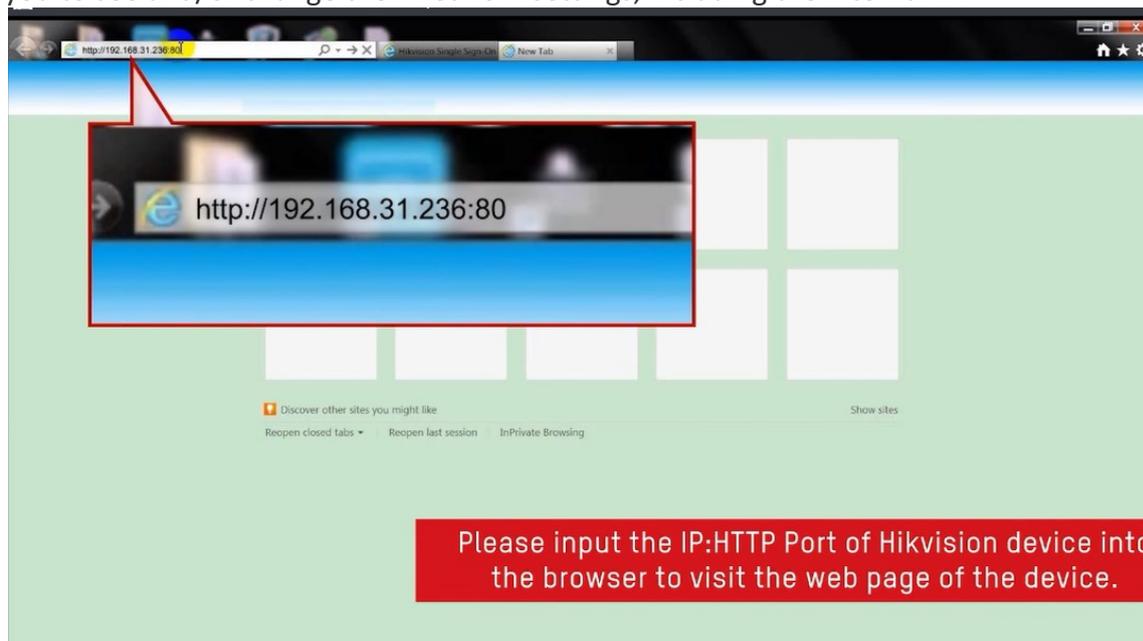

Step 2. Go to Configuration > Network > Advanced Settings> Other and **Enable Virtual Host**. When you click 'Save' your NVR will reboot.

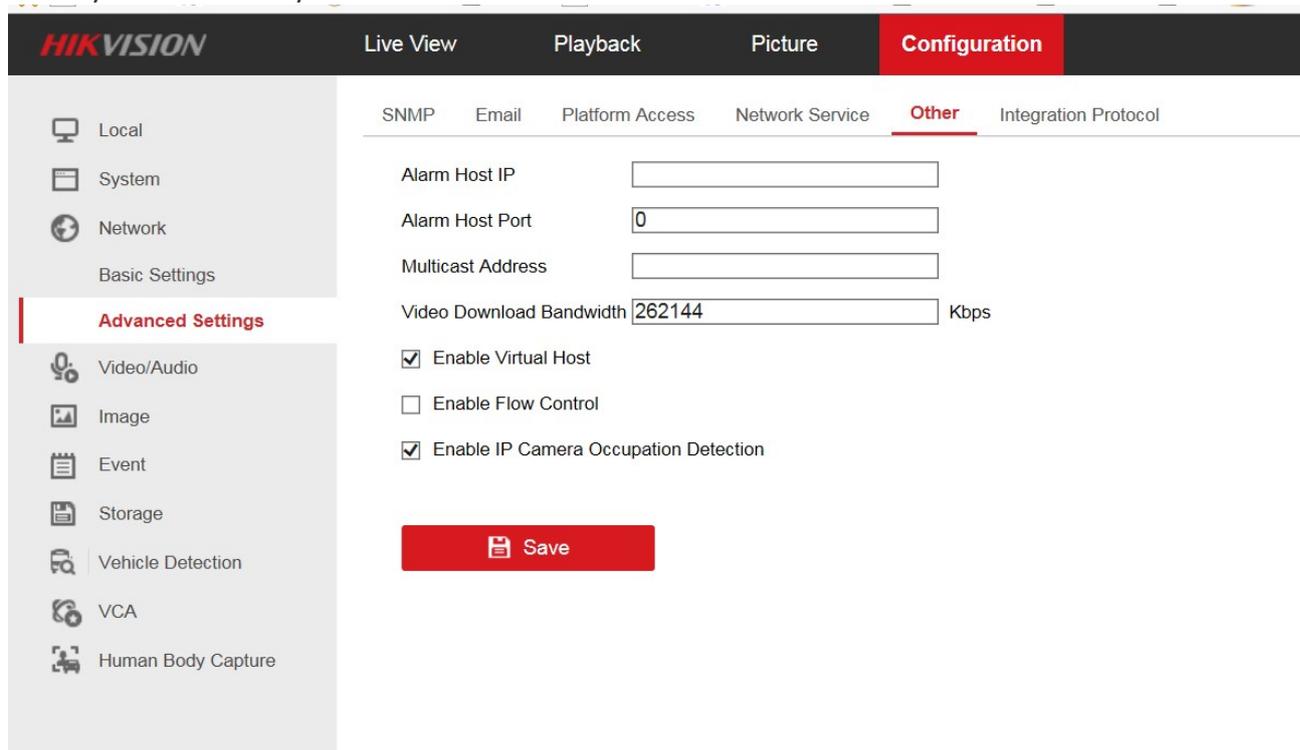

Step 3. Navigate to the **Camera Management window** (Configuration > System > Camera Management). You'll notice that the connect tab links to each camera directly.

The screenshot shows the Hikvision NVR interface with the 'Configuration' tab selected. On the left is a navigation menu with 'Camera Management' highlighted. The main area displays a table of IP cameras with the following data:

Channel No.	Camera Name	IP Address	Channel No.	Management Port	Security	Status	Protocol	Connect
D1	Camera 01	10.41.8.54	1	8000	Weak	Online	HIKVISION	http://10.41.8.54:8000
D2	Camera 02	10.41.8.54	2	8000	Weak	Online	HIKVISION	http://10.41.8.54:8000
D3	Camera 03	10.41.8.54	3	8000	Weak	Online	HIKVISION	http://10.41.8.54:8000
D4	Camera 04	10.41.8.54	4	8000	Weak	Online	HIKVISION	http://10.41.8.54:8000
D5	Camera 01	10.9.96.27	3	8001	Weak	Offline(Failed to g...	HIKVISION	http://10.9.96.27:8001
D6	Camera 01	10.9.96.27	1	8001	Weak	Online	HIKVISION	http://10.9.96.27:8001
D7	IPdome	10.16.97.167	1	8000	Weak	Offline(User nam...	HIKVISION	http://10.16.97.167:8000
D8	IPCamera 08	10.9.96.91	1	8000	Weak	Offline(Network A...	HIKVISION	http://10.9.96.91:8000
D11	jimmy	10.9.97.98	1	8000	Weak	Online	HIKVISION	http://10.9.97.98:8000
D12	Camera 01	10.9.96.49	1	8000	Weak	Online	HIKVISION	http://10.9.96.49:8000

At the bottom right of the table, it says 'Total 10 Items' with navigation arrows.

Step 4. If you click the link, you'll be redirected to the camera's page, where you can access the camera and do extra settings that can't be done directly via the NVR.

The screenshot shows the login page for a Hikvision camera. On the left is a large image of a camera lens. On the right, there is a login form with the following elements:

- Language dropdown menu set to 'English'.
- 'User Name' label and an input field.
- 'Password' label and an input field.
- 'Login' button.