



## How to update a BitVision NVR\XVR Firmware

1. In the top system menu option select **Maintenance** and then select **Device**

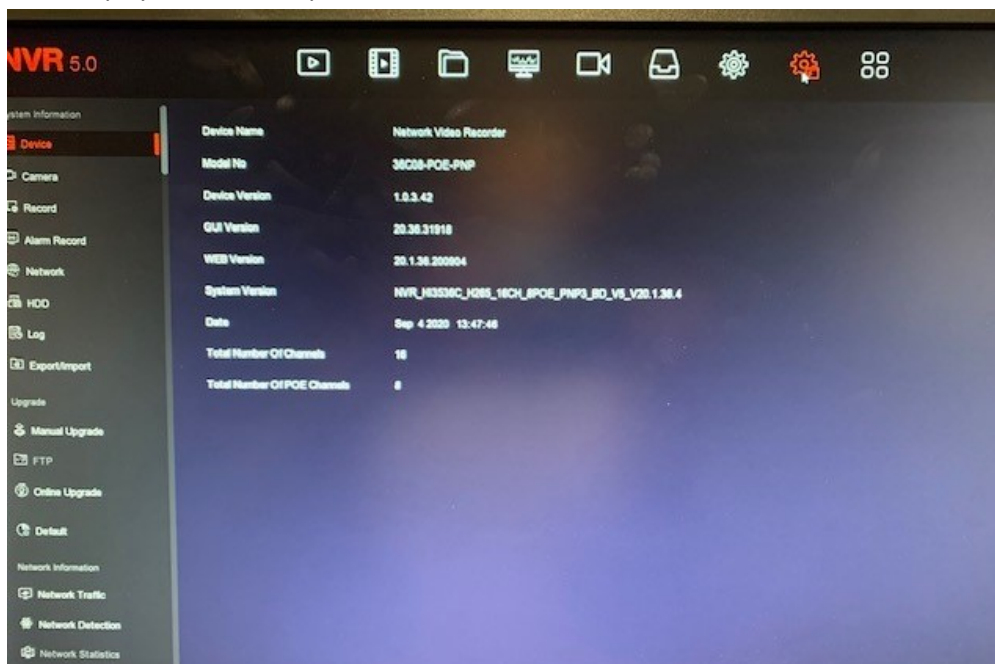

- 2.
3. In the **System Version** you can get the current firmware installed and use this to identify the latest version on the Herospeed website
4. Go to <http://www.herospeed.net/en/>

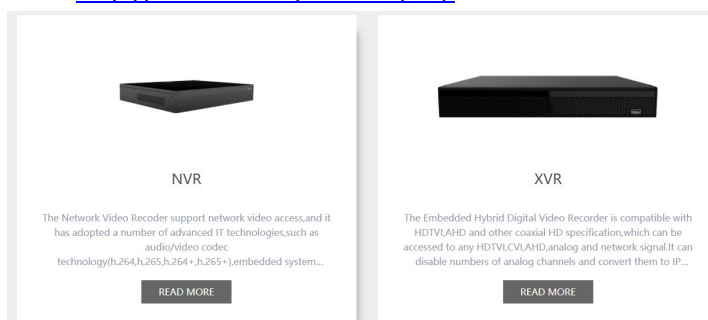


- 5.
6. Select you required device

The screenshot shows the NVR website with a table of firmware updates. The table has four columns: Channels, Version Info, Time, and Download Url. The table lists updates for 9CH, 16CH, and 25CH channels. The 'More>>' button is visible at the bottom left of the table.

Channels	Version Info	Time	Download Url
9CH	NVR_MC6830_9CH_4POE_PNP_BD_V5_update_V21.1.20.2.zip	2021-05-20 08:57:12	<a href="#">Download</a>
	NVR_SS621Q_9CH_4POE_PNP_BD_V5_update_V21.1.2.5	2021-01-22 11:31:31	<a href="#">Download</a>
	NVR_MC6830_9CH_4POE_PNP_BD_V5_update_KITS_V20.1.43.5	2021-01-14 10:17:01	<a href="#">Download</a>
	NVR_SS621Q_9CH_BD_V5_update_V21.1.1.4	2021-01-08 08:31:14	<a href="#">Download</a>
	HI3536E_H265_9CH_BD_V5_update_V20.1.52.1	2021-01-06 10:48:46	<a href="#">Download</a>
	NVR_MC6830_9CH_AL_V5_update_V20.1.47.3	2021-01-06 10:12:45	<a href="#">Download</a>
	NVR_MC6830_9CH_BD_V5_update_V20.1.49.1	2020-12-02 15:29:34	<a href="#">Download</a>
16CH	NVR_MC6830_16CH_BD_V5_update_V21.1.17.4	2021-05-06 15:13:34	<a href="#">Download</a>
	NVR_MC6830_16CH_8POE_PNP_BD_V5_update_V21.1.12.6	2021-03-29 16:43:49	<a href="#">Download</a>
	NVR_SS621Q_16CH_8POE_PNP_BD_V5_update_V21.1.2.4	2021-01-22 13:41:20	<a href="#">Download</a>
	NVR_SS621Q_16CH_BD_V5_update_V21.1.2.1	2021-01-14 10:08:50	<a href="#">Download</a>
	NVR_MC6830_16CH_AL_V5_update_V20.1.47.3	2021-01-06 10:18:25	<a href="#">Download</a>
25CH	NVR_MC6830_25CH_BD_V5_update_V20.1.49.3	2021-01-06 10:28:06	<a href="#">Download</a>

- 7.

8. Select more to expand your search and use the current indentified firmware in step 3 of the guide to locate the latest firmware
9. Click and download the required firmware and copy to usb drive
10. Insert usb drive into the nvr\xvr
11. In the top system menu option select **Maintenance** and then select **Manual Upgrade**

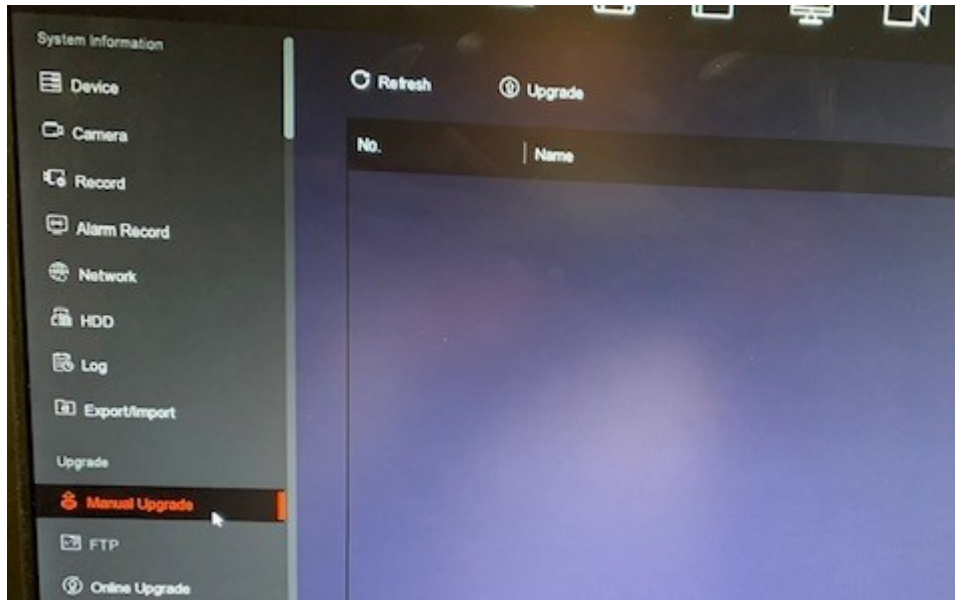

- 12.
13. With usb drive inserted select **Upgrade** and select the firmware file downloaded previously
14. Follow on screen prompts