


## How to enable Regional Intrusion Detection and notifications on a BitVision System


1. Select System option in menu screen




- 2.
3. In the general option select **Smart Event**

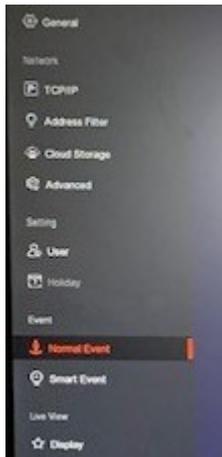

- 4.
5. Now Select Regional Intrusion

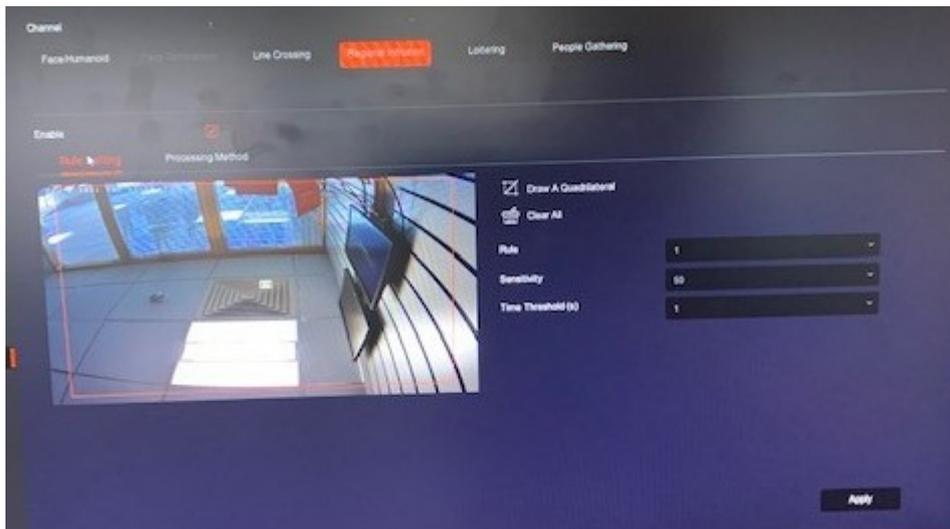


- 6.
7. Tick the Enable option and draw your detection area and **Apply changes**
8. Now select

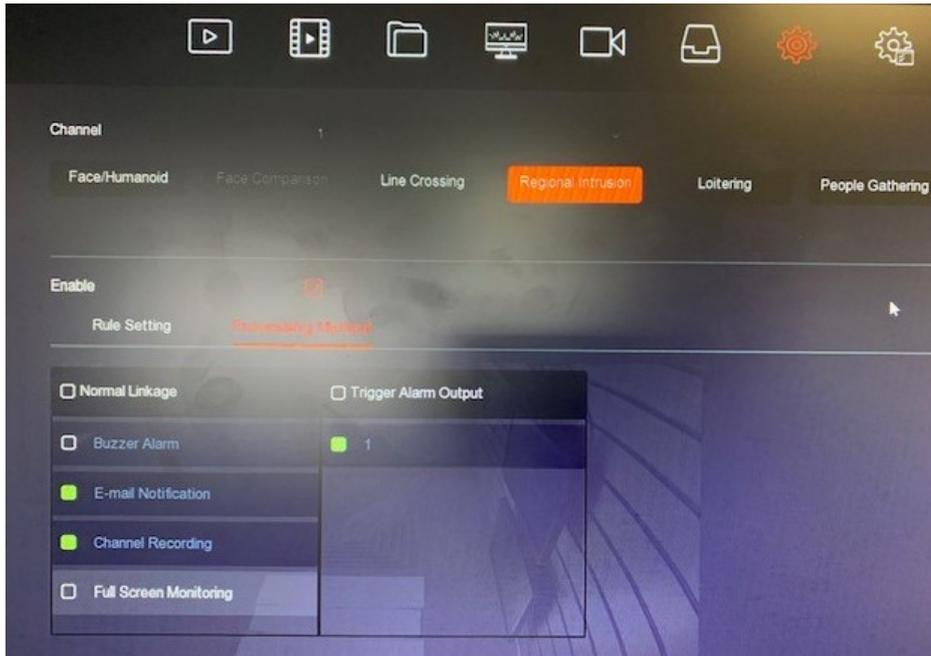

- 9.
10. Enable the required options and **Apply Changes**
  - a. E-mail Notifications – send alerts to the app
  - b. Channel Recording – camera to trigger if alert detected
  - c. Trigger Alarm Output – enabled
11. Once setup you will receive notification alerts in **Event Message** section of **BitVision app**




- 12.
13. If you have issue with notifications not appearing check the following settings on the phone
14. In the Bitvision app select device and then select the three dots on the right hand side of your cctv system

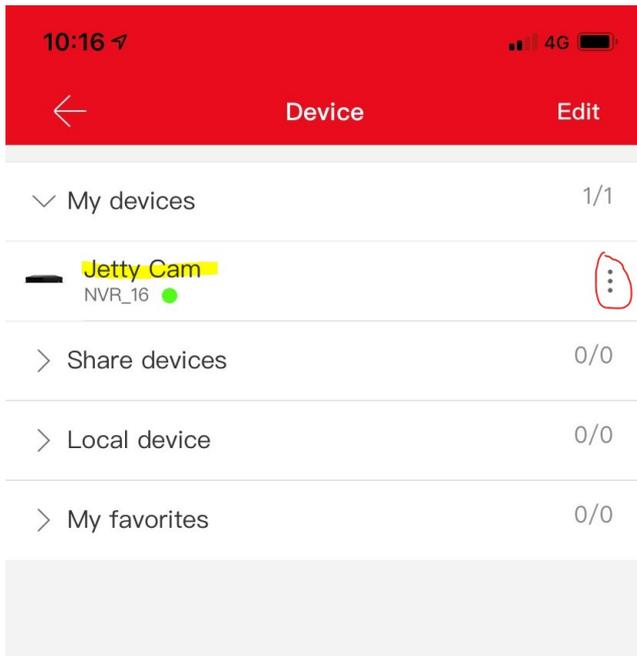

15.

16. Now check the **message interval setting**

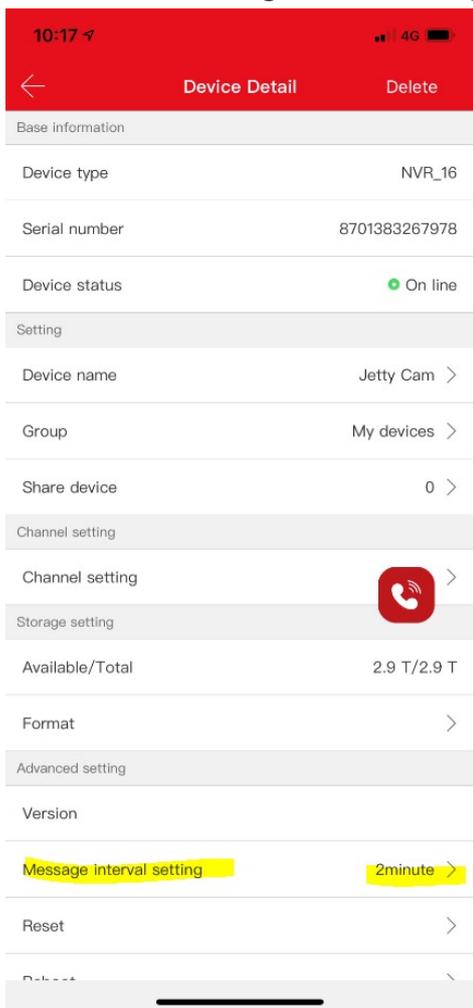

17.