


How to setup Video Recording Schedule on a Hikvision system

1. In the web interface settings, select the required camera and the type of recording schedule

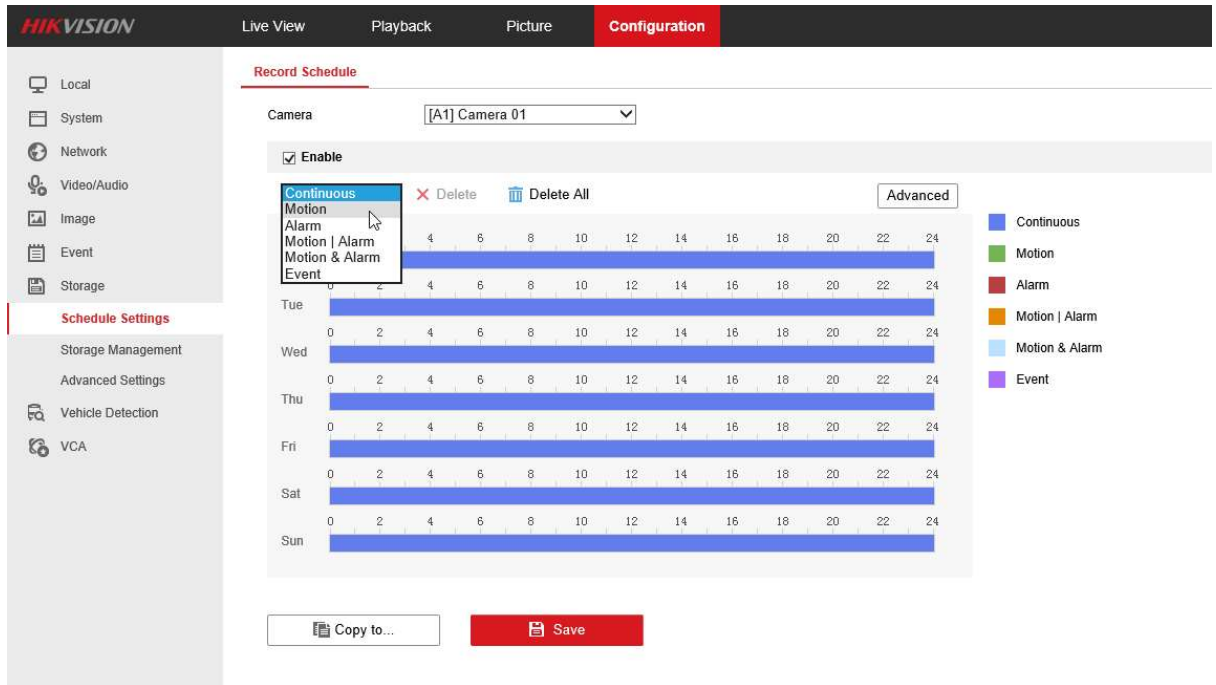


- 2.
3. Below is a guide on how to setup Video Recording Schedule on GUI 4.0 (at the device)

Steps:

1. Enter the Record Schedule interface.

Menu>Record>Schedule

4. 2. Configure Record Schedule

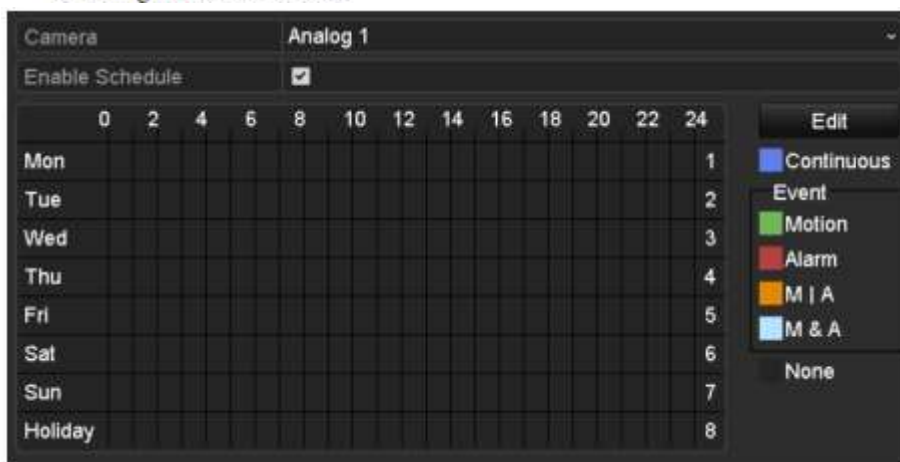

- 5.

- 1) Choose the camera you want to configure.
 - 2) Check ☒ checkbox to enable record schedule.
- There are two ways to configure the record schedule.

Task 1: Edit the Schedule

Steps:

- 1) Click **Edit**
- 2) In the message box, you can choose the day which you want to set schedule.
- 3) To schedule an all-day recording, check ☒ checkbox to enable all-day recording.
- 4) Set the Type in the dropdown list, including Continuous, Motion, Alarm, Motion | Alarm and Motion & Alarm.

Note: To enable Motion, Alarm, Motion | Alarm (motion or alarm) and Motion & Alarm (motion and alarm) triggered recording, you must configure the motion detection settings or alarm input settings as well. For detailed information, refer to *Chapter 8.1* and *Chapter 8.2*.

6.

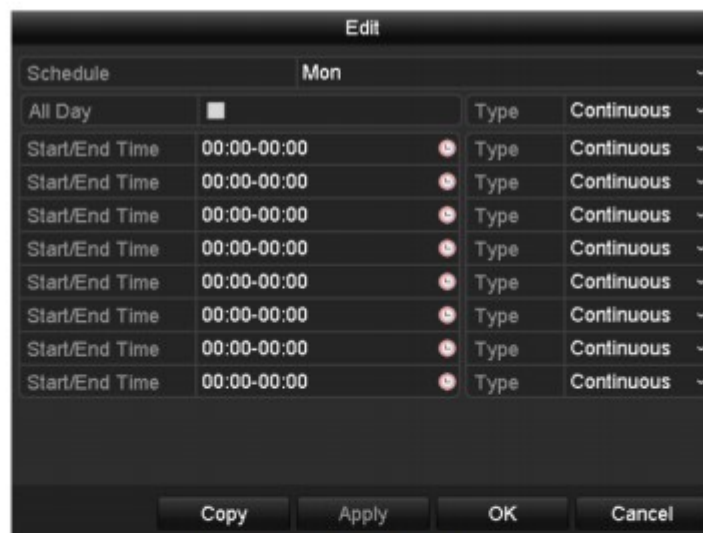


Figure 5. 9 Edit Schedule

- 5) To arrange other schedule, leave the **All Day** checkbox blank and set the Start/End time and Type.

Note: Up to 8 periods can be configured for each day. And the time periods can't be overlapped each other.

Repeat the above steps2)-5) to schedule recording for other days in the week. If the schedule can also be set to other days, click **Copy**

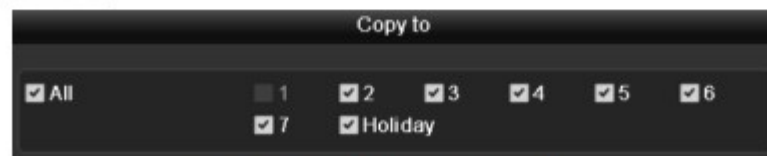


Figure 5. 10 Copy Schedule to Other Days

- 7.
- 8.
9. Below is how to setup Video Recording Schedule on GUI 4.0 (at the device)
10. <https://youtu.be/Wen02lhmqX0>