



HIKVISION

Digital Video Recorder

User Manual

UD.6L0202D1901A01

User Manual©2015 Hangzhou Hikvision Digital Technology Co., Ltd.

This user manual is intended for users of NVR ("Product"). It includes instructions on how to use the Product. The software embodied in the Product is governed by the user license agreement covering that Product.

About this Manual

This Manual is subject to domestic and international copyright protection. Hangzhou Hikvision Digital Technology Co., Ltd. ("Hikvision") reserves all rights to this manual. This manual cannot be reproduced, changed, translated, or distributed, partially or wholly, by any means, without the prior written permission of Hikvision.

Trademarks

HIKVISION

and other Hikvision marks are the property of Hikvision and are registered trademarks or the subject of applications for the same by Hikvision and/or its affiliates. Other trademarks mentioned in this manual are the properties of their respective owners. No right of license is given to use such trademarks without express permission.

Disclaimer

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, REGARDING THIS MANUAL. HIKVISION DOES NOT WARRANT, GUARANTEE, OR MAKE ANY REPRESENTATIONS REGARDING THE USE OF THE MANUAL, OR THE CORRECTNESS, ACCURACY, OR RELIABILITY OF INFORMATION CONTAINED HEREIN. YOUR USE OF THIS MANUAL AND ANY RELIANCE ON THIS MANUAL SHALL BE WHOLLY AT YOUR OWN RISK AND RESPONSIBILITY.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL HIKVISION, ITS DIRECTORS, OFFICERS, EMPLOYEES, OR AGENTS BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, SECURITY BREACHES, OR LOSS OF DATA OR DOCUMENTATION, IN CONNECTION WITH THE USE OF OR RELIANCE ON THIS MANUAL, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY OR CERTAIN DAMAGES, SO SOME OR ALL OF THE ABOVE EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU.

Privacy Notice

Surveillance laws vary by jurisdiction. Check all relevant laws in your jurisdiction before using this product for surveillance purposes to ensure that your use of this product conforms.

Support

Should you have any questions, please do not hesitate to contact your local dealer.

Regulatory information

FCC information

FCC compliance: This equipment has been tested and found to comply with the limits for a digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

EU Conformity Statement



This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the Low Voltage Directive 2006/95/EC, the EMC Directive 2004/108/EC, the RoHS Directive 2011/65/EU.



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info.



2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see: www.recyclethis.info.

Preventive and Cautionary Tips

Before connecting and operating your device, please be advised of the following tips:

- Ensure unit is installed in a well-ventilated, dust-free environment.
- Unit is designed for indoor use only.
- Keep all liquids away from the device.
- Ensure environmental conditions meet factory specifications.
- Ensure unit is properly secured to a rack or shelf. Major shocks or jolts to the unit as a result of dropping it may cause damage to the sensitive electronics within the unit.
- Use the device in conjunction with an UPS if possible.
- Power down the unit before connecting and disconnecting accessories and peripherals.
- A factory recommended HDD should be used for this device.
- Improper use or replacement of the battery may result in hazard of explosion. Replace with the same or equivalent type only. Dispose of used batteries according to the instructions provided by the battery manufacturer.



CHANGE THE DEFAULT PASSWORD

*The default password (12345) for the Admin account is for first-time log-in purposes only. You **must** change this default password to better protect against security risks, such as the unauthorized access by others to the product that may prevent the product from functioning properly and/or lead to other undesirable consequences.*

For your privacy, we strongly recommend changing the password to something of your own choosing (using a minimum of 8 characters, including upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product.

Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.

Thank you for purchasing our product. If there is any question or request, please do not hesitate to contact dealer.

This manual is applicable to following embedded network DVR series.

Series	Model	Type
7600HI-ST Series	DS-7604/08/16HI-ST	Network HDVR

This manual may contain several technically incorrect places or printing errors, and the content is subject to change without notice. The updates will be added into the new version of this manual. We will readily improve or update the products or procedures described in the manual.

In order to simplify the description, we make the following conventions (unless otherwise stated):

We define DS-7600HI-ST series as **HDVR** (Hybrid DVR) in this manual.

The figures shown in this manual are for reference only. The appearance and interface of the device are subject to the actual model.

Product Key Features

General

- Connectable to the network cameras, network dome and encoders.
- Connectable to the third-party network cameras like ACTI, Arecont, AXIS, Brickcom, Bosch, Canon, PANASONIC, Pelco, SAMSUNG and SANYO, SONY, Vivotek and ZAVIO.
- Connectable to the third-party cameras that adopt ONVIF or PSIA protocol.
- PAL/NTSC adaptive video inputs.
- H.264 video compression with high reliability and superior definition.
- Each channel supports dual-stream.
- Up to 32 network cameras can be added.
- Independent configuration for each channel, including resolution, frame rate, bitrate, image quality, etc.
- The quality of the input and output video is configurable.
- Each channel supports two kinds of compression parameters, the normal continuous and event. Sub-stream can be configured locally.
- Encoding for both audio/video composite stream and video stream; audio and video synchronization during composite stream encoding.
- Support CABAC (this feature is supported by analog cameras only).
- Watermark technology.

Local Monitoring

- Simultaneous HDMI, VGA and CVBS outputs.
- HDMI output and VGA output at up to 1920×1080P resolution.
- 1/4/6/8/9/16-division live view is supported, and the display sequence of screens is adjustable.
- Live view screen can be switched in group, and manual switch and auto-switch review is also provided, the interval of auto-switch can be adjusted.
- Quick setting menu is provided for live view.
- The selected live view channel can be shielded.
- Motion detection, video tampering, video exception alarm and video loss alarm functions.
- Privacy mask.
- Several PTZ protocols supported; PTZ preset, patrol and pattern.
- Zooming in by clicking the mouse and PTZ tracing by dragging mouse.

HDD Management

- Up to 2 SATA hard disks can be connected, each disk with a maximum of 4TB storage capacity.
- 8 network disks (8 NAS disks, or 7 NAS disks+1 IP SAN disk) can be connected.
- HDD group management.
- HDD property: redundancy, read-only, read/write (R/W).
- HDD quota management; different capacity can be assigned to different channel.
- Support S.M.A.R.T. and bad sector detection.

Recording and Playback

- Provide new playback interface with easy and flexible operation.
- Holiday recording schedule configuration.
- Normal and event video encoding parameters.

- Multiple recording types: manual, normal, alarm, motion, motion | alarm, motion & alarm.
- 8 recording time periods with separated recording types.
- Pre-record and post-record for alarm, motion detection recording, and pre-record time for schedule and manual recording.
- Searching record files by events (alarm input/motion detection).
- Customization of tags, searching and playing back by tags.
- Locking and unlocking record files.
- Local redundant recording.
- Searching and playing back record files by camera No., recording type, start time, end time, etc.
- Smart search for the selected area in the video.
- Zooming in when playback.
- Reverse playback for multi-channel.
- Supports pause, fast forward, slow forward, skip forward, and skip backward when playback, locating by dragging the mouse.
- Up to 16-ch synchronous playback at WD1 real time.

Backup

- Export video data by USB, or SATA device.
- Export video clips when playback.
- Management and maintenance of backup devices.
- Support NTFS and FAT32 formatted backup devices.

Alarm and Exception

- Configurable arming time of alarm input/output.
- Alarm for video loss, motion detection, tampering, abnormal signal, video input/output standard mismatch, illegal login, network disconnected, IP confliction, abnormal record, HDD error, and HDD full, etc.
- Alarm triggers full screen monitoring, audio alarm, notifying surveillance center, sending email and alarm output.
- Automatic restore when system is abnormal.

Other Local Functions

- Users can operate by mouse and IR remote control.
- Three-level user management; admin user is allowed to create many operating accounts and define their operating permission, which includes the limit to access any camera.
- Operation, alarm, exceptions and log recording and searching.
- Manually triggering and clearing alarms.
- Importing and exporting of device configuration file.

Network Functions

- 1 self-adaptive 10M/100M/1000M (10M/100M for DS-7604HI-ST) network interface.
- IPv6 is supported.
- TCP/IP protocol, PPPoE, DHCP, DNS, DDNS, NTP, SADP, SMTP, SNMP, NFS, and iSCSI are supported.
- TCP, UDP and RTP for unicast.
- Auto/Manual port mapping and automatically discovered by UPnP™.
- Remote web browser access by HTTPS ensures high security.
- Remote reverse playback by RTSP.

- Support accessing by the platform by ONVIF.
- Remote search, playback, download, locking and unlocking the record files, and downloading files broken transfer resume.
- Remote parameters setup; remote import/export of device parameters.
- Remote viewing of the device status, system logs and alarm status.
- Remote locking and unlocking of control panel and mouse.
- Remote HDD formatting and program upgrading.
- Remote system restart.
- RS-485 transparent channel transmission.
- Alarm and exception information can be sent to the remote host
- Remotely start/stop recording.
- Remotely start/stop alarm output.
- Upgraded by remote FTP server is supported.
- Remote PTZ control.
- Remote JPEG capture.
- Two-way voice talk and voice broadcasting.
- Embedded WEB server.

Development Scalability:

- SDK for Windows and Linux system.
- Source code of application software for demo.
- Development support and training for application system.

TABLE OF CONTENTS

Product Key Features	v
Chapter 1 Introduction	1
1.1 Front Panel	2
1.2 IR Remote Control Operations	3
1.3 USB Mouse Operation	6
1.4 Input Method Description	7
1.5 Rear Panel	8
1.6 Starting Up and Shutting Down the Device	9
Chapter 2 Getting Started	10
2.1 Using the Wizard for Basic Configuration	11
2.2 Adding and Connecting the IP Cameras	15
2.2.1 Adding the Online IP Cameras	15
2.2.2 Configuring the Connected IP Cameras	18
Chapter 3 Live View	22
3.1 Introduction of Live View	23
3.2 Operations in Live View Mode	24
3.2.1 Using the Mouse in Live View	24
3.2.2 Using an Auxiliary Monitor	25
3.2.3 Quick Setting Toolbar in Live View Mode	26
3.3 Adjusting Live View Settings	28
3.4 User Logout	30
Chapter 4 PTZ Controls	31
4.1 Configuring PTZ Settings	32
4.2 Setting PTZ Presets, Patrols & Patterns	34
4.2.1 Customizing Presets	34
4.2.2 Calling Presets	34
4.2.3 Customizing Patrols	35
4.2.4 Calling Patrols	36
4.2.5 Customizing Patterns	37
4.2.6 Calling Patterns	37
4.2.7 Customizing Linear Scan Limit	38
4.2.8 Calling Linear Scan	39
4.2.9 One-touch Park	39
4.3 PTZ Control Panel	41
Chapter 5 Recording Settings	42
5.1 Configuring Parameters	43
5.2 Configuring Recording Schedule	46
5.3 Configuring Motion Detection Recording	49
5.4 Configuring Alarm Triggered Recording	51
5.5 Configuring VCA Triggered Recording	54
5.6 Configuring Manual Recording	55
5.7 Configuring Holiday Recording	56

5.8	Configuring Redundant Recording	57
5.9	Configuring HDD Group for Recording	59
5.10	Files Protection.....	60
Chapter 6	Playback.....	63
6.1	Playing Back Record Files	64
6.1.1	Playing Back by Channel	64
6.1.2	Playing Back by Time	66
6.1.3	Playing Back by Event Search	68
6.1.4	Playing Back by Tag.....	70
6.1.5	Smart Playback.....	73
6.1.6	Playing Back by Searching System Log	76
6.1.7	Playing Back External Files	77
6.2	Auxiliary Functions of Playback.....	79
6.2.1	Playing Back Frame by Frame	79
6.2.2	Digital Zoom	79
6.2.3	Reverse Playback of Multi-channel	79
Chapter 7	Backup.....	81
7.1	Backing up Record Files	82
7.1.1	Quick Export	82
7.1.2	Backing up by Normal Video Search	84
7.1.3	Backing up by Event Search	87
7.1.4	Backing up Video Clips.....	89
7.2	Managing Backup Devices.....	92
Chapter 8	Alarm Settings	96
8.1	Setting Motion Detection	97
8.2	Setting Sensor Alarms	100
8.3	Detecting Video Loss	103
8.4	Detecting Video Tampering.....	105
8.5	Detecting VCA Alarm	107
8.6	Handling Exceptions	109
8.7	Setting Alarm Response Actions	110
8.8	Triggering or Clearing Alarm Output Manually.....	113
Chapter 9	Network Settings	114
9.1	Configuring General Settings.....	115
9.2	Configuring Advanced Settings	116
9.2.1	Configuring PPPoE Settings	116
9.2.2	Configuring DDNS Settings.....	116
9.2.3	Configuring NTP Server Settings.....	120
9.2.4	Configuring SNMP Settings.....	121
9.2.5	Configuring Remote Alarm Host Settings.....	122
9.2.6	Configuring Multicast Settings	123
9.2.7	Configuring RTSP Settings	123
9.2.8	Configuring Server and HTTP Ports	123
9.2.9	Configuring Email Settings	124

9.2.10	Configuring NAT	126
9.3	Checking Network Traffic	129
9.4	Network Detection	130
9.4.1	Testing Network Delay and Packet Loss	130
9.4.2	Exporting Network Packet	130
9.4.3	Checking Network Status	132
9.4.4	Checking Network Statistics	132
Chapter 10	HDD Management	134
10.1	Initializing HDDs	135
10.2	Managing Network HDD	137
10.3	Managing HDD Group	140
10.3.1	Setting HDD Groups	140
10.3.2	Setting HDD Property	141
10.4	Configuring Quota Mode	143
10.5	Checking HDD Status	145
10.6	Checking S.M.A.R.T. Information	147
10.7	Detecting Bad Sector	148
10.8	Configuring HDD Error Alarms	149
Chapter 11	Camera Settings	150
11.1	Configuring OSD Settings	151
11.2	Configuring Privacy Mask	152
11.3	Configuring Video Parameters	153
Chapter 12	Device Management and Maintenance.....	155
12.1	Viewing System Information	156
12.1.1	Viewing Device Information	156
12.1.2	Viewing Camera Information	156
12.1.3	Viewing Record Information	156
12.1.4	Viewing Alarm Information	157
12.1.5	Viewing Network Information	157
12.1.6	Viewing HDD Information	158
12.2	Searching & Exporting Log Files	159
12.3	Importing/Exporting Configuration Files	163
12.4	Upgrading System	164
12.4.1	Upgrading by Local Backup Device	164
12.4.2	Upgrading by FTP	164
12.5	Restoring Default Settings	166
Chapter 13	Others	167
13.1	Configuring General Settings	168
13.2	Configuring DST Settings	169
13.3	Configuring More Settings	170
13.4	Managing User Accounts	171
13.4.1	Adding a User	171
13.4.2	Deleting a User	174
13.4.3	Editing a User	174

13.4.4	Changing Password of Admin.....	175
13.5	Logging out/Shutting down/Rebooting Device.....	177
Appendix	178	
	Glossary	179
	Troubleshooting	180
	List of IP Cameras Compatible	184
	List of Hikvision IP Cameras Compatible	184
	List of Third-party IP Cameras Compatible.....	187

Chapter 1 Introduction

1.1 Front Panel

The front panel of the device is shown in Figure 1.1.

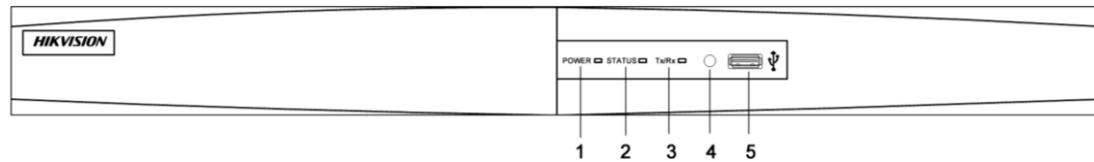


Figure 1. 1 Front Panel

Table 1. 1 Description of Front Panel

No.	Name	Function Description
1	POWER	POWER indicator turns green when device is powered up.
2	STATUS	STATUS indicator lights in red when data is being read from or written to HDD.
3	Tx/Rx	Tx/Rx indicator blinks green when network connection is functioning properly.
4	IR Receiver	Receiver for IR remote.
5	USB Interface	Connects USB mouse or USB flash memory devices.

1.2 IR Remote Control Operations

The device may also be controlled with the included IR remote control, shown in Figure 1.2.



Batteries (2×AAA) must be installed before operation.

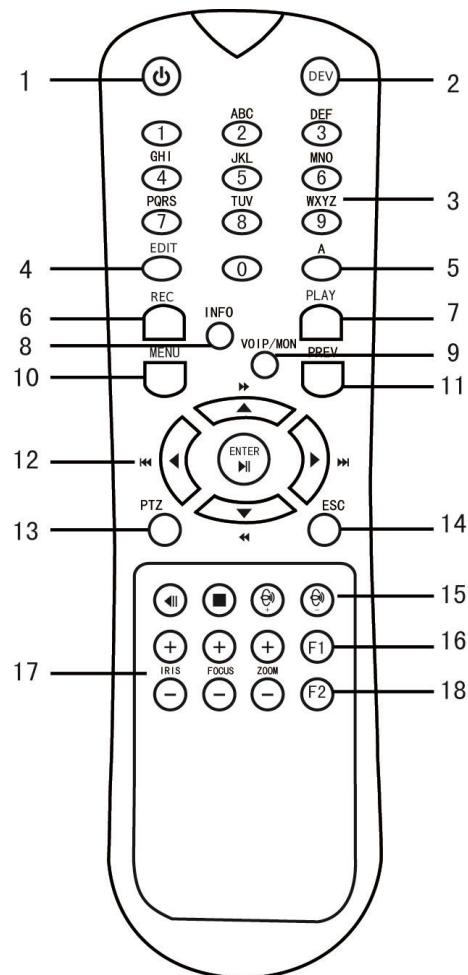


Figure 1. 2 Remote Control

The keys on the remote control closely resemble the ones on the front panel. See Table 1.2.

Table 1. 2 Description of the IR Remote Control Buttons

No.	Name	Description
1	POWER	Power on/off the device.
2	DEV	Enables/Disables Remote Control.
3	Alphanumeric Buttons:	Switch to the corresponding channel in Live view or PTZ Control mode.
		Input numbers and characters in Edit mode.
		Switch channels in Playback mode.
4	EDIT Button	Edit text fields. When editing text fields, it will also function as a Backspace button to delete the character in front of the cursor.

		On checkbox fields, pressing the button will tick the checkbox.
		In PTZ Control mode, the button adjusts the iris of the camera.
		In Playback mode, it can be used to generate video clips for backup.
		Enter/exit the folder of USB device.
5	A Button	Adjust focus in the PTZ Control menu.
		It is also used to switch input methods (upper and lowercase alphabet, symbols and numeric input).
6	REC Button	Enter the Manual Record setting menu.
		In PTZ control settings, press the button and then you can call a PTZ preset by pressing Numeric button.
		It is also used to turn audio on/off in the Playback mode.
7	PLAY Button	The button is used to enter the Playback mode.
		It is also used to auto scan in the PTZ Control menu.
8	INFO Button	Reserved for future usage.
9	VOIP/MON Button	Switch main and spot output.
		In PTZ Control mode, it can be used to zoom out the image.
10	MENU Button	Press the button will help you return to the Main menu (after successful login).
		Press and hold the button for 5 seconds will turn off audible key beep.
		In PTZ Control mode, the MENU/WIPER button will start wiper (if applicable).
		In Playback mode, it is used to show/hide the control toolbar.
11	PREV Button	Switch single screen and multi-screen mode.
		In PTZ Control mode, it is used to adjust the focus in conjunction with the A/FOCUS+ button.
12	DIRECTION/ENTER Buttons	The DIRECTION buttons are used to navigate between different fields and items in menus.
		In the Playback mode, the Up and Down button is used to speed up and slow down recorded video. The Left and Right button will select the next and previous record files.
		In Live View mode, these buttons can be used to cycle through channels.
		In PTZ control mode, it can control the movement of the PTZ camera.
		The ENTER button is used to confirm selection in any of the menu modes.
		It can also be used to <i>tick</i> checkbox fields.
		In Playback mode, it can be used to play or pause the video.
		In single-frame Playback mode, pressing the button will advance the video by a single frame.
		In Auto-switch mode, it can be used to stop /start auto switch.
13	PTZ Button	Enter the PTZ Control mode.
		In the PTZ Control mode, it is used to adjust the iris of the PTZ camera.
14	ESC Button	Back to the previous menu.
		Press for arming/disarming the device in Live View mode.
15	RESERVED	Reserved for future usage.
16	F1 Button	Select all items on the list when used in a list field.
		In PTZ Control mode, it will turn on/off PTZ light (if applicable).
		In Playback mode, it is used to switch play and reverse play.
17	PTZ Control Buttons	Buttons to adjust the iris, focus and zoom of a PTZ camera.

18	F2 Button	Cycle through tab pages.
		In synchronous playback mode, it is used to switch channels.

Troubleshooting Remote Control:

Make sure you have installed batteries properly in the remote control. And you have to aim the remote control at the IR receiver in the front panel.

If there is no response after you press any button on the remote, follow the procedure below to troubleshoot.

Steps:

1. Go to Menu > Settings > General > More Settings by operating the front control panel or the mouse.
2. Check and remember device No.. The default device No. is 255. This No. is valid for all the IR remote controls.
3. Press the DEV button on the remote control.
4. Enter the device No. in step 2.
5. Press the ENTER button on the remote.

If the Status indicator on the front panel turns blue, the remote control is operating properly. If the Status indicator does not turn blue and there is still no response from the remote, please check the following:



When the device No. is 255, the Status indicator is off when device is controlled by an IR remote control.

1. Batteries are installed correctly and the polarities of the batteries are not reversed.
2. Batteries are fresh and not out of charge.
3. IR receiver is not obstructed.

If the remote still can't function properly, please change a remote and try again, or contact the device provider.

1.3 USB Mouse Operation

A regular 3-button (Left/Right/Scroll-wheel) USB mouse can also be used with this device. To use a USB mouse:

1. Plug USB mouse into one of the USB interfaces on the front panel of the device.
2. The mouse should automatically be detected. If in a rare case that the mouse is not detected, the possible reason may be that the two devices are not compatible, please refer to the recommended device list from your provider.

The operation of the mouse:

Table 1. 3 Description of the Mouse Control

Name	Action	Description
Left-Click	Single-Click	Live view: Select channel and show the quick set menu. Menu: Select and enter.
	Double-Click	Live view: Switch single-screen and multi-screen.
	Click and Drag	PTZ control: pan, tilt and zoom. Tamper-proof, privacy mask and motion detection: Select target area. Digital zoom-in: Drag and select target area. Live view: Drag channel/time bar.
Right-Click	Single-Click	Live view: Show menu. Menu: Exit current menu to upper level menu.
Scroll-Wheel	Scrolling up	Live view: Previous screen. Right-click Menu: Previous item.
	Scrolling down	Live view: Next screen. Right-click Menu: Next item.










1.4 Input Method Description



Figure 1.3 Soft Keyboard

Description of the buttons on the soft keyboard:

Table 1.4 Description of the Soft Keyboard Icons

Icons	Description	Icons	Description
	English		Capital English
	Numbers		Symbols
	Lowercase/Uppercase		Backspace
	Space		Enter
	Exit		

1.5 Rear Panel

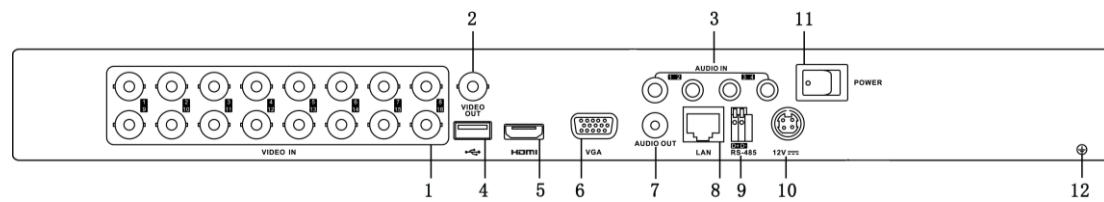


Figure 1. 4 Rear Panel

Table 1. 5 Description of Rear Panel

No.	Item	Description
1	VIDEO IN	BNC connector for analog video input.
2	VIDEO OUT	BNC connector for video output.
3	AUDIO IN	RCA connector for audio input.
4	USB Interface	Connects USB mouse or USB flash memory devices.
5	HDMI	HDMI video output.
6	VGA	DB15 connector for VGA output. Display local video output and menu.
7	AUDIO OUT	RCA connector for audio output.
8	LAN Interface	Network interface.
9	RS-485 Interface	Connector for RS-485 devices. Connect the D+ and D- terminals to R+ and R- of PTZ receiver respectively.
10	12V	12 VDC power supply.
11	POWER	Switch for turning on/off the device.
12	GND	Ground (needs to be connected when device starts up).

1.6 Starting Up and Shutting Down the Device

Purpose:

Proper startup and shutdown procedures are crucial to expanding the life of the device.

Before you start:

Check that the voltage of the extra power supply is the same with the device's requirement, and the ground connection is working properly.

Starting up the device:

Steps:

1. Check the power supply is plugged into an electrical outlet. It is **HIGHLY** recommended that an Uninterruptible Power Supply (UPS) be used in conjunction with the device.
2. Press the POWER button on the rear panel. The Power indicator LED should turn green indicating that the device begins to start up.

Shutting down the device:

Steps:

1. Enter the Shutdown menu.

Menu > Shutdown

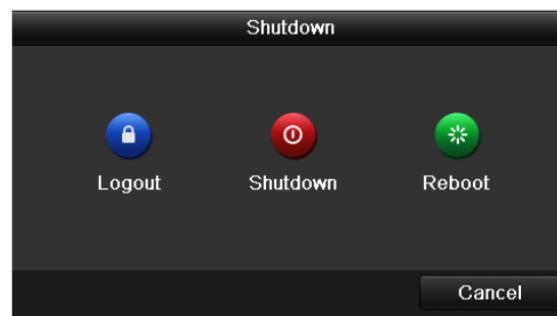


Figure 1. 5 Shutdown Menu

2. Click the **Shutdown** button.
3. Click the **Yes** button.
4. Press the POWER button on the rear panel when the hint "Please power off" pops up to shut down the device properly.

Rebooting the device

In the Shutdown menu (Figure 1.5), you can also reboot the device.

Steps:

1. Enter the **Shutdown** menu by clicking Menu > Shutdown.
2. Click the **Logout** button to logout the device or the **Reboot** button to reboot the device.

Chapter 2 Getting Started

2.1 Using the Wizard for Basic Configuration

By default, the Setup Wizard starts once the device has loaded, as shown in Figure 2.1.

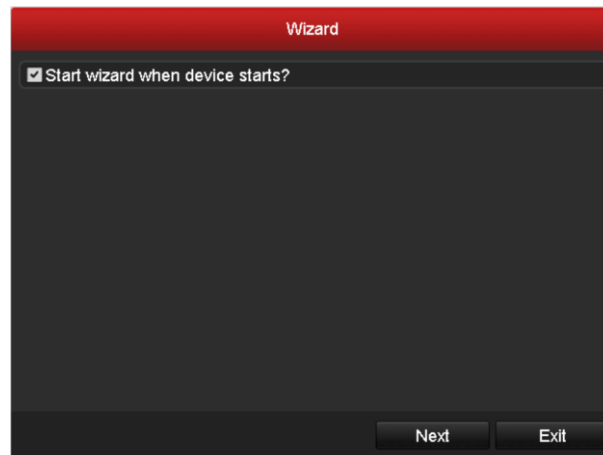


Figure 2. 1 Start Wizard Interface

Operating the Setup Wizard:

1. The Start Wizard can walk you through some important settings of the device. If you don't want to use the Start Wizard at that moment, click **Exit**. You can also choose to use the Start Wizard next time by leaving the "Start wizard when device starts?" checkbox checked.
2. Click **Next** on the Wizard window to enter the **Login** window, as shown in Figure 2.2.



Figure 2. 2 Login Window

3. Enter the admin password. By default, the password is 12345.



The default password (12345) for the Admin account is for first-time log-in purposes only. You must change this default password to better protect against security risks, such as the unauthorized access by others to the product that may prevent the product from functioning properly and/or lead to other undesirable consequences.

4. To change the admin password, check the **New Admin Password** checkbox. Enter the new password and confirm the password in the given fields.
5. Click **Next** to enter the date and time settings window, as shown in Figure 2.3.



Figure 2.3 Date and Time Settings

6. After the time settings, click **Next** which takes you to the Network Start Wizard window, as shown in Figure 2.4.



DS-7604HI-ST only supports 10M/100Mbps NIC type.



Figure 2.4 Network Configuration

7. Click **Next** to enter the **HDD Management** window.

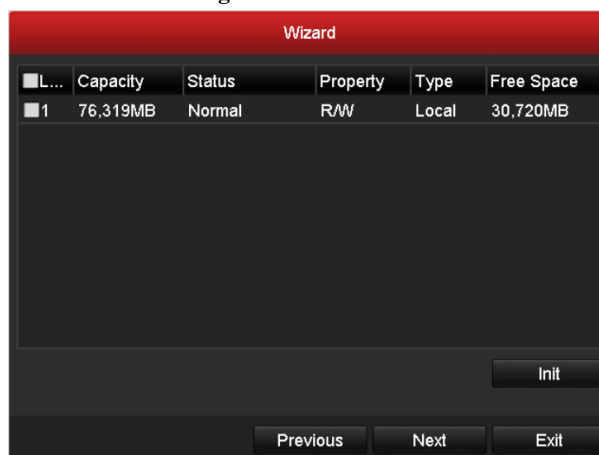


Figure 2.5 HDD Management

8. To initialize the HDD, select the HDD and click **Init**. Initialization removes all the data saved in the HDD.
9. Click **Next** to enter the **IP Camera Management** window, as shown in Figure 2.6.



Figure 2. 6 IP Camera Management

10. Click **Search** to search IP Camera. Click **Add** to add IP Camera.
11. After finishing IP Camera settings, click **Next** to enter the **Record Settings** window.

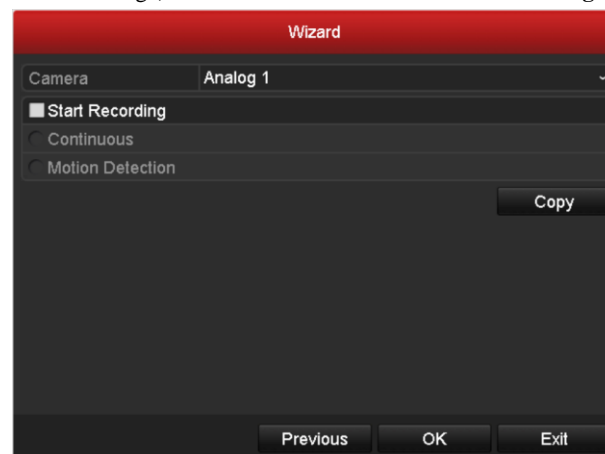



Figure 2. 7 Record Settings

12. Click **Copy** to copy the settings to other channels, as shown in Figure 2.8.



Figure 2. 8 Copy Record Settings

13. Click  to complete the start wizard settings.

2.2 Adding and Connecting the IP Cameras

2.2.1 Adding the Online IP Cameras

Purpose:

HDVR can connect the network cameras and record the video got from them. So before you can get a live view or record of the video, you should add the network cameras to the connection list of the device.

Before you start:

Ensure the network connection is valid and correct. For detailed network configuration and checking, please see *9.1 Configuring General Settings*, *9.3 Checking Network Traffic* and *9.4 Network Detection*.

Option 1:

Steps:

1. Right-click the mouse in the live view mode to show the right-click menu.
2. Select **Add IP Camera**.

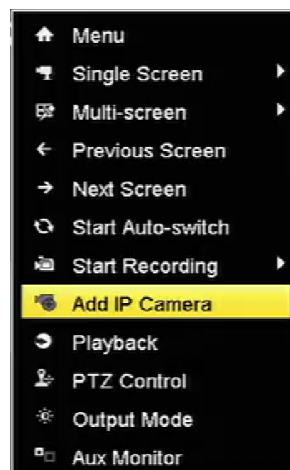


Figure 2. 9 Right-click Menu of Adding IP Camera







3. To add the online cameras with same network segment:
 - 1) The detected online camera will be listed in the camera list, as shown in the figure below.



Figure 2.10 Manual Adding IP Camera Interface

- 2) Click the  button to add the camera.

Table 2.1 Explanation of the icons:

Icon	Explanation	Icon	Explanation
	Edit basic parameters of the camera		Add the detected IP camera.
	Delete the IP camera		The camera is disconnected; you can click the icon to get the exception information of camera.
	The camera is connected.		Advanced settings of the camera.

4. To add other IP cameras:

- 1) Click the **Custom Adding** button to pop up the Add IP Camera (Custom) interface.

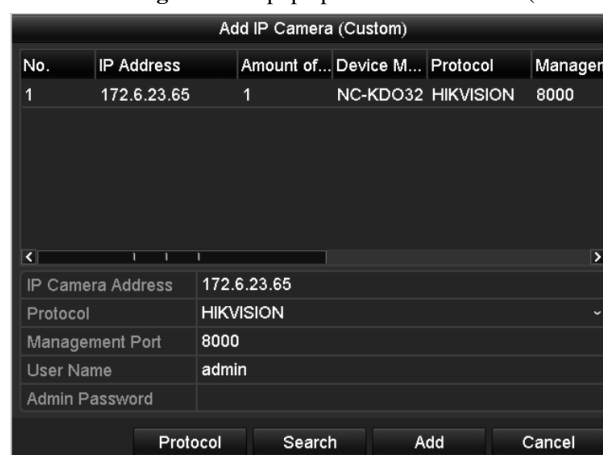


Figure 2.11 Custom Adding IP Camera Interface

- 2) You can edit the IP address, protocol, management port, and other information of the IP camera to be added.
- 3) Click **Add** to add the camera.

Option 2:**Steps:**

1. Enter the Camera Management interface.

Menu> Camera> Camera

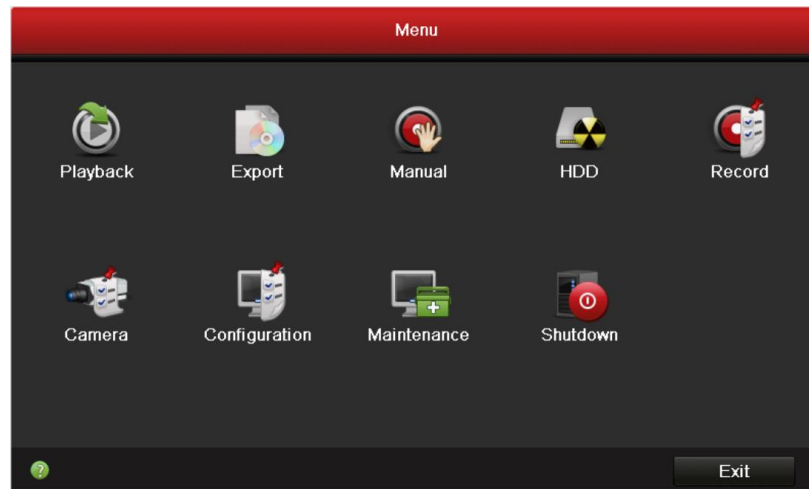


Figure 2.12 Main Menu



In Analog Camera Management interface, the status of analog cameras display. Disabling the analog camera can be realized by clearing the checkbox before the analog camera No.. One more network camera can be added by disabling one analog camera. 16 /8 /4 network cameras can be added to 7616HI-ST/7608HI-ST/7604HI-ST series at most when all the analog cameras are enabled. 32 /16 /8 network cameras can be added to 7616HI-ST /7608HI-ST /7604HI-ST series at most when all the analog cameras are disabled.

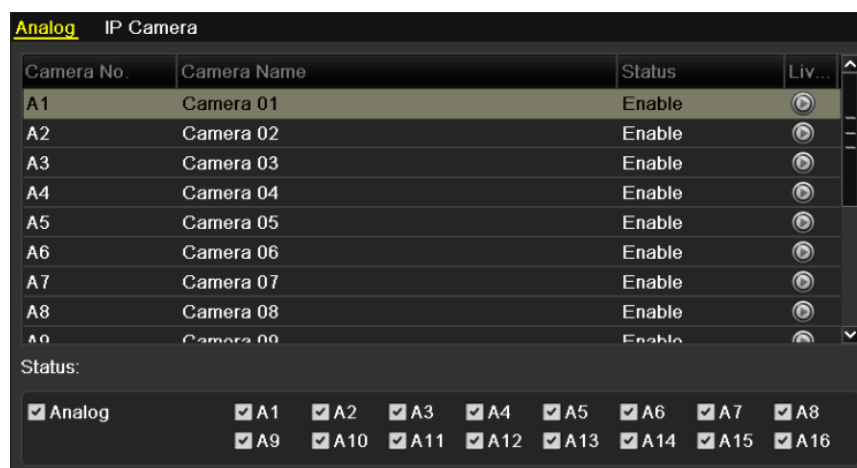



Figure 2.13 Analog Camera Management

2. Choose **IP Camera** tab and perform step 1 and 2 of adding IP cameras (Option 1) to add the camera.



The  icon indicates the camera is connected and you can click the icon to get the live view of the camera.

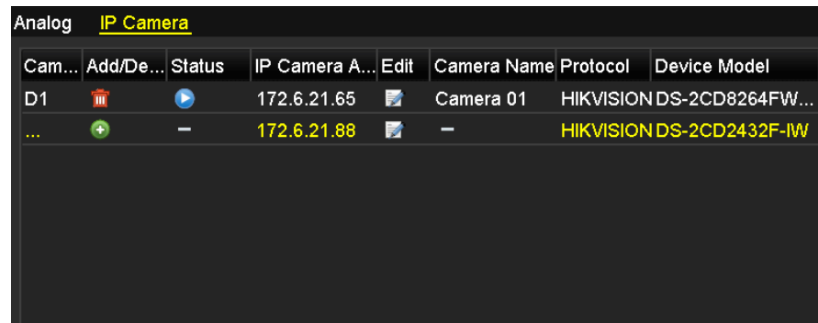


Figure 2. 14 IP Camera Management

- For the encoders with multiple channels, check ☒ checkbox in the pop-up window to select the channels and click **OK** to finish adding.

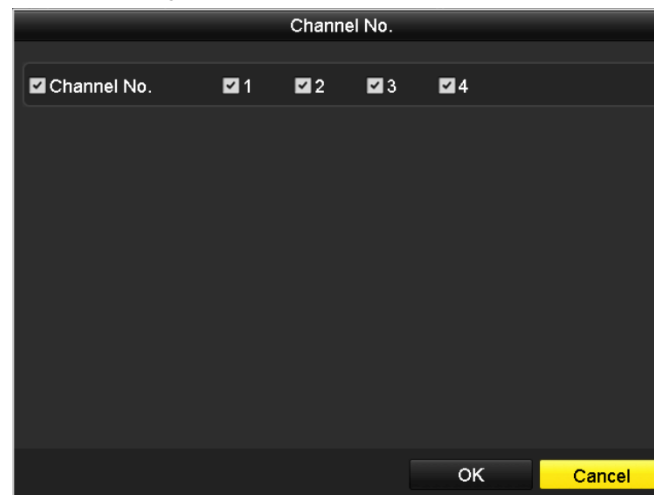


Figure 2. 15 Selecting Multiple Channels


2.2.2 Configuring the Connected IP Cameras

Editing the Connected IP Cameras

Purpose:

After the adding of the IP cameras, the basic information of the camera lists in the page, and you can configure the basic settings of the IP cameras.

Steps:

- Click  to edit the parameters; you can edit the IP address, protocol and other parameters.

Edit IP Camera	
IP Camera No.	D1
IP Camera Address	172.6.23.124
Protocol	HIKVISION
Manage Port	8000
Channel No.	1
User Name	admin
Admin Password	

OK Cancel

Figure 2. 16 Edit IP Camera

- Click **OK** to save the settings and exit the editing interface.

To edit more parameters:

- Drag the horizontal scroll bar to the right side and click the icon.

Advance Set	
Network	Password
IP Camera No.	D5
IP Camera Address	172.6.21.117
Manage Port	8000

Apply OK Cancel

Figure 2. 17 Advance Set-Network

- You can edit the network information and the password of the camera.

Advance Set	
Network	Password
IP Camera No.	D5
Current Password	
New Password	
Confirm	

Apply OK Cancel

Figure 2. 18 Advance Set-Password

- Click **Apply** to save the settings and click **OK** to exit the interface.

Explanation of the buttons:

Refresh	Delete	Add All
Get the latest status of the IP cameras.	Delete the IP camera.	Add all the detected IP cameras.

Configuring the customized protocols

Purpose:

To connect the network cameras which are not configured with the standard protocols, you can configure the customized protocols for them.

Steps:

1. Click **Custom Addi...** and then click **Protocol** to enter the protocol management interface.

The screenshot shows the 'Protocol Management' window. At the top, it says 'Custom Protocol' and 'Custom Protocol 1'. Below this, there are several fields: 'Protocol Name' (ipc), 'Stream Type' (Main Stream), 'Enable Substream' (checkbox checked), 'Type' (RTSP), 'Transfer Protocol' (Auto), 'Port' (554), and 'Path'. There are also dropdown menus for 'Substream' (RTSP) and 'Transfer Protocol' (Auto). At the bottom, there is an example URL: 'Example: [Type]://[IP Address]:[Port]/[Path] rtsp://192.168.0.1:554/ch1/main/av_stream'. At the very bottom, there are three buttons: 'Apply', 'OK', and 'Cancel'.

Figure 2. 19 Protocol Management Interface

2. There are 16 customized protocols provided in the system. You can select a **Custom Protocol** and configure its corresponding parameters.



Before customizing the protocol for the network camera, you have to contact the manufacturer of the network camera to consult about the URL (uniform resource locator) for getting main stream and sub-stream.

The format of the URL is: [Type]://[IP Address of the network camera]:[Port]/[Path].

Example: rtsp://192.168.1.55:554/ch1/main/av_stream.

- **Protocol Name:** Edit the name for the custom protocol.
- **Enable Substream:** If the network camera does not support sub-stream or the sub-stream is not needed, leave the checkbox empty.
- **Type:** The network camera adopting custom protocol must support getting stream through standard RTSP.
- **Transfer Protocol:** Select the transfer protocol for the custom protocol.
- **Port:** Set the port No. for the custom protocol.
- **Path:** Set the resource path for the custom protocol. E.g., ch1/main/av_stream.

3. Click **Apply** to save the settings and click **OK** to finish customizing the protocol.

4. After successfully adding the custom protocols, you can see the protocol name listed in the dropdown list, see the figure below.

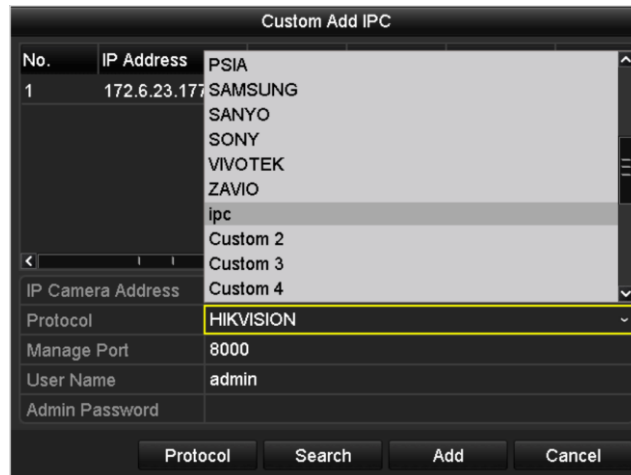


Figure 2. 20 Configure Custom Protocol

5. Select the custom protocol and enter the IP address, user name and password of the camera.
6. Click **Add** to add the network camera.

Chapter 3 Live View




3.1 Introduction of Live View

Live view shows you the video image getting from each camera in real time. The device automatically enters Live View mode when powered on. It is also at the very top of the menu hierarchy, thus right-clicking the mouse many times (depending on which menu you're on) brings you to the Live View mode.

Live View Icons

In the live view mode, there are icons at the right top of the screen for each channel, showing the status of the record and alarm in the channel, so that you can know whether the channel is recorded, or whether there are alarms occur as soon as possible.

Table 3. 1 Description of Live View Icons

Icons	Description
	Alarm (video loss, tampering, motion detection or sensor alarm)
	Record (manual recording, continuous recording, motion detection or sensor alarm triggered recording)
	Alarm & Record

3.2 Operations in Live View Mode

In live view mode, there are many functions provided. Some of the functions are listed below.

- **Single Screen:** showing only one screen on the monitor.
- **Multi-screen:** showing multiple screens on the monitor simultaneously.
- **Auto-switch:** the screen is auto switched to the next one. And you must set the dwell time for each screen on the configuration menu before enabling the auto-switch.

Menu>Configuration>Live View>Dwell Time.

- **Start Recording:** start all-day normal recording or motion detection recording for all channels.
- **Add IP Camera:** automatically or manually add the online network camera(s).
- **Playback:** play back the recorded videos for current day.
- **PTZ Control:** control the PTZ camera in the live view interface.
- **Output Mode:** set the video output mode to Standard, Bright, Gentle or Vivid.
- **Aux Monitor:** the device checks the connection of the output interfaces to define the main and auxiliary output interfaces. See the table below for the priority level of the main and aux outputs.

Table 3. 2 Priorities of Outputs

	HDMI/VGA	CVBS	Main output	Auxiliary output
1	√	√	HDMI/VGA	CVBS
2	√	×	HDMI/VGA	
3	×	√	CVBS	

- √ means the interface is in use, × means the interface is out of use or the connection is invalid. And the HDMI, VGA and CVBS can be used at the same time.

When the aux output is enabled, you can do some basic operations in the live view mode for the Aux output, while no operation is allowed for the main output.

3.2.1 Using the Mouse in Live View

Table 3. 3 Mouse Operation in Live View

Name	Description
Menu	Enter the main menu of the system by right clicking the mouse.
Single Screen	Switch to the single full screen by choosing channel number from the dropdown list.
Multi-screen	Adjust the screen layout by choosing from the dropdown list.
Previous Screen	Switch to the previous screen.
Next Screen	Switch to the next screen.
Start/Stop Auto-switch	Enable/disable the auto-switch of the screens.
Start Recording	Start all-day continuous recording or motion detection recording for all cameras.
Add IP Camera	Automatically or manually add the online network camera(s).
Playback	Play back the video of the selected channel.
PTZ Control	Control the PTZ camera and configure the parameters for PTZ.

Output Mode	Set the video output mode to Standard, Bright, Gentle or Vivid.
Aux Monitor	Switch to the auxiliary output mode.



The *dwelt time* of the live view configuration must be set before using **Start Auto-switch**. Refer to *3.3 Adjusting Live View Settings* for dwell time settings.



If you enter Aux monitor mode and the Aux monitor is not connected, the mouse operation is disabled; you need to switch back to the Main output with the **MAIN/AUX** button and **Enter** button on remote control.

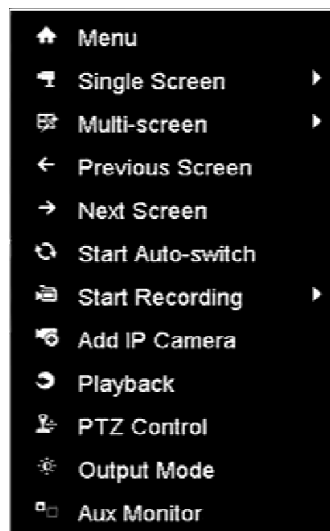


Figure 3. 1 Right-click Menu

3.2.2 Using an Auxiliary Monitor

Certain features of the Live View are also available while in an Aux monitor. These features include:

- **Single Screen:** Switch to a full screen display of the selected camera. Camera can be selected from a dropdown list.
- **Multi-screen:** Switch different display layout options. Layout options can be selected from a dropdown list.
- **Next Screen:** When displaying less than the maximum number of cameras in Live View, clicking this feature will switch to the next set of displays.
- **Playback:** Enter into Playback mode.
- **Output Mode:** Set the video output mode to Standard, Bright, Gentle or Vivid.
- **Main Monitor:** Enter Main operation mode.



In the live view mode of the main output monitor, the menu operation is not available while Aux output mode is enabled.

3.2.3 Quick Setting Toolbar in Live View Mode

On the screen of each channel, there is a quick setting toolbar which shows when you click mouse on the camera.



Live View Strategy icon is only available for network cameras.



Figure 3. 2 Quick Setting Toolbar

Table 3. 4 Description of Quick Setting Toolbar Icons

Icons	Description	Icons	Description	Icons	Description
	Enable/Disable Record		Instant Playback		Mute/Audio on
	PTZ Control		Digital Zoom		Image Settings
	Live View Strategy		Close		



Instant Playback only shows the record in last five minutes. If no record is found, it means there is no record during the last five minutes.



Digital Zoom can zoom in the selected area to the full screen. You can left-click and draw to select the area for zooming in, as shown in Figure 3.3.



Figure 3. 3 Digital Zoom



Image Settings icon can be selected to enter the Image Settings menu.

There are four preset modes for selection according to the real situation.

Below is the explanation for each mode.

- **Standard:** for general lighting conditions (default).
- **Indoor:** the image is relatively smoother.
- **Dim Light:** the image is smoother than the other two modes.
- **Outdoor:** the image is relatively clearer and sharper. The degree of contrast and saturation is high.

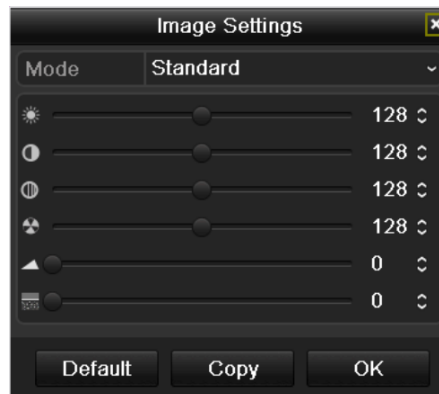


Figure 3. 4 Image Settings for Analog Camera

You can adjust the image parameters, including brightness, contrast, saturation, hue, sharpness and denoising.

You can also click **Default** to restore the default settings and click **Copy** to copy the image settings to other analog channels.



The Live View Strategy icon can be selected to enter the Live View Strategy menu. You can set the live view balance to real-time, balanced or fluency.



This feature is only available for network cameras.

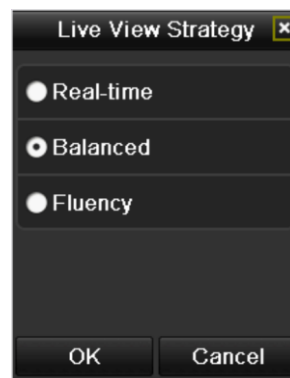


Figure 3. 5 Live View Strategy

3.3 Adjusting Live View Settings

Purpose:

Live View settings can be customized according to different needs. You can configure the output interface, dwell time for screen to be shown, mute or turning on the audio, the screen number for each channel, etc.

Steps:

1. Enter the Live View Settings interface.

Menu> Configuration> Live View



Figure 3. 6 Live View-General

The settings available in this menu include:

- **Video Output Interface:** Designates the output to configure the settings for. Outputs include HDMI / VGA and Main CVBS.
- **Live View Mode:** Designates the window-division mode to be used for Live View.
- **Dwell Time:** The time in seconds to dwell between switching of channels when enabling auto-switch in Live View.
- **Enable Audio Output:** Enables/disables audio output for the selected video output.
- **Event Output:** Designates the output to show event video.
- **Full Screen Monitoring Dwell Time:** The time in seconds to show alarm event screen.

2. Setting Camera Order

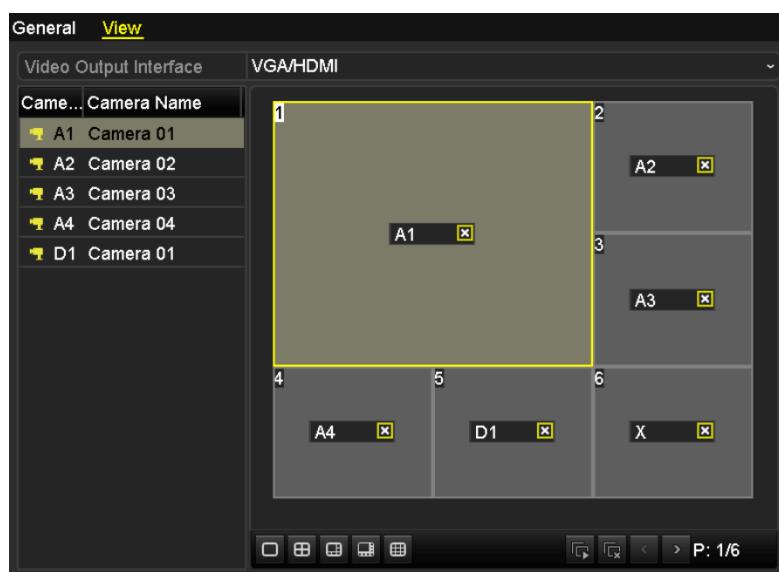



Figure 3. 7 Live View- Camera Order





To set the camera order:

- 1) Select **View** tab.
- 2) Select a **Video Output Interface** and select a screen layout .
- 3) Click to select a screen in the right region and double-click to select a channel in the left region.

Thus the selected channel will be displayed in the corresponding screen.



 means the channel will not be displayed.

You can also click  to start live view of all channels in order and click  to stop live view of all channels. Click  or  to go to the previous or next page.

- 4) Click **Apply** to save the setting.

3.4 User Logout

Purpose:

After logging out, the monitor turns to the live view mode and if you want to do some operation, you need to enter user name and password to log in again.

Steps:

1. Enter the Shutdown menu.

Menu>Shutdown

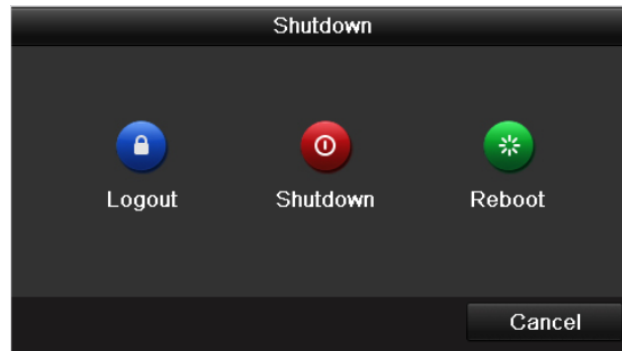


Figure 3.8 Shutdown

2. Click **Logout**.



After you have logged out the system, menu operation on the screen is invalid. It is required a user name and password to log into the system.

Chapter 4 PTZ Controls

4.1 Configuring PTZ Settings

Purpose:

Follow the procedure to set the parameters for PTZ. The configuring of the PTZ parameters should be done before you control the PTZ camera.

Steps:

1. Enter the PTZ Settings interface.

Menu >Camera> PTZ



Figure 4. 1 PTZ Settings

2. Click the RS-485 Settings button to set the RS-485 parameters.



Figure 4. 2 PTZ- General

3. Choose the camera for PTZ setting in the **Camera** dropdown list.
4. Enter the parameters of the PTZ camera.



All the parameters should be exactly the same as the PTZ camera parameters.

5. Click **Apply** button to save the settings.

4.2 Setting PTZ Presets, Patrols & Patterns

Before you start:

Please make sure that the presets, patrols and patterns should be supported by PTZ protocols.

4.2.1 Customizing Presets

Purpose:

Follow the steps to set the Preset location which you want the PTZ camera to point to when an event takes place.

Steps:

1. Enter the PTZ Control interface.

Menu>Camera>PTZ



Figure 4. 3 PTZ Settings

2. Use the directional button to wheel the camera to the location where you want to set preset; and the zoom and focus operations can be recorded in the preset as well.
3. Enter the preset No. (1~255) in the preset text field, and click the **Set** button to link the location to the preset.

Repeat the steps2-3 to save more presets.

You can click the **Clear** button to clear the location information of the preset, or click the **Clear All** button to clear the location information of all the presets.

4.2.2 Calling Presets

Purpose:

This feature enables the camera to point to a specified position such as a window when an event takes place.

Steps:



1. Click the button **PTZ** in the lower-right corner of the PTZ setting interface;
Or press the PTZ button on the front panel or click the PTZ Control icon  in the quick setting bar, or select the PTZ option in the right-click menu to show the PTZ control panel.
2. Choose **Camera** in the dropdown list.
3. Click the  button to show the general settings of the PTZ control.



Figure 4. 4 PTZ Panel - General

4. Click to enter the preset No. in the corresponding text field.
5. Click the **Call Preset** button to call it.

4.2.3 Customizing Patrols

Purpose:

Patrols can be set to move the PTZ to different key points and have it stay there for a set duration before moving on to the next key point. The key points are corresponding to the presets. The presets can be set following the steps above in *Customizing Presets*.

Steps:

1. Enter the PTZ Control interface.
Menu>Camera>PTZ



Figure 4. 5 PTZ Settings

2. Select patrol No. in the drop-down list of patrol.
3. Click the **Set** button to add key points for the patrol.

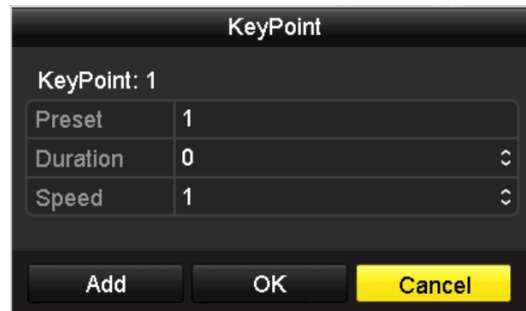


Figure 4. 6 Key point Configuration

4. Configure key point parameters, such as the key point No., duration of staying for one key point and speed of patrol. The key point is corresponding to the preset. The **Key Point No.** determines the order at which the PTZ will follow while cycling through the patrol. The **Duration** refers to the time span to stay at the corresponding key point. The **Speed** defines the speed at which the PTZ will move from one key point to the next.
5. Click the **Add** button to add the next key point to the patrol, and you can click the **OK** button to save the key point to the patrol.

You can delete all the key points by clicking the **Clear** button for the selected patrol, or click the **Clear All** button to delete all the key points for all patrols.

4.2.4 Calling Patrols

Purpose:

Calling a patrol makes the PTZ to move according the predefined patrol path.

Steps:



1. Click the button **PTZ** in the lower-right corner of the PTZ setting interface;
Or press the PTZ button on the front panel or click the PTZ Control icon  in the quick setting bar, or select the PTZ option in the right-click menu to show the PTZ control panel.
2. Click the  button to show the general settings of the PTZ control.



Figure 4. 7 PTZ Panel - General

3. Select a patrol in the dropdown list and click the **Call Patrol** button to call it.
4. You can click the **Stop Patrol** button to stop calling it.

4.2.5 Customizing Patterns

Purpose:

Patterns can be set by recording the movement of the PTZ. You can call the pattern to make the PTZ movement according to the predefined path.

Steps:

1. Enter the PTZ Control interface.
Menu > Camera > PTZ



Figure 4. 8 PTZ Settings

2. Choose pattern number in the dropdown list.
3. Click the **Start** button and click corresponding buttons in the control panel to move the PTZ camera, and click the **Stop** button to stop it.
The movement of the PTZ is recorded as the pattern.

4.2.6 Calling Patterns

Purpose:

Follow the procedure to move the PTZ camera according to the predefined patterns.

Steps:



1. Click the button **PTZ** in the lower-right corner of the PTZ setting interface;
Or press the PTZ button on the front panel or click the PTZ Control icon  in the quick setting bar, or select the PTZ option in the right-click menu to show the PTZ control panel.
2. Click the  button to show the general settings of the PTZ control.



Figure 4.9 PTZ Panel - General

3. Click the **Call Pattern** button to call it.
4. Click the **Stop Pattern** button to stop calling it.

4.2.7 Customizing Linear Scan Limit

Purpose:

The Linear Scan can be enabled to trigger the scan in the horizontal direction in the predefined range.



This function is supported by some certain models.

Steps:

1. Enter the PTZ Control interface.
Menu > Camera > PTZ



Figure 4.10 PTZ Settings

2. Use the directional button to wheel the camera to the location where you want to set the limit, and click the **Left Limit** or **Right Limit** button to link the location to the corresponding limit.



The speed dome starts linear scan from the left limit to the right limit, and you must set the left limit on the left side of the right limit, as well the angle from the left limit to the right limit should be no more than 180°.

4.2.8 Calling Linear Scan

Purpose:

Follow the procedure to call the linear scan in the predefined scan range.

Steps:



1. Click the button **PTZ** in the lower-right corner of the PTZ setting interface;
Or press the PTZ button on the front panel or click the PTZ Control icon  in the quick setting bar to enter the PTZ setting menu in live view mode.
2. Click the  button to show the one-touch function of the PTZ control.



Figure 4. 11 PTZ Panel - One-touch

3. Click **Linear Scan** button to start the linear scan and click the Linear Scan button again to stop it.
You can click the **Restore** button to clear the defined left limit and right limit data and the dome needs to reboot to make settings take effect.

4.2.9 One-touch Park

Purpose:

For some certain model of the speed dome, it can be configured to start a predefined park action (scan, preset, patrol and etc.) automatically after a period of inactivity (park time).

Steps:



1. Click the button **PTZ** in the lower-right corner of the PTZ setting interface;
Or press the PTZ button on the front panel or click the PTZ Control icon  in the quick setting bar to enter the PTZ setting menu in live view mode.
2. Click the  button to show the one-touch function of the PTZ control.



Figure 4. 12 PTZ Panel - One-touch

3. There are 3 one-touch park types selectable, click the corresponding button to activate the park action.

Park (Quick Patrol): The dome starts patrol from the predefined preset 1 to preset 32 in order after the park time. The undefined preset will be skipped.

Park (Patrol 1): The dome starts move according to the predefined patrol 1 path after the park time.

Park (Preset 1): The dome moves to the predefined preset 1 location after the park time.



The park time can only be set through the speed dome configuration interface, by default the value is 5s.

4. Click the button again to inactivate it.


4.3 PTZ Control Panel

To enter the PTZ control panel, there are two ways supported.

OPTION 1:

In the PTZ settings interface, click the **PTZ** button on the lower-right corner which is next to the Back button.

OPTION 2:

In the Live View mode, you can press the PTZ Control button on the front panel or on the remote control, or choose the PTZ Control icon , or select the PTZ option in the right-click menu.

Click the **Configuration** button on the control panel, and you can enter the PTZ Settings interface.





















In PTZ control mode, the PTZ panel will be displayed when a mouse is connected with the device. If no mouse is connected, the **PTZ** icon appears in the lower-left corner of the window, indicating that this camera is in PTZ control mode.



Figure 4.13 PTZ Panel

Table 4.1 Description of the PTZ panel icons

Icon	Description	Icon	Description	Icon	Description
	Direction button and the auto-cycle button		Zoom+, Focus+, Iris+		Zoom-, Focus-, Iris-
	The speed of the PTZ movement		Light on/off		Wiper on/off
	3D-Zoom		Image Centralization		Menu
	Switch to the PTZ control interface		Switch to the one-touch control interface		Switch to the general settings interface
	Previous item		Next item		Start pattern / patrol
	Stop the patrol / pattern movement		Exit		Minimize windows

Chapter 5 Recording Settings



The interfaces of the device are subject to the actual model.

5.1 Configuring Parameters

Purpose:

By configuring the parameters you can define the parameters which affect the image quality, such as the transmission stream type, the resolution and so on.

Before you start:

1. Make sure that the HDD has already been installed. If not, please install a HDD and initialize it.
(Menu>HDD>General)

L...	Capacity	Status	Property	Type	Free Space	Gr...	Edit	D...
1	465.76GB	Normal	R/W	Local	305GB	1		—
2	931.51GB	Normal	R/W	Local	814GB	1		—

Figure 5.1 HDD- General

2. Check the storage mode of the HDD.
 1. Click **Advanced** to check the storage mode of the HDD.
 2. If the HDD mode is *Quota*, please set the maximum record capacity. For detailed information, see *10.4 Configuring Quota Mode*.
 3. If the HDD mode is **Group**, you should set the HDD group. For detailed information, see *10.3 Managing HDD Group*.

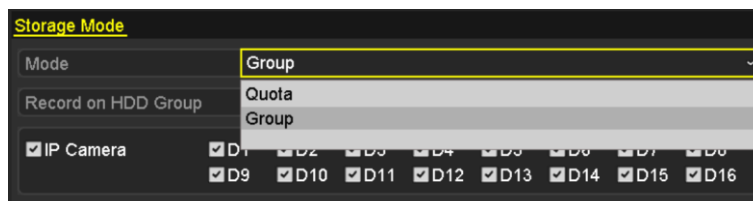


Figure 5.2 HDD- Advanced

Steps:

1. Enter the Record settings interface to configure the recording parameters:
Menu>Record>Parameters

Record		Substream	
Camera	IP Camera 1		
Encoding Parameters	Main Stream(Continuous)	Main Stream(Event)	
Stream Type	Video & Audio	Video & Audio	
Resolution	1280*720(HD720P)	1280*720(HD720P)	
Bitrate Type	Variable	Variable	
Video Quality	Medium	Medium	
Frame Rate	Full Frame	Full Frame	
Max. Bitrate Mode	General	General	
Max. Bitrate(Kbps)	3072	3072	
Max. Bitrate Range Reco...	2304~3840(Kbps)	2304~3840(Kbps)	
Pre-record	5s		
Post-record	5s		
Expired Time (day)	0		
Redundant Record	<input type="checkbox"/>		
Record Audio	<input checked="" type="checkbox"/>		
Video Stream	Main Stream		

Figure 5.3 Recording Parameters

2. Parameters Setting for Recording

1) Select **Record** tab page to configure. You can configure the stream type, the resolution, and other parameters on your demand.

- **Pre-record:** The time you set to record before the scheduled time or event. For example, when an alarm triggered the recording at 10:00, if you set the pre-record time as 5 seconds, the camera records it at 9:59:55.
- **Post-record:** The time you set to record after the event or the scheduled time. For example, when an alarm triggered the recording ends at 11:00, if you set the post-record time as 5 seconds, it records till 11:00:05.
- **Expired Time:** The expired time is the longest time for a record file to be kept in the HDD, if the deadline is reached, the file will be deleted. You can set the expired time to 0, and then the file will not be deleted. The actual keeping time for the file should be determined by the capacity of the HDD.
- **Redundant Record:** Enabling redundant record means you save the recording files in the redundant HDD. See *Chapter 5.8 Configuring Redundant Recording*.
- **Record Audio:** Check the checkbox to enable or disable audio recording.
- **Video Stream:** Main stream and sub-stream are selectable for recording. When you select sub-stream, you can record for a longer time with the same storage space.

2) Click **Apply** to save the settings.



- The redundant record is to decide whether you want the camera to save the recording files in the redundant HDD. You must configure the redundant HDD in HDD settings. For detailed information, see *Chapter 5.8 Configuring Redundant Recording*.
- The parameters of Main Stream (Event) are read-only.

3. Parameters Settings for Sub-stream

1) Enter the Sub-stream tab page.

Record <u>Substream</u>	
Camera	IP Camera 1
Stream Type	Video & Audio
Resolution	352*288(CIF)
Bitrate Type	Variable
Video Quality	Medium
Frame Rate	12fps
Max. Bitrate Mode	General
Max. Bitrate(Kbps)	512
Max. Bitrate Range Reco...	153~255(Kbps)

Figure 5. 4 Sub-stream Parameters

- 2) Configure the parameters of the camera.
- 3) Click **Apply** to save the settings.

5.2 Configuring Recording Schedule

Purpose:

Set the recording schedule, and then the camera automatically starts/stops recording according to the configured schedule.

Steps:

1. Enter the Record Schedule interface.
Menu>Record>Schedule
2. Configure Record Schedule
 - 1) Select Record Schedule.

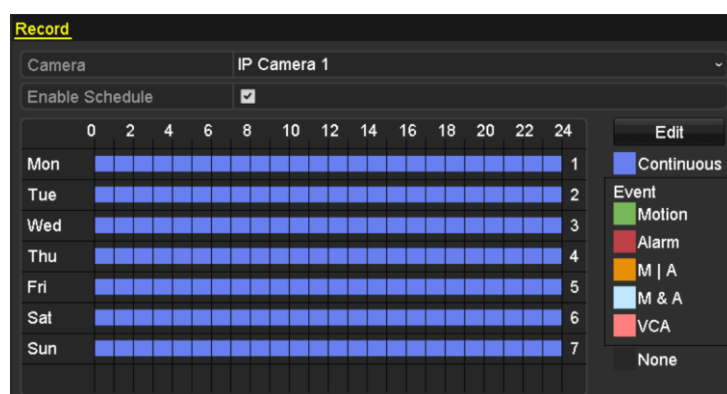


Figure 5.5 Record Schedule



The Alarm, Motion & Alarm, Motion | Alarm recording types are not supported by the DS-7100NI-SL(/W) series NVR.

- 2) Choose the camera you want to configure.
- 3) Select the check box after the **Enable Schedule** item.
- 4) Click **Edit** button or click on the color icon under the edit button and draw the schedule line on the panel.

Edit the schedule:

- I. In the message box, you can choose the day to which you want to set schedule.

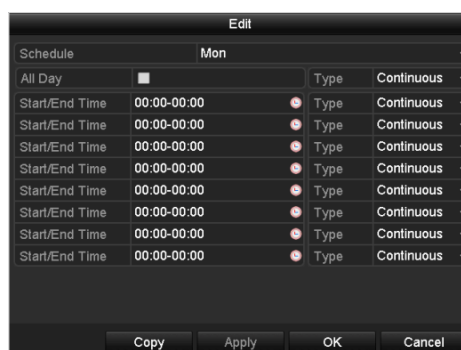



Figure 5.6 Recording Schedule Interface

You can click the  button to set the accurate time of the schedule.

II. To schedule an all-day recording, check the checkbox after the **All Day** item.

All Day	<input checked="" type="checkbox"/>	Type	Continuous
Start/End Time	00:00-00:00	Type	Continuous
Start/End Time	00:00-00:00	Type	Continuous
Start/End Time	00:00-00:00	Type	Continuous

Figure 5.7 Edit Schedule

III. To arrange other schedule, leave the **All Day** checkbox blank and set the Start/End time.



Up to 8 periods can be configured for each day. And the time periods cannot be overlapped each other.

IV. Select the record type in the dropdown list.



- To enable Motion, Alarm, M | A (motion or alarm), M & A (motion and alarm) and VCA (Video Content Analysis) triggered recording and capture, you must configure the motion detection settings, alarm input settings or VCA settings as well. For detailed information, refer to *Chapter 8.1*, *Chapter 8.2* and *Chapter 8.5*.
- The VCA settings are only available to the smart IP cameras.

Repeat the above edit schedule steps to schedule recording for other days in the week. You can click **Copy** to enter the Copy to interface to copy the schedule settings to other days

V. Click **Apply** in the Record Schedule interface to save the settings.

Draw the schedule:

I. Click on the color icons, you can choose the schedule type as continuous or event.

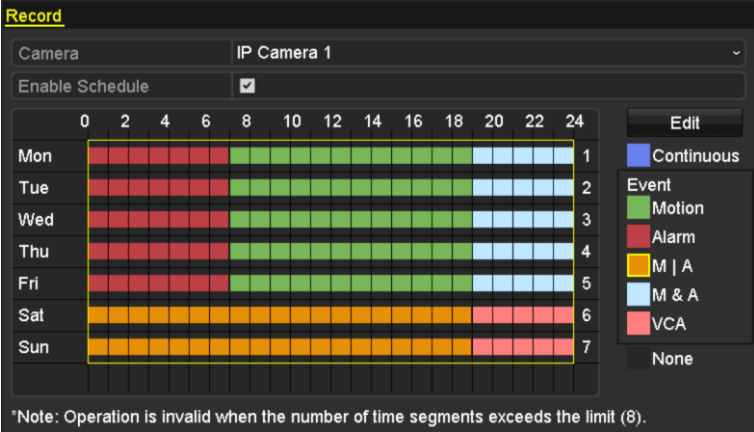


Figure 5.8 Draw the Schedule

Descriptions of the color icons are shown in the figure below.

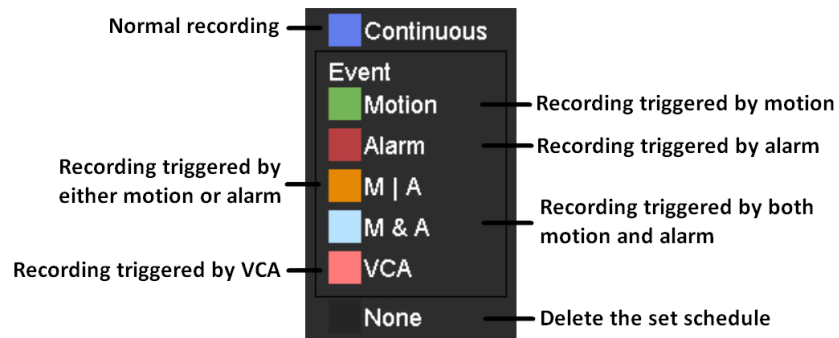


Figure 5. 9 Descriptions of the color icons

-
- II. Click the **Apply** button to validate the settings.
3. (Optional) If the settings can also be used to other channels, click **Copy**, and then choose the channel to which you want to copy.
 4. Click **Apply** to save the settings.

5.3 Configuring Motion Detection Recording

Purpose:

Follow the steps to set the motion detection parameters. In the live view mode, once a motion detection event takes place, the NVR can analyze it and do many actions to handle it. Enabling motion detection function can trigger certain channels to start recording, or trigger full screen monitoring, audio warning, notify the surveillance center and so on. In this chapter, you can follow the steps to schedule a record which triggered by the detected motion.

Steps:

1. Enter the Motion Detection interface.
Menu>Camera>Motion
2. Configure Motion Detection
 - 1) Choose camera you want to configure.
 - 2) Check the checkbox after **Enable Motion Detection**.
 - 3) Drag and draw the area for motion detection by mouse. If you want to set the motion detection for all the area shot by the camera, click **Full Screen**. To clear the motion detection area, click **Clear**.

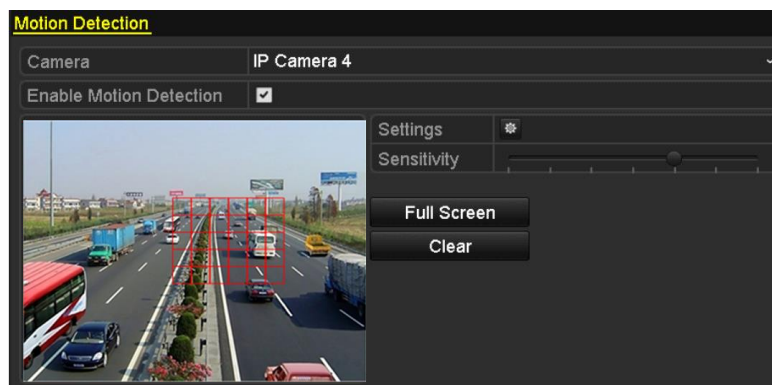


Figure 5. 10 Motion Detection- Mask

- 4) Click **Settings**, and the message box for channel information pop up.

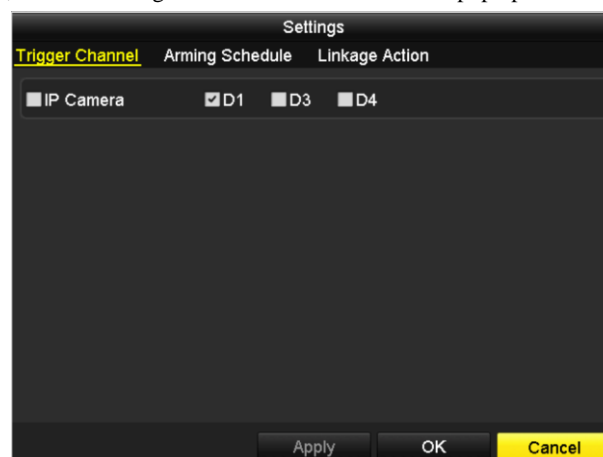


Figure 5. 11 Motion Detection Handling

- 5) Select the channels which you want the motion detection event to trigger recording.

- 6) Click **Apply** to save the settings.
 - 7) Click **OK** to back to the upper level menu.
 - 8) Exit the Motion Detection menu.
3. Edit the Motion Detection Record Schedule. For the detailed information of schedule configuration, see *5.2 Configuring Recording Schedule*.

5.4 Configuring Alarm Triggered Recording


Purpose:

Follow the procedure to configure alarm triggered recording.

Steps:

1. Enter the Alarm setting interface.

Menu> Configuration> Alarm

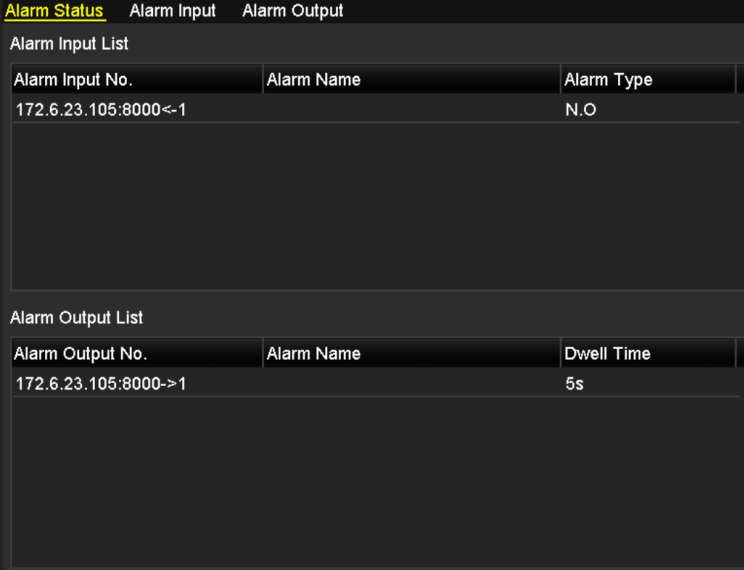


The screenshot shows the 'Alarm Status' tab selected. Below it are two sections: 'Alarm Input List' and 'Alarm Output List'. The 'Alarm Input List' has a table with columns 'Alarm Input No.', 'Alarm Name', and 'Alarm Type'. It contains one entry: '172.6.23.105:8000<-1' with 'N.O' as the type. The 'Alarm Output List' has a table with columns 'Alarm Output No.', 'Alarm Name', and 'Dwell Time'. It contains one entry: '172.6.23.105:8000->1' with '5s' as the dwell time.

Alarm Input No.	Alarm Name	Alarm Type
172.6.23.105:8000<-1		N.O

Alarm Output No.	Alarm Name	Dwell Time
172.6.23.105:8000->1		5s

Figure 5. 12 Alarm Settings

2. Click **Alarm Input** tab and set the alarm parameters.

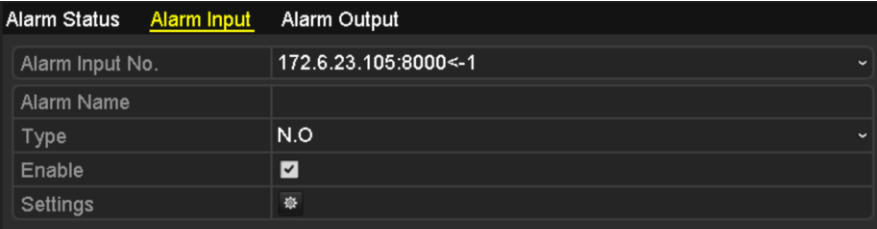

The screenshot shows the 'Alarm Input' tab selected. It displays a form with the following fields: 'Alarm Input No.' (172.6.23.105:8000<-1), 'Alarm Name' (empty), 'Type' (N.O), 'Enable' (checked checkbox), and 'Settings' (gear icon).

Alarm Input No.	172.6.23.105:8000<-1
Alarm Name	
Type	N.O
Enable	<input checked="" type="checkbox"/>
Settings	

Figure 5. 13 Alarm Settings- Alarm Input

- 1) Select Alarm Input No. and configure alarm parameters.
- 2) Edit the alarm name as desired and choose N.O (normally open) or N.C (normally closed) for alarm type.
- 3) Check ☒ checkbox to enable the alarm input.
- 4) Click to configure the alarm settings.

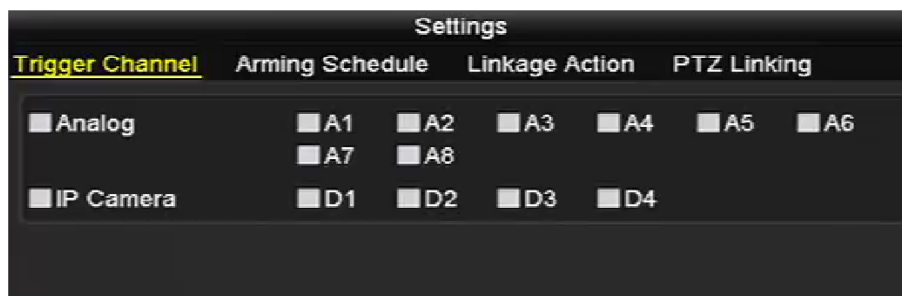


Figure 5.14 Alarm Settings

- 5) Check the checkbox ☒ to choose the alarm triggered recording channel.
- 6) Click **Apply** to save settings.
- 7) Click **OK** to back to the upper level menu.
- 8) Click **Apply** in the Alarm Input interface to save the settings.

Repeat the above steps to configure other alarm input parameters.

If the setting can also be applied to other alarm inputs, click **Copy** and choose the alarm input number.

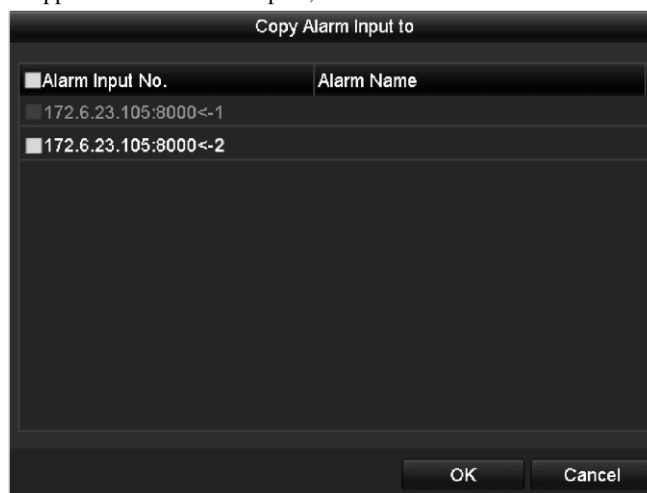


Figure 5.15 Copy Alarm Input

3. Enter Record Schedule settings interface (Menu> Record> Schedule>Record). For detailed information about record schedule settings, refer to step 2 in *Chapter 5.2 Configuring Record Schedule*.



You need to select the **Type** as Alarm in record schedule settings.

Camera

Analog 1

Enable Schedule

☒

	0	2	4	6	8	10	12	14	16	18	20	22	24	
Mon														1
Tue														2
Wed														3
Thu														4
Fri														5
Sat														6
Sun														7
Holiday														8

Edit

Continuous

Event

Motion

Alarm

M | A

M & A

None

Figure 5. 16 Record Schedule

5.5 Configuring VCA Triggered Recording

Purpose:

Perform the following steps to set the VCA alarm and trigger recording of related cameras.

Steps:

1. Enter VCA Alarm interface of Camera Management and select a camera you want to detect VCA alarm.

Menu> Camera> VCA



The selected camera must support the VCA function.

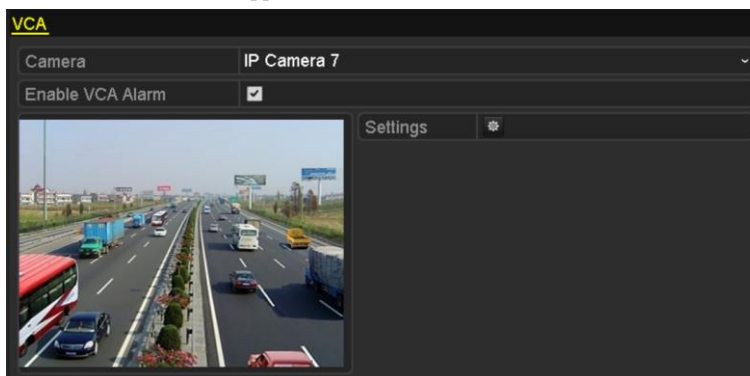


Figure 5.17 VCA Alarm Setting Interface

2. Check the **Enable VCA Alarm** checkbox and click **Settings** button to set up its alarm response actions.

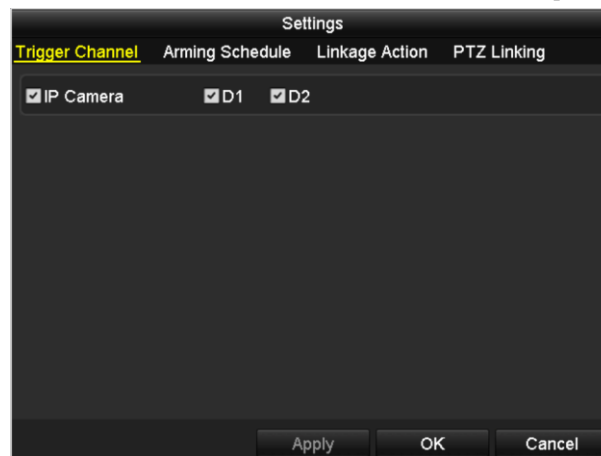


Figure 5.18 VCA Alarm Handling

3. Select the channels which you want the motion detection event to trigger recording.
4. Click **Apply** to save the settings.
5. Edit the VCA Alarm Record Schedule. For the detailed information of schedule configuration, see 5.2 *Configuring Recording Schedule*.

5.6 Configuring Manual Recording

Purpose:

Follow the steps to set parameters for the manual recording. Using manual recording, you need to manually cancel the recording. The manual recording is prior to the scheduled recording.

Steps:

1. Enter the Manual settings interface.

Menu> Manual

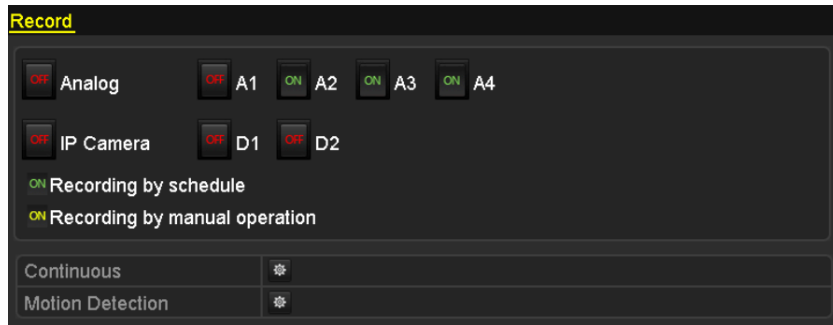


Figure 5. 19 Manual Record

2. Enable manual record

- 1) Select **Record** tab on the left bar.
- 2) Click the status button before camera No. to change **OFF** to **ON**.

3. Disable manual record.

Click the status button to change **ON** to **OFF**.



After rebooting, all the manual records enabled will be canceled.

4. Start all-day normal recording or all-day motion detection recording of all channels.

- 1) Click  for **Continuous** or **Motion Detection**.



Figure 5. 20 Continuous Recording



Figure 5. 21 Motion Detection Recording

- 2) Click **Yes** to enable all-day continuous recording or all-day motion detection recording of all channels.

5.7 Configuring Holiday Recording


Purpose:

Follow the steps to configure the record schedule on holiday for that year. You may want to have different plan for recording on holiday.

Steps:

1. Enter the Record setting interface.

Menu > Record > Holiday

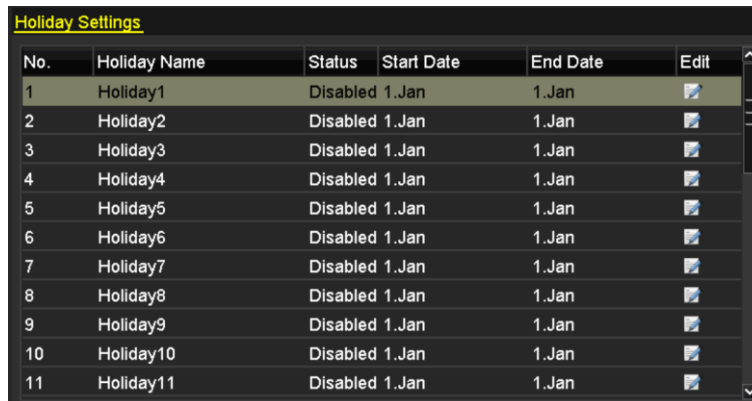


No.	Holiday Name	Status	Start Date	End Date	Edit
1	Holiday1	Disabled	1.Jan	1.Jan	
2	Holiday2	Disabled	1.Jan	1.Jan	
3	Holiday3	Disabled	1.Jan	1.Jan	
4	Holiday4	Disabled	1.Jan	1.Jan	
5	Holiday5	Disabled	1.Jan	1.Jan	
6	Holiday6	Disabled	1.Jan	1.Jan	
7	Holiday7	Disabled	1.Jan	1.Jan	
8	Holiday8	Disabled	1.Jan	1.Jan	
9	Holiday9	Disabled	1.Jan	1.Jan	
10	Holiday10	Disabled	1.Jan	1.Jan	
11	Holiday11	Disabled	1.Jan	1.Jan	

Figure 5. 22 Holiday Settings

2. Enable Edit Holiday schedule.

- 1) Click to enter the Edit interface.

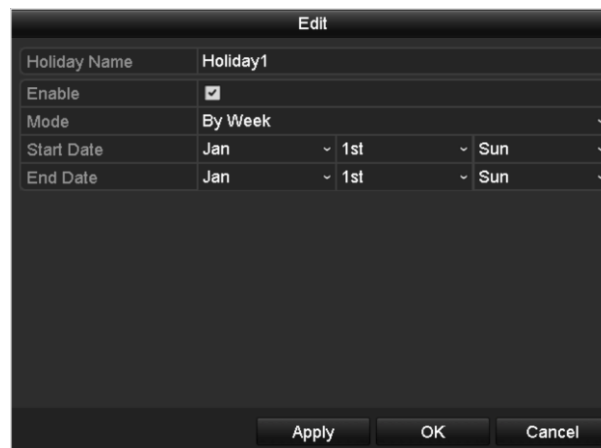

Edit			
Holiday Name	Holiday1		
Enable	<input checked="" type="checkbox"/>		
Mode	By Week		
Start Date	Jan	1st	Sun
End Date	Jan	1st	Sun

Apply OK Cancel

Figure 5. 23 Edit Holiday Settings

- 2) Check the checkbox after **Enable Holiday**.
- 3) Select Mode from the dropdown list.
There are three different modes for the date format to configure holiday schedule.
- 4) Set the start and end date.
- 5) Click **Apply** to save settings.
- 6) Click **OK** to exit the Edit interface.
3. Enter Record Schedule settings interface to edit the holiday recording schedule. See *Chapter 6.2 Auxiliary Functions of Playback*.

5.8 Configuring Redundant Recording

Purpose:

Enabling redundant recording, which means saving the record files not only in the R/W (read/write) HDD but also in the redundant HDD, will effectively enhance the data safety and reliability.



You must set the Storage mode in the HDD advanced settings to Group before you set the HDD property to Redundant. For detailed information, please refer to *Chapter 10.3 Managing HDD Group*. There should be at least another HDD or network disk which is in R/W mode.

Steps:

1. Enter HDD Information interface.

Menu> HDD

L...	Capacity	Status	Property	Type	Free Space	Gr...	Edit	D...
1	76,319MB	Normal	R/W	Local	26,624MB	1		
17	19,968MB	Normal	R/W	NAS	19,456MB	1		

Figure 5. 24 HDD General

2. Select the **HDD** and click to enter the Local HDD Settings interface.

- 1) Set the HDD property to Redundancy.

Local HDD Settings

HDD No. 1

HDD Property

☐ R/W
☐ Read-only
☒ Redundancy

Group

☒ 1 ☐ 2 ☐ 3 ☐ 4 ☐ 5 ☐ 6 ☐ 7 ☐ 8
☐ 9 ☐ 10 ☐ 11 ☐ 12 ☐ 13 ☐ 14 ☐ 15 ☐ 16

HDD Capacity 465.76GB

Apply OK Cancel

Figure 5. 25 HDD General-Editing

- 2) Click **Apply** to save the settings.
- 3) Click **OK** to back to the upper level menu.

3. Enter the Record setting interface.

Menu> Record> Parameters

- 1) Select **Record**.

Record		Substream	
Camera	IP Camera 1		
Encoding Parameters	Main Stream(Continuous)	Main Stream(Event)	
Stream Type	Video & Audio	Video & Audio	
Resolution	1280*720(HD720P)	1280*720(HD720P)	
Bitrate Type	Variable	Variable	
Video Quality	Medium	Medium	
Frame Rate	Full Frame	Full Frame	
Max. Bitrate Mode	General	General	
Max. Bitrate(Kbps)	3072	3072	
Max. Bitrate Range Reco...	2304~3840(Kbps)	2304~3840(Kbps)	
Pre-record	5s		
Post-record	5s		
Expired Time (day)	0		
Redundant Record	<input type="checkbox"/>		
Record Audio	<input checked="" type="checkbox"/>		
Video Stream	Main Stream		

Figure 5. 26 Record Parameters

- 2) Select Camera you want to configure.
- 3) Check **Redundant Record** checkbox to enable redundant recording.
- 4) Click **Apply** to save settings.

Repeat the above steps2)-4) for configuring other channels. If the setting can also be applied to other analog channels, click **Copy** and then choose the channel(s).

5.9 Configuring HDD Group for Recording


Purpose:

You can group the HDDs and save the record files in certain HDD group.

Steps:


1. Enter HDD setting interface.

Menu>HDD

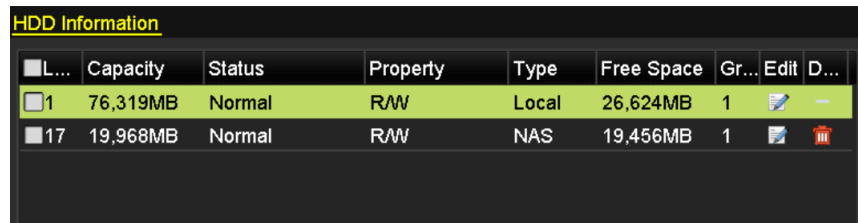

HDD Information							
L...	Capacity	Status	Property	Type	Free Space	Gr...	Edit D...
1	76,319MB	Normal	R/W	Local	26,624MB	1	—
17	19,968MB	Normal	R/W	NAS	19,456MB	1	


Figure 5. 27 HDD General

2. Select **Advanced** on the left bar.
Check whether the storage mode of the HDD is Group. If not, set it to Group. For detailed information, please refer to *Chapter 10.3 Managing HDD Group*.
3. Select **General** in the left bar.
Click  to enter editing interface.
4. Configuring HDD group.
 - 1) Choose a group number for the HDD group.
 - 2) Click **Apply** and then in the pop-up message box, click **Yes** to save your settings.
 - 3) Click **OK** to back to the upper level menu.

Repeat the above steps3-4 to configure more HDD groups.

5. Choose the Channels which you want to save the record files in the HDD group.

- 1) Select **Advanced** on the left bar.

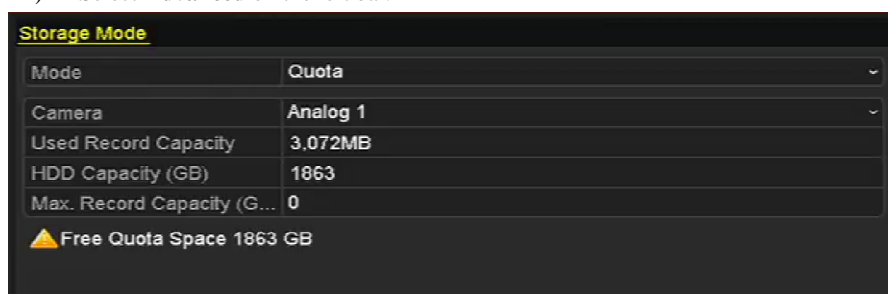


Storage Mode	
Mode	Quota
Camera	Analog 1
Used Record Capacity	3.072MB
HDD Capacity (GB)	1863
Max. Record Capacity (G...	0
 Free Quota Space 1863 GB	

Figure 5. 28 HDD Advanced

- 2) Choose Group number in the dropdown list of **Record on HDD Group**
- 3) Check the channels you want to save in this group.
- 4) Click **Apply** to save settings.



After having configured the HDD groups, you can configure the Recording settings following the procedure provided in *Chapter 5.2-5.7*.

5.10 Files Protection

Purpose:

You can lock the recorded files or set the HDD property to Read-only to protect the record files from being overwritten.

Protect file by locking the record files:

Steps:

1. Enter Export setting interface.

Menu> Export

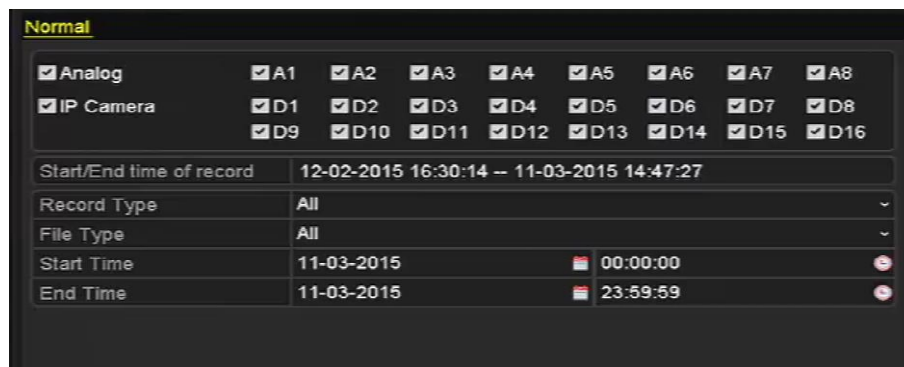


Figure 5.29 Export Interface

2. Check the checkbox to ☒ for selecting the channels.
3. Configure the record mode, record type, file type and start/end time.
4. Click **Search** to show the results.



Figure 5.30 Export- Search Result

5. Protect the record files.

- 1) Find the record files you want to protect, and then click icon which will turn to , indicating that the file is locked.
- 2) Click to change it to to unlock the file and the file is not protected.



Figure 5.31 Unlocking Attention

Protect file by setting HDD property to Read-only



To edit HDD property, you need to set the storage mode of the HDD to Group. See *Chapter 10.3 Managing HDD Group*.

Steps:

1. Enter HDD setting interface.

Menu> HDD

HDD Information								
<input type="checkbox"/> L...	Capacity	Status	Property	Type	Free Space	Gr...	Edit	D...
<input type="checkbox"/> 1	465.76GB	Normal	R/W	Local	305GB	1		—
<input type="checkbox"/> 2	931.51GB	Normal	R/W	Local	814GB	1		—

Figure 5.32 HDD General

2. Click to edit the HDD you want to protect.

 A dialog box titled "Local HDD Settings". It contains the following fields and options:

- HDD No.: 1
- HDD Property:
 - ☒ R/W
 - ☐ Read-only
 - ☐ Redundancy
- Group: A grid of 16 radio buttons labeled 1 through 16. Radio button 1 is selected.
- HDD Capacity: 140GB
- Buttons at the bottom: Apply, OK, Cancel.

Figure 5.33 HDD General- Editing

3. Set the HDD to Read-only.
4. Click **OK** to save settings and back to the upper level menu.



- You can't save any files in a Read-only HDD. If you want to save files in the HDD, change the property to R/W.
- If there is only one HDD and is set to Read-only, the device can't record any files. Only live view mode is

available.

- If you set the HDD to Read-only when the device is saving files in it, then the file will be saved in next R/W HDD. If there is only one HDD, the recording will be stopped.

Chapter 6 Playback


6.1 Playing Back Record Files

6.1.1 Playing Back by Channel

Purpose:

Play back the recorded video files of a specific channel in the live view mode. Channel switch is supported.

Instant playback by channel:

Choose a channel in live view mode using the mouse and click the  button in the quick setting toolbar.



Only record files recorded during the last five minutes on this channel will be played back.



Figure 6. 1 Instant Playback Interface

Playback by channel

Steps:

1. Enter the Playback interface.

Mouse: Right-click a channel in live view mode and select **Playback** from the menu, as shown in Figure 6.2.

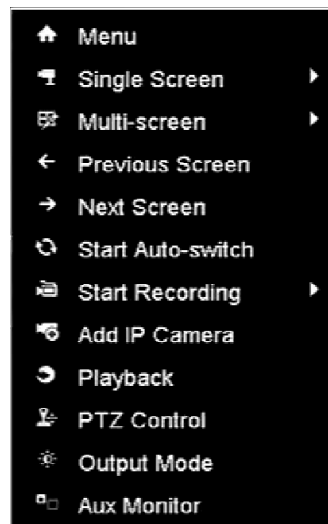


Figure 6.2 Right-click Menu under Live View

Front Panel: press **PLAY** button to play back record files of the channel under single-screen live view mode.



Pressing numerical buttons will switch playback to the corresponding channels during playback process.

2. Playback management.

The toolbar in the bottom part of Playback interface can be used to control playing progress, as shown in Figure 6.3.



Figure 6.3 Playback Interface

Click the channel(s) if you want to execute synchronous playback of multiple channels.



Figure 6.4 Toolbar of Playback



The **11-22-2012 11:42:22 -- 12-19-2012 19:53:25** indicates the start/end time of the record.

Table 6. 1 Detailed Explanation of Playback Interface

Button	Operation	Button	Operation	Button	Operation
	Audio on/ Mute		Start/Stop clipping		30s forward
	30s reverse		Add default tag		Add customized tag
	Tag management		Speed down		Pause reverse play/ Reverse play/ Single-frame reverse play
	Pause play/ Play/ Single-frame play		Scaling up/down the time line		Speed up
	Previous day		Next day		Full Screen
	Exit		Stop		Digital Zoom
	Save the clips		Process bar		Video type



Playback progress bar: use the mouse to click any point of the progress bar or drag the progress bar to locate specific frames.

6.1.2 Playing Back by Time

Purpose:

Play back video files recorded in specified time duration. Multi-channel simultaneous playback and channel switch are supported.

Steps:


1. Enter Playback interface.
Menu>Playback
2. Check the checkbox of channel(s) in the channel list and then double-click to select a date on the calendar.



Figure 6. 5 Playback Calendar



If there are record files for that camera in that day, in the calendar, the icon for that day is displayed as .

Otherwise it is displayed as .

In the Playback interface:

The toolbar in the bottom part of Playback interface can be used to control playing process, as shown in the figure below.



Figure 6. 6 Interface of Playback by Time
























Figure 6. 7 Toolbar of Playback by Time



The **11-22-2012 11:42:22 -- 12-19-2012 19:53:25** indicates the start/end time of the record.

Table 6. 2 Detailed Explanation of Playback-by-time Interface

Button	Operation	Button	Operation	Button	Operation
	Audio on/ Mute		Start/Stop clipping		30s forward
	30s reverse		Add default tag		Add customized tag
	Tag management		Speed down		Pause reverse play/ Reverse play/ Single-frame reverse play
	Pause play/ Play/ Single-frame play		Scaling up/down the time line		Speed up
	Previous day		Next day		Full Screen
	Exit		Stop		Digital Zoom
	Save the clips		Process bar		Video type



Playback progress bar: use the mouse to click any point of the progress bar or drag the progress bar to locate specific frames.

6.1.3 Playing Back by Event Search

Purpose:

Play back record files on one or several channels searched out by restricting event type (e.g. alarm input and motion detection).

Steps:

1. Enter the playback interface.
Menu>Playback
2. Select the **Event** in the drop-down list on the top-left side.
3. Select **Alarm Input**, **Motion** or **VCA** as the event type, edit the Start time and End time.



Here we take playback by motion as the example.

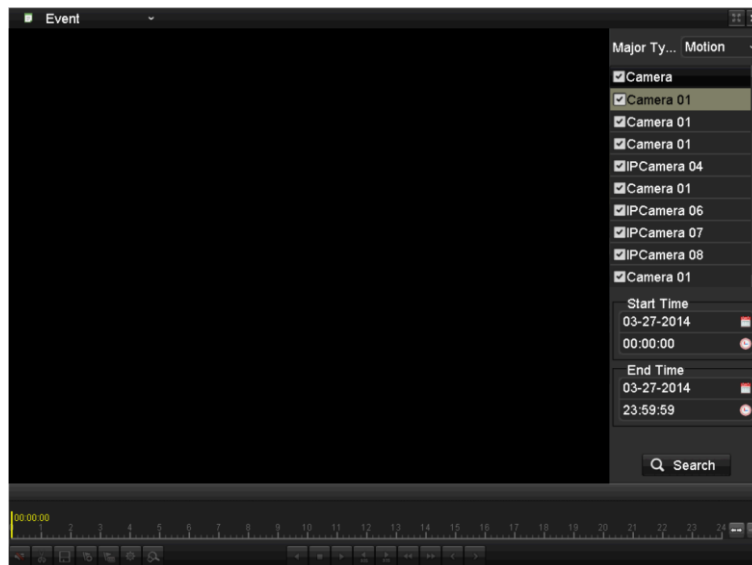



Figure 6. 8 Event Playback Interface-Alarm Input

4. Click  **Search** to get the search result information listed in the right-side panel.

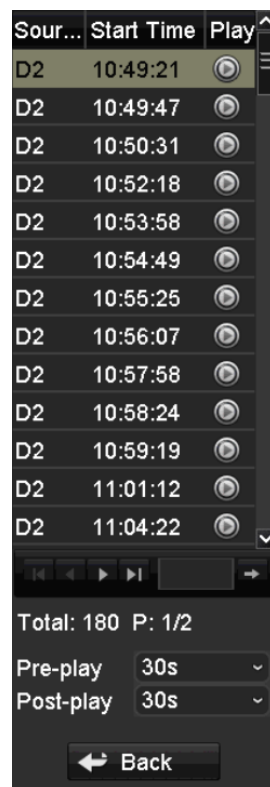



Figure 6.9 Search Result Bar

- Click  button to play back the file.

You can click the **Back** button to back to the search interface.



Pre-play and post-play can be configured.

- Playback interface.

The toolbar in the bottom part of Playback interface can be used to control playing process.



Figure 6.10 Interface of Playback by Event



Figure 6.11 Toolbar of Playback by Event

Table 6.3 Detailed Explanation of Playback-by-event Toolbar

Button	Operation	Button	Operation	Button	Operation
	Audio on/ Mute		Start/Stop clipping		30s forward
	30s reverse		Add default tag		Add customized tag
	Tag management		Speed down		Pause reverse play/ Reverse play/ Single-frame reverse play
	Pause play/ Play/ Single-frame play		Scaling up/down the time line		Speed up
	Previous day		Next day		Full Screen
	Exit		Stop		Digital Zoom
	Save the clips		Process bar		Video type



Playback progress bar: use the mouse to click any point of the progress bar or drag the progress bar to locate specific frames.

6.1.4 Playing Back by Tag

Purpose:


Video tag allows you to record related information like people and location of a certain time point during playback. You are also allowed to use video tag(s) to search for record files and position time point.


Before playing back by tag:

1. Enter Playback interface.
Menu>Playback
2. Search and play back the record file(s). Refer to *Chapter 6.1.2* for the detailed information about searching and playback of the record files.



Figure 6.12 Interface of Playback by Time

Click  to add default tag.

Click  to add customized tag and edit tag name.



Max. 64 tags can be added to a single video file.

3. Tag management.


Click  to check, edit and delete tag(s).




Figure 6.13 Tag Management Interface

Steps:

1. Enter Playback interface.

Menu>Playback

2. Click  **Normal** and select  **Tag** to enter the Tag Playback interface.

3. Choose channels, edit the Start and End time, and click  **Search** to enter Search Result interface.



You can enter keyword in the textbox to search the tag on your command.

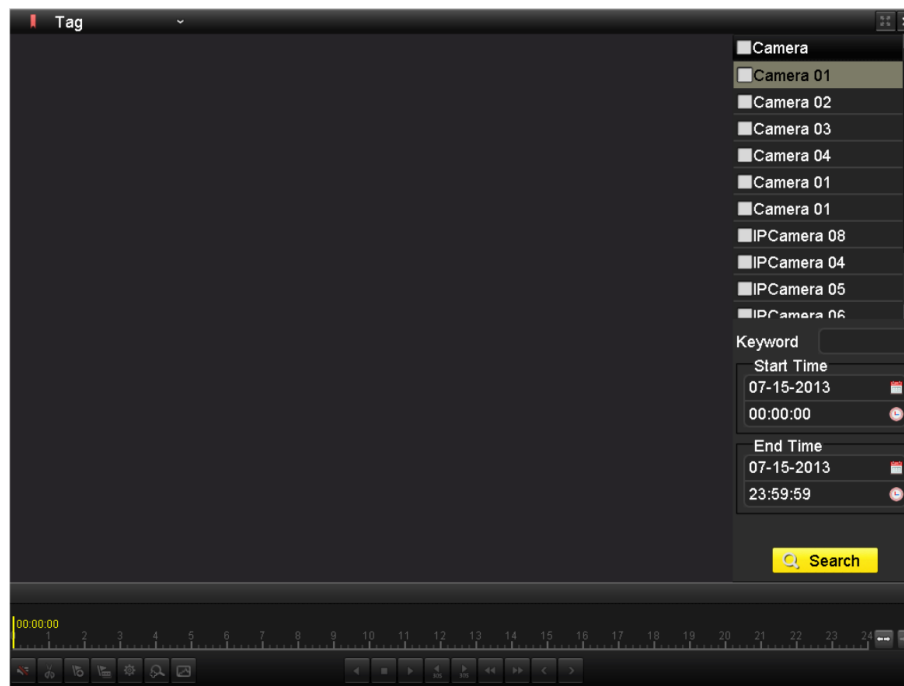


Figure 6.14 Video Search by Tag

4. Click  button to play back the file.

You can click the  Back button to back to the search interface.

Pre-play and post-play time can be set accordingly.



Pre-play time and post-play time is added to the time point of the tag.



Figure 6.15 Interface of Playback by Tag



Figure 6.16 Toolbar of Playback by Tag

Table 6.4 Detailed Explanation of Playback-by-tag Interface

Button	Operation	Button	Operation	Button	Operation
	Audio on/ Mute		Start/Stop clipping		30s forward
	30s reverse		Add default tag		Add customized tag
	Tag management		Speed down		Pause reverse play/ Reverse play/ Single-frame reverse play
	Pause play/ Play/ Single-frame play		Scaling up/down the time line		Speed up
	Previous day		Next day		Full Screen
	Exit		Stop		Digital Zoom
	Save the clips		Process bar		Video type



Playback progress bar: use the mouse to click any point of the progress bar or drag the progress bar to locate specific frames.

6.1.5 Smart Playback

Purpose:

The smart playback function provides an easy way to get through the less effective information. When you select the smart playback mode, the system will analyze the video containing the motion or VCA information, mark it with green color and play it in the normal speed while the video without motion will be played in the 16-time speed. The smart playback rules and areas are configurable.

Before you start:

To get the smart search result, the corresponding event type must be enabled and configured on the IP camera. Here we take the intrusion detection as an example.

1. Log in the IP camera by the web browser, and enable the intrusion detection by checking the checkbox of it. You may enter the motion detection configuration interface by Configuration> Advanced Configuration> Events> Intrusion Detection.



Figure 6.17 Setting Intrusion Detection on IP Camera

2. Configure the required parameters of intrusion detection, including area, arming schedule and linkage

methods. Refer to the user manual of smart IP camera for detailed instructions.

Steps:

1. Enter Playback interface.
Menu>Playback
2. Select the **Smart** in the drop-down list on the top-left side.

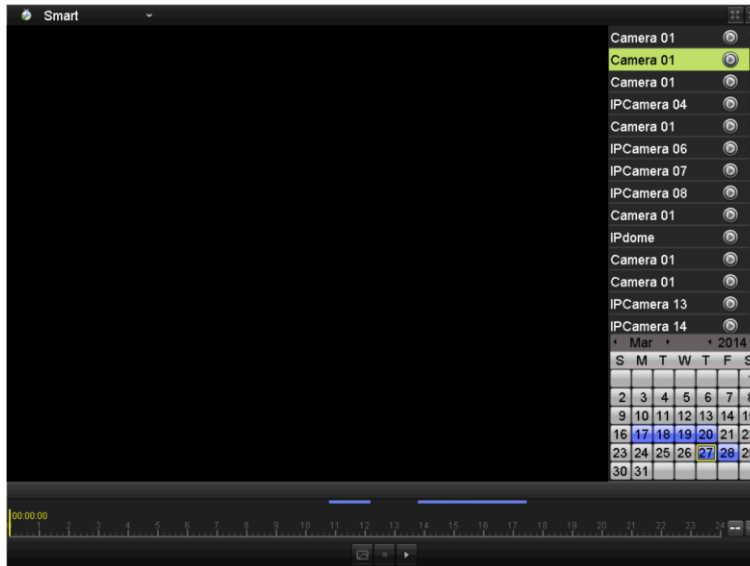


Figure 6. 18 Smart Playback Interface

Table 6. 5 Detailed Explanation of Smart Playback

Button	Operation	Button	Operation	Button	Operation
	Smart search		Stop		Pause play / Play
	Process bar		Scaling up/down the time line		Playback type

3. Select a camera in the camera list and select a date in the calendar.
4. Edit the smart search areas and rules.
 - 1) Click the button to enter the search area editing interface; the smart search area is set as full screen by default.

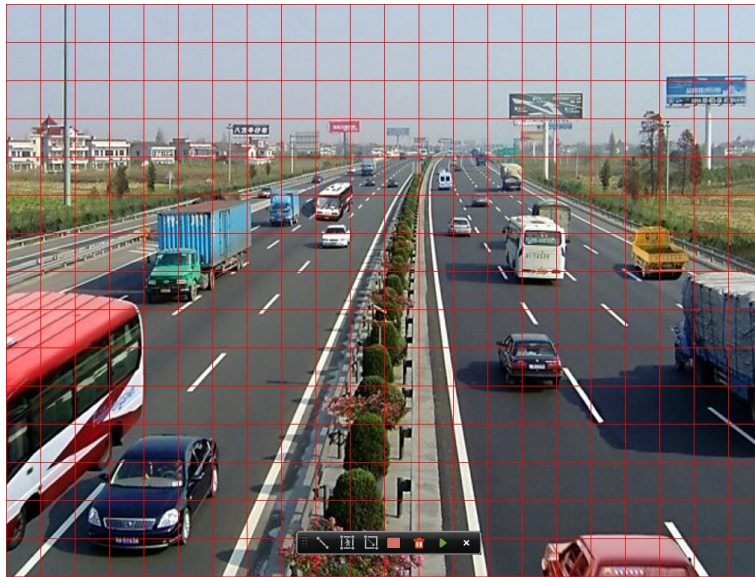



Figure 6.19 Draw Area of Smart Search

- 2) Set the rules and areas.





Intrusion Detection


Click the  button, and then specify 4 points to set a quadrilateral region for intrusion detection.



Only one region can be set.

Motion Detection

- i. Click the  to set the search area manually.
 - ii. Click and drag the mouse to draw target searching area(s), or click the  button to set the full screen as the area.
- 3) Click the  to search, and then the result will be displayed as  in the progress bar of the Smart Playback interface.

Or you can click the  button to clear all the set areas.

5. Click the  button to play.



Figure 6. 20 Smart Search Result



Playback progress bar: use the mouse to click any point of the progress bar to locate specific frames.

6.1.6 Playing Back by Searching System Log

Purpose:

Play back record file(s) associated with channels after searching system logs.

Steps:

1. Enter Log Information interface.

Menu>Maintenance>Log Information>Log Search



Figure 6. 21 Log Search Interface

2. Set search time and type, and click **Search**.
3. Choose a log with record file and click button to enter Playback interface.



If there is no record file at the time point of the log, the message box “No result found” will pop up.

Search Result						
No.	Major Type	Time	Minor Type	Parameter	Play	Details
187	Alarm	12-26-2013 11:25:54	Video Tamperin...	N/A		
188	Alarm	12-26-2013 11:26:01	Video Tamperin...	N/A		
189	Alarm	12-26-2013 11:26:12	Video Tamperin...	N/A		
190	Alarm	12-26-2013 11:26:17	Video Tamperin...	N/A		
191	Alarm	12-26-2013 11:26:23	Video Tamperin...	N/A		
192	Information	12-26-2013 11:26:51	System Running...	N/A	—	
193	Information	12-26-2013 11:27:02	System Running...	N/A	—	
194	Operation	12-26-2013 11:27:12	Remote Operati...	IP Camera	—	
195	Operation	12-26-2013 11:27:12	Remote Operati...	N/A	—	
196	Operation	12-26-2013 11:27:12	Remote Operati...	Device	—	
197	Operation	12-26-2013 11:30:12	Remote Operati...	IP Camera	—	
198	Operation	12-26-2013 11:30:12	Remote Operati...	N/A	—	
199	Operation	12-26-2013 11:30:12	Remote Operati...	Device	—	
200	Operation	12-26-2013 11:33:11	Remote Operati...	IP Camera	—	
Total: 1067 P: 2/11						

Figure 6. 22 Result of System Log Search

4. Playback interface.

The toolbar in the bottom part of Playback interface can be used to control playing process.



Figure 6. 23 Interface of Playback by Log

6.1.7 Playing Back External Files

Purpose:

Perform the following steps to search and play back record files stored in the external storage devices, e.g., USB flash drives, USB HDDs.

Before you start:

Please insert the external device(s) with record files into the device.

Steps:

1. Enter the Playback interface.
Menu>Playback
2. Click and select **External File** to enter the External File Playback interface.
The files stored in the external device are listed in the right-side list.
You can click the **Refresh** button to refresh the file list.




3. Select a record file and click  to play back it. And you can adjust the playback speed by clicking  and .



Figure 6. 24 Interface of External File Playback






6.2 Auxiliary Functions of Playback

6.2.1 Playing Back Frame by Frame

Purpose:

Play video files frame by frame, in order to check image details of the video when abnormal events happen.

Steps:

Go to Playback interface. If you choose playback of the record file: click button  and  until the speed changes to *Single* frame and one click on the playback screen represents playback of one frame. If you choose reverse playback of the record file: click button  and  until the speed changes to *Single* frame and one click on the playback screen represents reverse playback of one frame. It is also feasible to use button  in toolbar.

6.2.2 Digital Zoom

Steps:


1. Enter the Playback interface and play a record file. Refer to *Chapter 6.1.2* for the detailed information about searching and playback of the record files.
2. Click the  on the playback control toolbar to enter Digital Zoom mode.
3. Use the mouse to draw a red rectangle and the image within it will be enlarged up to 16 times.
4. You can right-click to exit the Digital Zoom mode.



Figure 6. 25 Draw Area for Digital Zoom

6.2.3 Reverse Playback of Multi-channel

Purpose:

You can play back record files of multi-channel reversely. Up to 16-ch (with 1280*720 resolution) simultaneous

reverse playback is supported; up to 4-ch (with 1920*1080P resolution) simultaneous reverse playback is supported and up to 1-ch (with 2560*1920 resolution) reverse playback is supported.

Steps:

1. Enter the Playback interface.

Menu>Playback

2. Check ☒ checkbox to select the channel(s) and double-click to select a date on the calendar.



If more than one channel is optional, the simultaneous playback will be activated.



Figure 6. 26 4-ch Synchronous Playback Interface

3. Click to play back the record files reversely.

Chapter 7 Backup

7.1 Backing up Record Files

Before you start:

Please insert the backup device(s) into the device.

7.1.1 Quick Export


Purpose:

Export record files to backup device(s) quickly.

Steps:

1. Enter Video Export interface.

Menu>Export>Normal

Choose the channel(s) you want to back up and click .



The time duration of record files on a specified channel cannot exceed one day. Otherwise, the message box “Max. 24 hours are allowed for quick export.” will pop up.

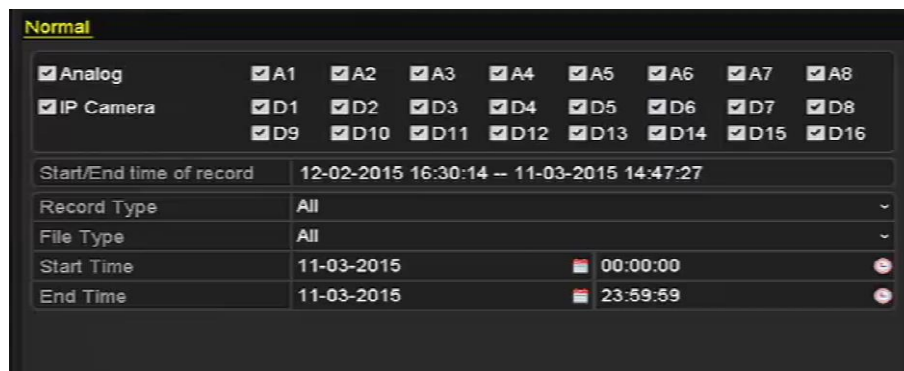


Figure 7. 1 Quick Export Interface

2. Export.

Go to Export interface, choose backup device and click  to start exporting.



Here we use USB Flash Drive and please refer to *Chapter 7.1.2 Backing up by Normal Video Search* for more backup devices supported by the device.



Figure 7. 2 Quick Export using USB1-1

Stay in the Exporting interface until all record files are exported.

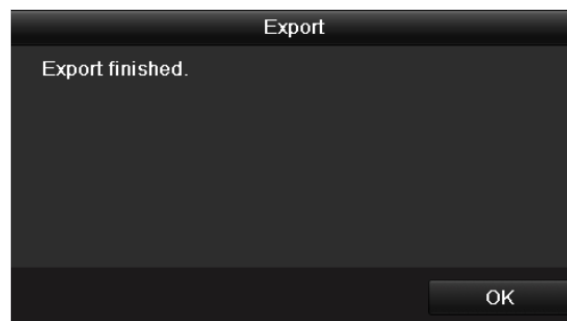



Figure 7. 3 Export Finished

3. Check backup result.

Choose the record file in Export interface and click button  to check it.



The Player player.exe will be exported automatically during record file export.

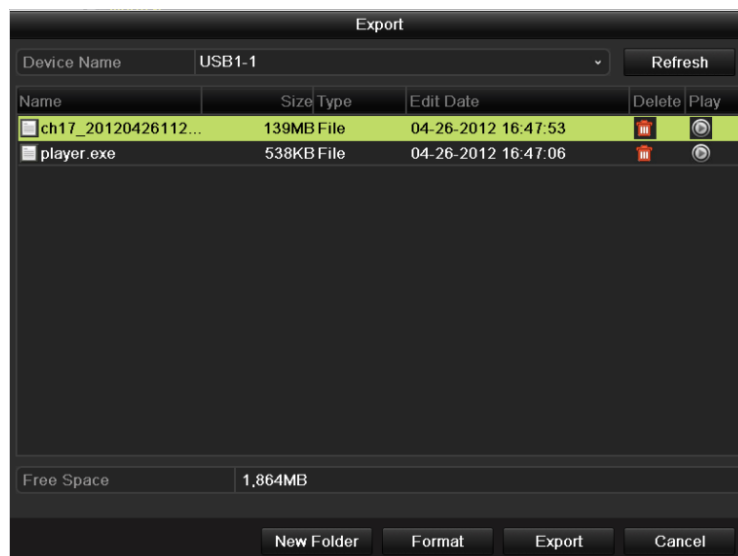


Figure 7. 4 Checkup of Quick Export Result Using USB1-1

7.1.2 Backing up by Normal Video Search

Purpose:

The record files can be backup to various devices, such as USB devices (USB flash drives, USB HDDs, USB writer) and DVD-R/W.

Backup using USB flash drives, USB HDDs, USB writer and DVD-R/W

Steps:

1. Enter Export interface.
Menu>Export>Normal
2. Set search condition and click **Search** to enter the search result interface.



- 1) Six different Record types are selectable: Continuous, Motion, Alarm, Motion | Alarm, Motion & Alarm, Command Triggered and Manual. The command triggered record is configured by the platform when the device accessed via the platform.
- 2) Two different File types are selectable: Unlocked and Locked.

Figure 7. 5 Normal Video Search for Backup

3. Select record files you want to back up.

Click button to play the record file if you want to check it.

Check the checkbox before the record files you want to back up.



The size of the currently selected files is displayed in the lower-left corner of the window.



Figure 7. 6 Result of Normal Video Search for Backup

4. Export.

Click **Export** and start backup.



If the inserted device is not recognized:

- Click **Refresh**.
- Reconnect device.
- Check for compatibility from vendor.

You can also format USB flash drives or USB HDDs via the device. USB writer and DVD-R/W cannot be formatted.



Figure 7. 7 Export by Normal Video Search using USB Flash Drive



Figure 7.8 Export by Normal Video Search using USB Writer

Stay in the Exporting interface until all record files are exported with pop-up message box “Export finished”.

5. Check backup result.

Choose the record file in Export interface and click button  to check it.



The Player player.exe will be exported automatically during record file export.

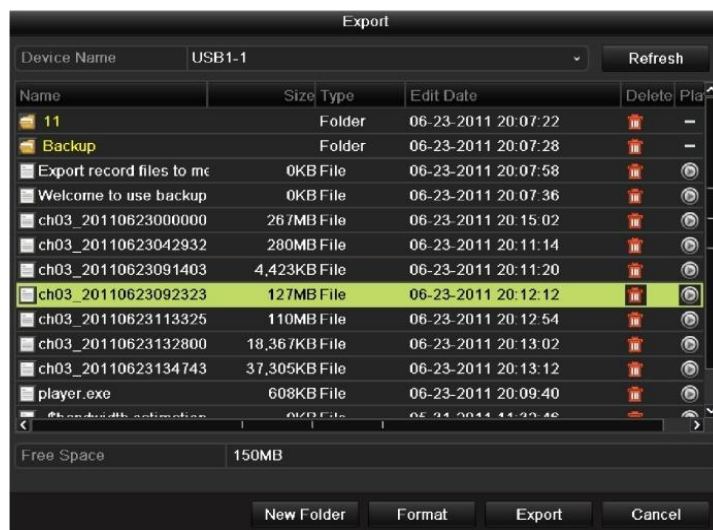


Figure 7.9 Checkup of Export Result using USB Flash Drive

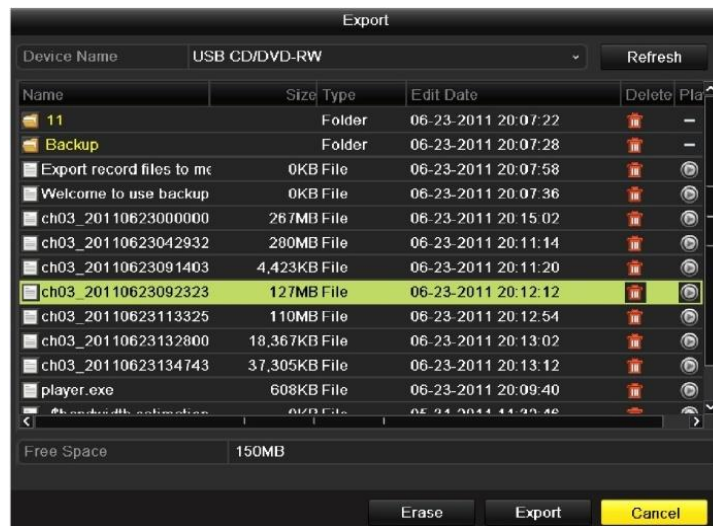


Figure 7.10 Checkup of Export Result using USB Writer

7.1.3 Backing up by Event Search

Purpose:

Back up event-related record files using USB devices (USB flash drives, USB HDDs, USB writer), or DVD-R/W. Quick Backup and Normal Backup are supported.

Steps:

1. Enter Export interface.

Menu>Export>Event

- 1) Select Alarm Input/Motion from the dropdown list of Event Type.



Here we take Alarm Input as an example.

- 2) Select the alarm input No. and time.
- 3) Click **Search** to enter the Search Result interface.

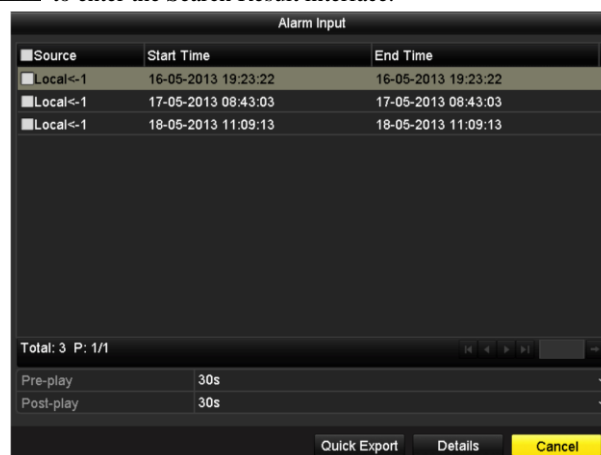


Figure 7.11 Event Search for Backup

2. Select record files to export.

- 1) Select an alarm input in the list and click **Quick Export** to enter Export interface.
- 2) Clicking **Details** will take you to the interface with detailed information of all channels triggered by the selected alarm input. You can view detailed information of the record file, e.g. start time, end time and file size.



The size of the currently selected files is displayed in the lower-left corner of the window.



Figure 7. 12 Event Details Interface

3. Export.

Click **Export** and start backup.



If the inserted USB device is not recognized:

- Click **Refresh**.
- Reconnect device.
- Check for compatibility from vendor.

You can also format USB flash drive or USB HDDs via the device.



Figure 7.13 Export by Event Using USB Flash Drive

Stay in the Exporting interface until all record files are exported with pop-up message “Export finished”.

4. Check backup result.



The Player player.exe will be exported automatically during record file export.

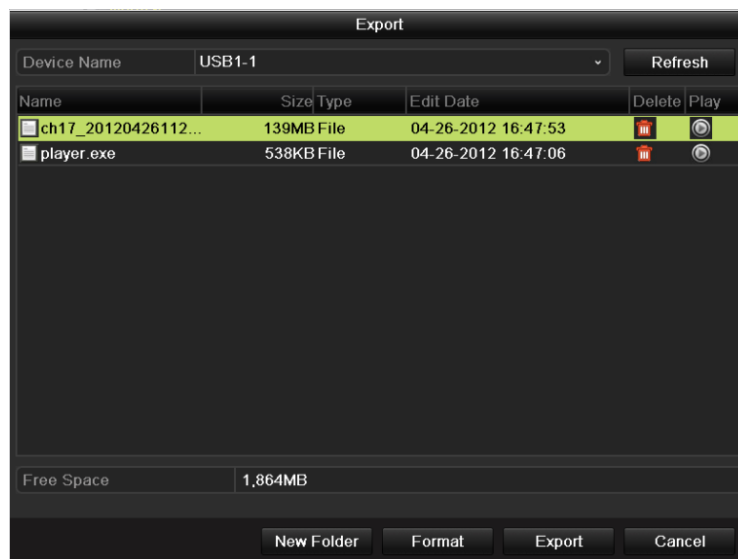




Figure 7.14 Checkup of Event Export Result Using USB Flash Drive

7.1.4 Backing up Video Clips

Purpose:

You may also select video clips to export directly during Playback, using USB devices (USB flash drives, USB HDDs, USB writer), or DVD-R/W.

Steps:

1. Enter Playback interface and play back the record file you want to set video clips.
Please refer to *Chapter 6.1 Playing Back Record Files*.
2. During playback, use buttons  and  in the playback toolbar to start or stop clipping record file(s).
3. Quit Playback interface after finishing clipping and you will then be prompted to save the clips.



A maximum of 30 clips can be selected for each channel.

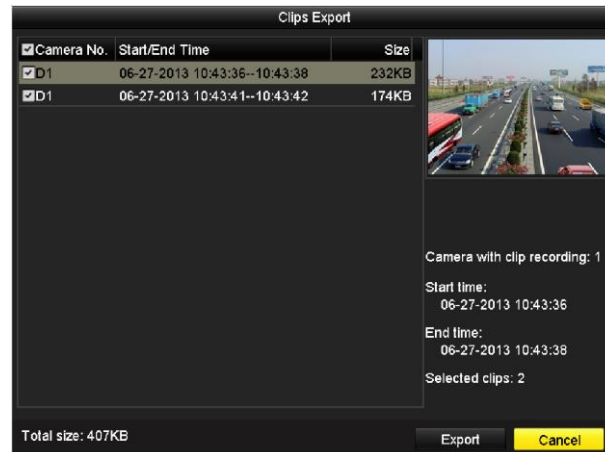


Figure 7. 15 Clips Export Interface

4. Click **Yes** to save video clips and enter Export interface, or click **No** to quit and do not save video clips.

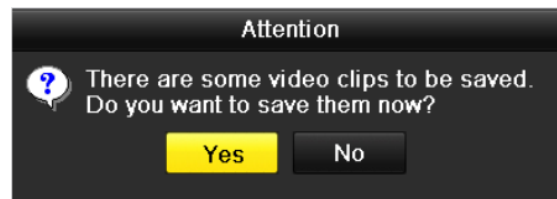


Figure 7. 16 Attention to Video Clip Saving

5. Export.

Click **Export** and start backup.



If the inserted USB device is not recognized:

- Click **Refresh**.
- Reconnect device.
- Check for compatibility from vendor.

You can also format USB flash drive or USB HDDs via the device.

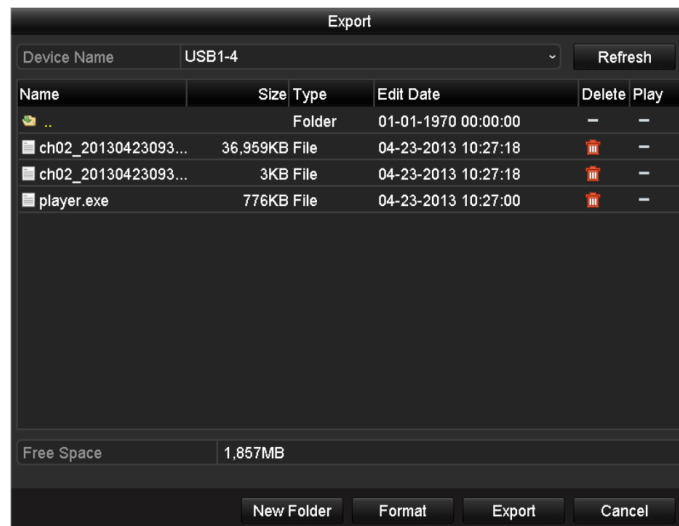


Figure 7. 17 Export Video Clips Using USB Flash Drive

Stay in the Exporting interface until all record files are exported with pop-up message “Export finished”.

6. Check backup result.



The Player player.exe will be exported automatically during record file export.

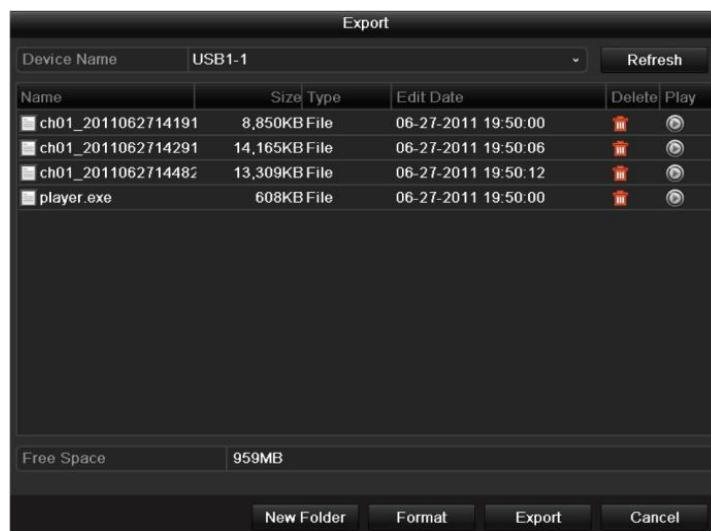


Figure 7. 18 Checkup of Video Clips Export Result Using USB Flash Drive

7.2 Managing Backup Devices

Management of USB flash drives and USB HDDs.

Steps:

1. Enter Search Result interface of record files.

Menu>Export>Normal

Set search condition and click **Search** to enter Search Result interface.



At least one channel shall be selected.

Normal

<input checked="" type="checkbox"/> Analog	<input checked="" type="checkbox"/> A1	<input checked="" type="checkbox"/> A2	<input checked="" type="checkbox"/> A3	<input checked="" type="checkbox"/> A4				
<input checked="" type="checkbox"/> IP Camera	<input checked="" type="checkbox"/> D1	<input checked="" type="checkbox"/> D2	<input checked="" type="checkbox"/> D3	<input checked="" type="checkbox"/> D4	<input checked="" type="checkbox"/> D5	<input checked="" type="checkbox"/> D6	<input checked="" type="checkbox"/> D7	<input checked="" type="checkbox"/> D8
Start/End time of record	07-09-2013 15:02:22 -- 07-15-2013 16:10:21							
Record Type	All							
File Type	All							
Start Time	07-15-2013			00:00:00				
End Time	07-15-2013			23:59:59				

Figure 7. 19 Normal Video Search for Backup

2. Select record files you want to back up.

Click **Export** to enter Export interface.



At least one record file shall be selected.

Search result

<input checked="" type="checkbox"/> Ca...	Start/End Time	Size	Play	Lock
<input checked="" type="checkbox"/> A1	04-25-2012 08:43:41--11:03:40	108,987KB		
<input checked="" type="checkbox"/> A1	04-25-2012 11:05:45--11:08:09	1,626KB		
<input checked="" type="checkbox"/> A1	04-25-2012 11:50:42--19:26:41	293,825KB		
<input checked="" type="checkbox"/> A1	04-25-2012 19:50:31--20:02:27	7,763KB		
<input checked="" type="checkbox"/> A1	04-26-2012 08:42:55--17:42:54	347,656KB		
<input checked="" type="checkbox"/> A2	04-25-2012 08:43:41--11:03:40	138,908KB		
<input checked="" type="checkbox"/> A2	04-25-2012 11:05:45--11:43:31	25,434KB		
<input checked="" type="checkbox"/> A2	04-25-2012 11:50:43--19:26:41	306,721KB		
<input checked="" type="checkbox"/> A2	04-26-2012 09:27:42--11:06:27	66,155KB		
<input checked="" type="checkbox"/> A2	04-26-2012 11:06:27--17:42:26	264,658KB		
<input checked="" type="checkbox"/> A3	04-25-2012 08:43:41--11:03:40	138,230KB		
<input checked="" type="checkbox"/> A3	04-25-2012 11:05:45--11:43:31	25,320KB		
<input checked="" type="checkbox"/> A3	04-25-2012 11:50:42--18:17:27	259,148KB		
<input checked="" type="checkbox"/> A3	04-26-2012 18:17:27--19:27:26	46,886KB		
<input checked="" type="checkbox"/> A3	04-26-2012 09:27:54--17:41:53	328,939KB		
Total: 78 P: 1/1				

Total size: 19,577MB

Export **Cancel**


HDD: 1
Start time: 04-25-2012 08:43:41
End time: 04-25-2012 11:03:40

Figure 7. 20 Result of Normal Video Search for Backup

3. Backup device management.

Click **New Folder** if you want to create a new folder in the backup device.

Select a record file or folder in the backup device and click  if you want to delete it.

Select a record file in the backup device and click  to play it.

Click **Format** to format the backup device. Two kinds of file system can be configurable, including FAT32 and NTFS.



If the inserted USB device is not recognized:

- Click **Refresh**.
- Reconnect device.
- Check for compatibility from vendor.

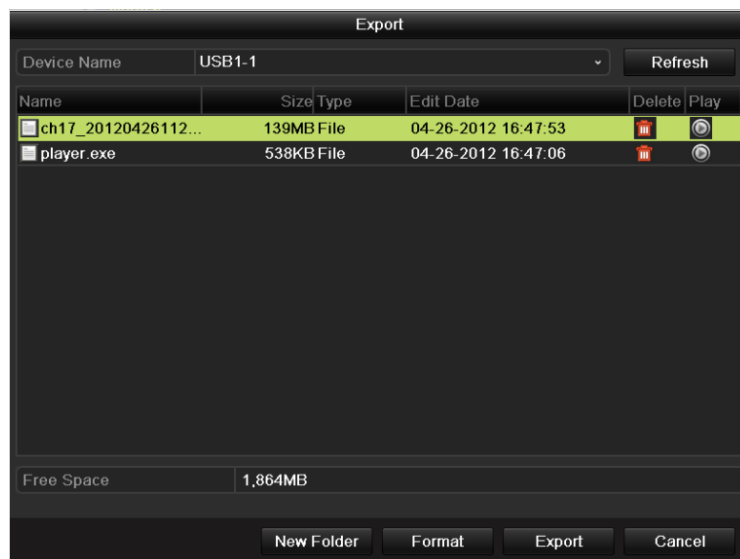


Figure 7. 21 USB Flash Drive Management

Management of USB writers and DVD-R/W

1. Enter Search Result interface of record files.

Menu>Export>Normal

Set search condition and click **Search** to enter Search Result interface.



At least one channel shall be selected.

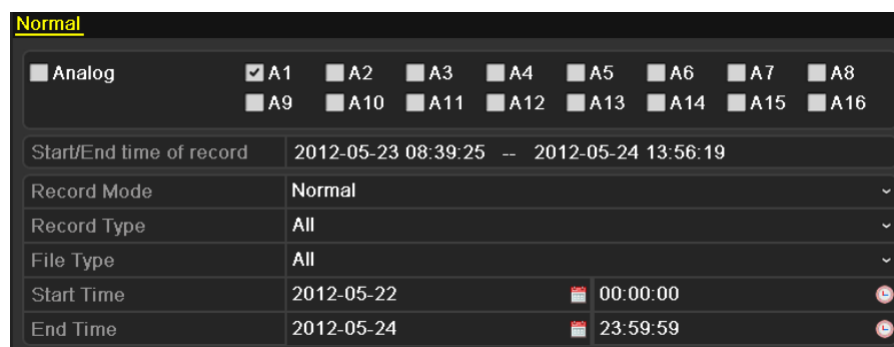


Figure 7. 22 Normal Video Search for Backup

2. Select record files you want to back up.

Click **Export** to enter Export interface.



At least one record file shall be selected.



Figure 7. 23 Result of Normal Video Search for Backup

3. Backup device management.

Click **Erase** if you want to erase the files from a re-writable CD/DVD.



There must be a re-writable CD/DVD when you make this operation.



If the inserted USB writer or DVD-R/W is not recognized:

- Click **Refresh**.
- Reconnect device.
- Check for compatibility from vendor.



Figure 7. 24 USB Writer Management

Chapter 8 Alarm Settings

8.1 Setting Motion Detection

Steps:

1. Enter Motion Detection interface and choose a camera you want to set motion detection.

Menu> Camera> Motion

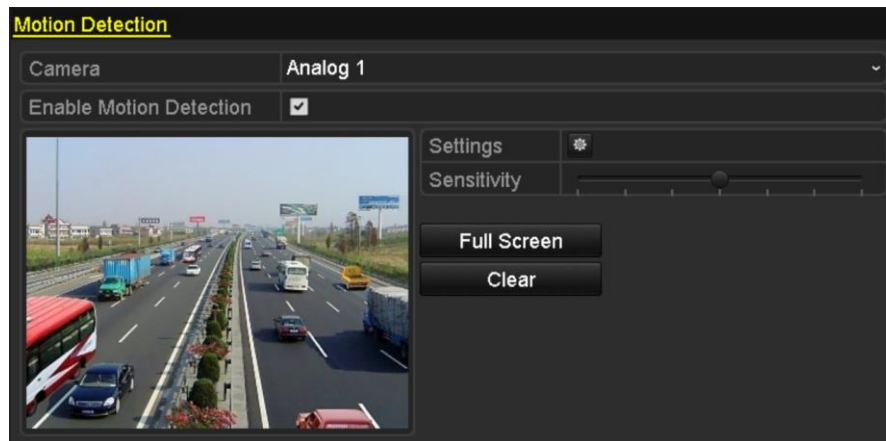


Figure 8.1 Motion Detection Settings Interface

2. Set detection area and sensitivity.

Check ☒ checkbox to enable motion detection, use the mouse to draw detection area(s) and drag the sensitivity bar to set sensitivity.

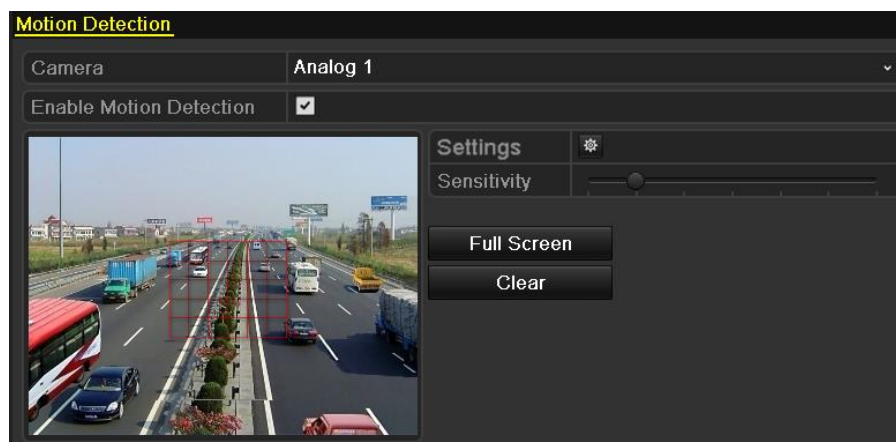


Figure 8.2 Set Detection Area and Sensitivity

3. Click to configure the motion detection settings. Click **Trigger Channel** tab and select one or more channels which will start to record or become full-screen monitoring when motion alarm is triggered.

Click **Apply** to save the settings.

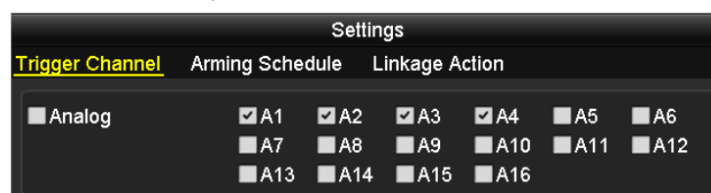


Figure 8.3 Set Trigger Camera of Motion Detection

4. Set arming schedule of the channel.

Select **Arming Schedule** tab and set arming schedule of the channel.

Choose one day of a week and up to eight time periods can be set within each day. Set up arming schedule of other days of a week. You can also use **Copy** to copy an arming schedule to other days. Click **Apply** to save the settings.



Time periods shall not be repeated or overlapped.

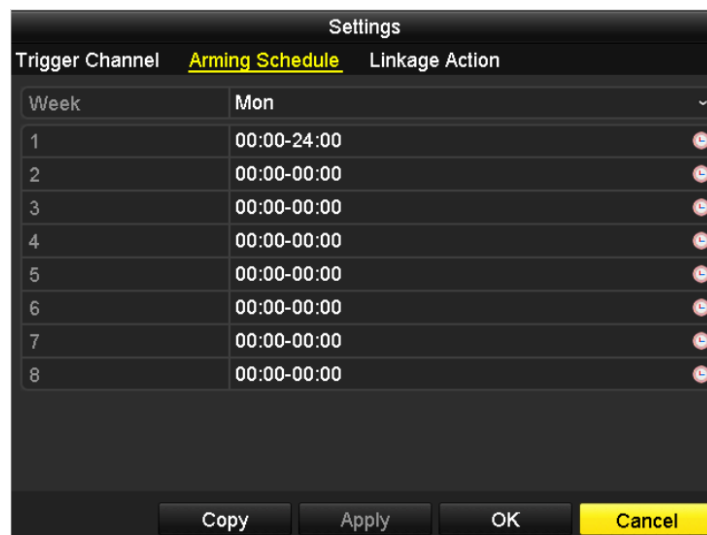


Figure 8. 4 Set Arming Schedule of Motion Detection

5. Click **Linkage Action** tab to set alarm response actions of motion detection (please refer to *Chapter 8.6*).

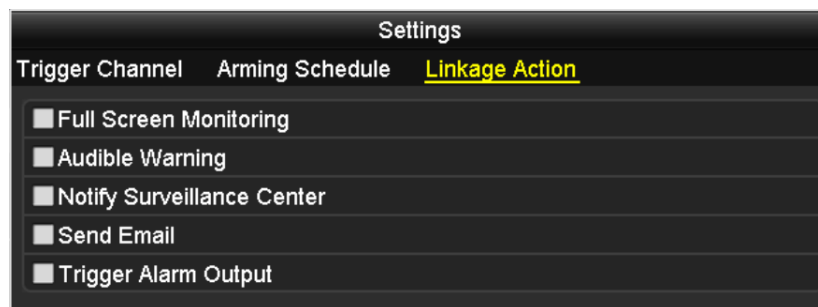


Figure 8. 5 Set Alarm Response Actions of Motion Detection

Click **Apply** to save the settings. Click **OK** to complete the motion detection settings of the channel.

6. If you want to set motion detection for another channel, repeat the above steps or just click **Copy** in the Motion Detection interface to copy the above settings to it.



You are not allowed to copy the “Trigger Channel” action and motion detection settings to IP camera.



Figure 8. 6 Copy Settings of Motion Detection

8.2 Setting Sensor Alarms

Purpose:

You can set handling method of an external sensor alarm.



DS-7600HI-ST series HDVR only supports the sensor alarm of the IPC that connected to it.

Steps:

1. Enter Alarm Settings interface and select an alarm input.

Menu> Configuration> Alarm

Alarm Status	Alarm Input	Alarm Output
Alarm Input List		
Alarm Input No.	Alarm Name	Alarm Type
172.6.23.105:8000<-1		N.O
Alarm Output List		
Alarm Output No.	Alarm Name	Dwell Time
172.6.23.105:8000->1		5s

Figure 8. 7 Alarm Status Interface

2. Select **Alarm Input** tab to enter Alarm Input Settings interface, edit the name for the alarm input and set the handling method of the selected alarm input.

Check ☒ checkbox to enable the alarm input and click to configure the alarm settings.

Alarm Status	Alarm Input	Alarm Output
Alarm Input No.	172.6.23.105:8000<-1	
Alarm Name		
Type	N.O	
Enable	<input checked="" type="checkbox"/>	
Settings		

Figure 8. 8 Alarm Input Settings Interface

3. Select **Trigger Channel** tab and select one or more channels which will start to record or become full-screen monitoring when an external alarm is input. Click **Apply** to save the settings.
4. Select **Arming Schedule** tab to set the channel's arming schedule.
Choose one day of a week and up to eight time periods can be set within each day. Set up arming schedule of other days of a week. You can also use **Copy** to copy an arming schedule to other days. Click

Apply to save the settings.



Time periods shall not be repeated or overlapped.

Week	Mon
1	00:00-24:00
2	00:00-00:00
3	00:00-00:00
4	00:00-00:00
5	00:00-00:00
6	00:00-00:00
7	00:00-00:00
8	00:00-00:00

Figure 8. 9 Set Arming Schedule of Alarm Input

5. Select **Linkage Action** tab to set alarm response actions of the alarm input (please refer to *Chapter 8.6*).
6. If necessary, select **PTZ Linking** tab and set PTZ linkage of the alarm input.

Set PTZ linking parameters and click **Apply** to save the settings. Click **OK** to complete the settings of the alarm input.



Please check whether the PTZ or speed dome supports PTZ linkage.

One alarm input can trigger presets, patrol or pattern of more than one channel. But presets, patrols and patterns are exclusive.

PTZ Linking	Analog 1
Call Preset	1
Preset	1
Call Patrol	1
Patrol	1
Call Pattern	1
Pattern	1

Figure 8. 10 Set PTZ Linking of Alarm Input

7. If you want to set alarm settings of another alarm input, repeat the above steps or just copy the above

settings to it by clicking **Copy** in Alarm Input Settings interface.

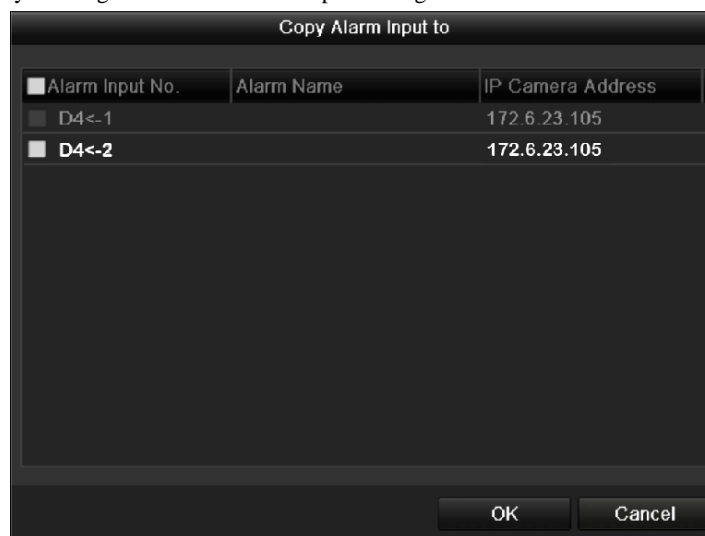


Figure 8. 11 Copy Settings of Alarm Input

8.3 Detecting Video Loss

Purpose:

Detect video loss of a channel and take alarm response action(s).

Steps:

1. Enter Video Loss interface and select a channel you want to detect.

Menu> Camera> Video Loss

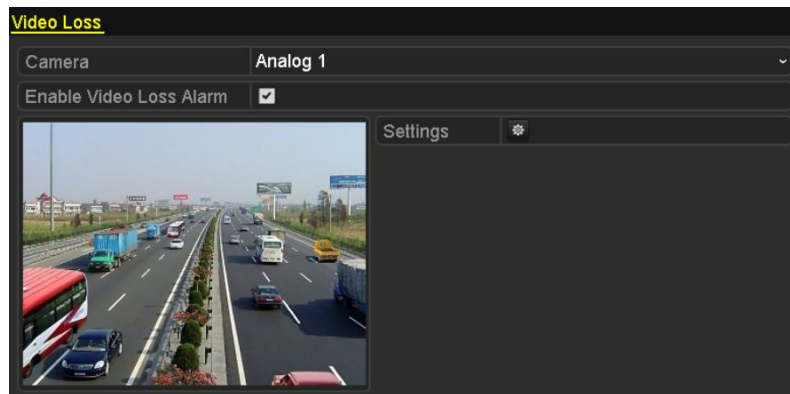



Figure 8.12 Video Loss Settings Interface

2. Set handling method of video loss.

Check ☒ checkbox to enable video loss alarm, and click  to set handling method of video loss.

3. Set arming schedule of the channel.

Select **Arming Schedule** tab to set the channel's arming schedule.

Choose one day of a week and up to eight time periods can be set within each day. Set up arming schedule of other days of a week. You can also use **Copy** to copy an arming schedule to other days. Click **Apply** to save the settings.



Time periods shall not be repeated or overlapped.

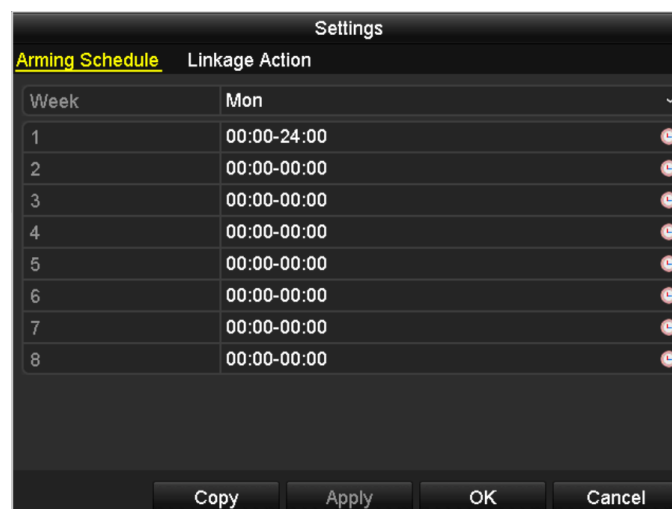


Figure 8. 13 Set Arming Schedule of Video Loss

4. Select **Linkage Action** tab to set up alarm response action of video loss (please refer to *Chapter 8.6*).
Click **Apply** to save the settings and click **OK** to complete the video loss settings of the channel.
5. If you want to set video loss handling method for another channel, repeat the above steps or just click **Copy** in Video Loss interface to copy the above settings to it.



Copying video loss settings to IP camera is not supported.



Figure 8. 14 Copy Settings of Video Loss

8.4 Detecting Video Tampering

Purpose:


Trigger alarm and take alarm response action(s) when the lens is covered.

Steps:

1. Enter Video Tampering interface and select a channel you want to detect video tampering.
Menu> Camera> Video Tampering Detection



Figure 8.15 Video Tampering Detection Settings Interface

2. Set the video tampering handling method of the channel.
Check ☒ checkbox to enable detecting video tampering.
Drag the sensitivity bar and choose a proper sensitivity level. Use the mouse to draw an area you want to detect video tampering.
3. Click  to configure the video tampering settings. Set arming schedule and alarm response actions of the channel.
 - 1) Click **Arming Schedule** tab to set the channel's arming schedule.
 - 2) Choose one day of a week and up to eight time periods can be set within each day. Set up arming schedule of other days of a week. You can also use **Copy** to copy an arming schedule to other days. Click **Apply** to save the settings.



Time periods shall not be repeated or overlapped.

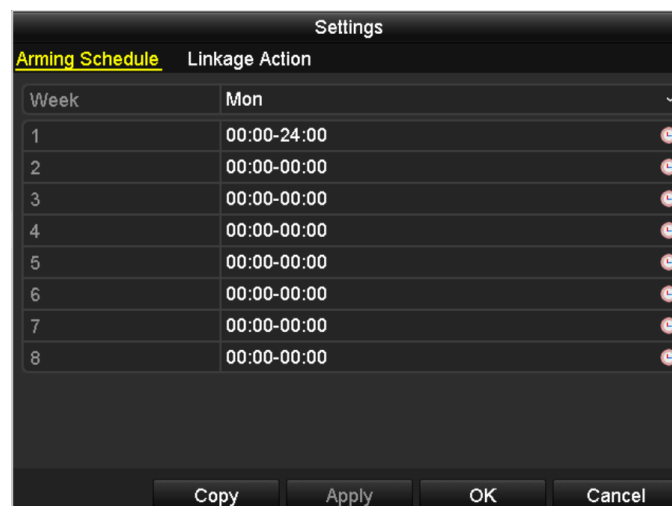


Figure 8. 16 Set Arming Schedule of Video Tampering

4. Select **Linkage Action** tab to set alarm response actions of video tampering alarm (please refer to *Chapter 8.6*).

Click **Apply** to save the settings and click **OK** to complete the video tampering settings of the channel.

5. If you want to set up video loss handling method for another channel, repeat step two and three, or just click **Copy** in Video Tamper interface to copy the above settings to it.



Copying video tampering settings to IP camera is not supported.



Figure 8. 17 Copy Settings of Video Tampering

8.5 Detecting VCA Alarm

Purpose:

The NVR can receive the VCA alarm sent by IP camera, and the VCA detection must be enabled and configured on the IP camera settings interface first. Refer to the user manual of IP camera for detailed instructions to set the VCA rules.

Steps:

1. Enter VCA Alarm interface of Camera Management and select a camera you want to detect VCA alarm.

Menu> Camera> VCA



The selected camera must support the VCA function.

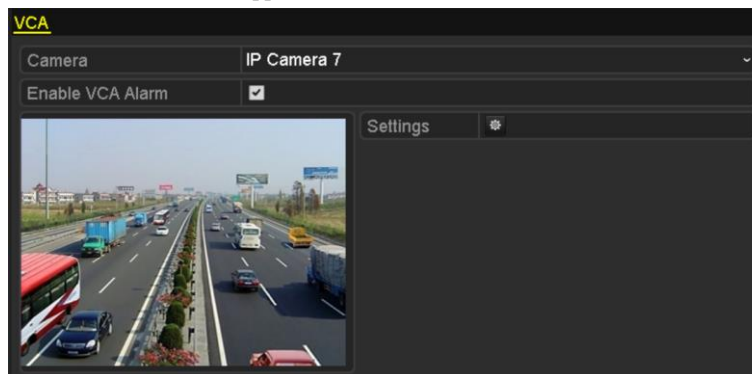


Figure 8.18 VCA Alarm Setting Interface

2. Check the **Enable VCA Alarm** checkbox and click **Settings** button to set up its alarm response actions.
3. Select Trigger Channel tab and select one or more channels which will start to record or become full-screen monitoring when a VCA alarm is triggered, and click **Apply** to save the settings.
4. Select **Arming Schedule** tab to set the arming schedule of handling actions.



Figure 8.19 Set Arming Schedule of VCA Alarm

Choose one day of a week and Max. eight time periods can be set within each day, and click **Apply** to save the settings.



Time periods shall not be repeated or overlapped.

Repeat the above steps to set up arming schedule of other days of a week. You can also use **Copy** button to copy an arming schedule to other days.

5. Select **Linkage Action** tab to set up alarm response actions of the alarm input (please referⁱ to *Chapter 8.7*).
6. If necessary, select PTZ Linking tab and set PTZ linkage of the VCA alarm, refer to step 6 of *Chapter 8.2 Setting Sensor Alarms*.
7. Click the **OK** button to complete the VCA alarm settings of the channel.

8.6 Handling Exceptions

Purpose:

Exception settings refer to the handling method of various exceptions, e.g.

- **HDD Full:** The HDD is full.
- **HDD Error:** Writing HDD error, unformatted HDD, etc.
- **Network Disconnected:** Disconnected network cable.
- **IP Conflicted:** Duplicated IP address.
- **Illegal Login:** Incorrect user ID or password.
- **Video Signal Exception:** Unstable video signal.
- **Input / Output Video Standard Mismatch:** I/O video standards do not match.
- **Record Exception:** No space for saving recorded files.



Input / Output Video Standard Mismatch and Video Signal Exception are not supported by IP camera.

Steps:

Enter Exceptions interface and handle various exceptions.

Menu> Configuration> Exceptions

Please refer to *Chapter 8.6* for detailed alarm response actions.

Exception	
Enable Event Hint	<input checked="" type="checkbox"/>
Event Hint Settings	
Exception Type	HDD Full
Audible Warning	<input type="checkbox"/>
Notify Surveillance Center	<input type="checkbox"/>
Send Email	<input type="checkbox"/>
Trigger Alarm Output	<input type="checkbox"/>

Figure 8. 20 Exceptions Settings Interface

8.7 Setting Alarm Response Actions

Purpose:

Alarm response actions will be activated when an alarm or exception occurs, including Full Screen Monitoring, Audible Warning (buzzer), Notify Surveillance Center, Send Email and Trigger Alarm Output.

Full Screen Monitoring

When an alarm is triggered, the local monitor (HDMI/VGA or BNC monitor) display in full screen the video image from the alarming channel configured for full screen monitoring.

If alarms are triggered simultaneously in several channels, their full-screen images will be switched at an interval of 10 seconds (default dwell time). A different dwell time can be set by going to Menu > Configuration > Live View > Full Screen Monitoring Dwell Time.

Auto-switch will terminate once the alarm stops and you will be taken back to the Live View interface.



You must select during “Trigger Channel” settings the channel(s) you want to make full screen monitoring.

Audible Warning

Trigger an audible *beep* when an alarm is detected.

Notify Surveillance Center

Sends an exception or alarm signal to remote alarm host when an event occurs. The alarm host refers to the PC installed with Remote Client.



The alarm signal will be transmitted automatically at detection mode when remote alarm host is configured. Please refer to *Chapter 9.2.6* for details of alarm host configuration.

Send Email

Send an email with alarm information to a user or users when an alarm is detected.

Please refer to *Chapter 9.2.9* for details of Email configuration.

Trigger Alarm Output

Trigger an alarm output when an alarm is triggered.

Steps:

1. Enter Alarm Output interface.

Menu> Configuration> Alarm> Alarm Output

Select an alarm output and set alarm name and dwell time.




If “Manually Clear” is selected in the dropdown list of Dwell Time, you can clear it only by going to Menu> Manual> Alarm and clicking **Clear All**.

Alarm Status	Alarm Input	Alarm Output
Alarm Output No.	172.6.23.105:8000->1	
Alarm Name		
Dwell Time	5s	
Settings	⚙️	

Figure 8. 21 Alarm Output Settings Interface

- Set arming schedule of the alarm output.

Click  to set the arming schedule of alarm output. Choose one day of a week and up to 8 time periods can be set within each day.



Time periods shall not be repeated or overlapped.

Settings	
Arming Schedule	
Week	Mon
1	00:00-24:00
2	00:00-00:00
3	00:00-00:00
4	00:00-00:00
5	00:00-00:00
6	00:00-00:00
7	00:00-00:00
8	00:00-00:00

Copy Apply OK Cancel

Figure 8. 22 Set Arming Schedule of Alarm Output

- Repeat the above steps to set up arming schedule of other days of a week. You can also click **Copy** to copy an arming schedule to other days. Click **OK** to complete the settings of the alarm output.
- You can also click **Copy** in Alarm Output interface to copy the above settings to another channel.

Copy Alarm Output to	
Alarm Output No.	Alarm Name
172.6.23.105:8000->1	
172.6.23.105:8000->2	

OK Cancel

Figure 8. 23 Copy Settings of Alarm Output

8.8 Triggering or Clearing Alarm Output Manually

Purpose:

Sensor alarm can be triggered or cleared manually. If “Manually Clear” is selected in the dropdown list of dwell time of an alarm output, the alarm can be cleared only by clicking **Clear** button in the following interface.

Steps:


Select the alarm output you want to trigger or clear and make related operations.

Menu> Manual> Alarm

Click **Trigger** / **Clear** button if you want to trigger or clear an alarm output.

Click **Trigger All** button if you want to trigger all alarm outputs.

Click **Clear All** button if you want to clear all alarm output.

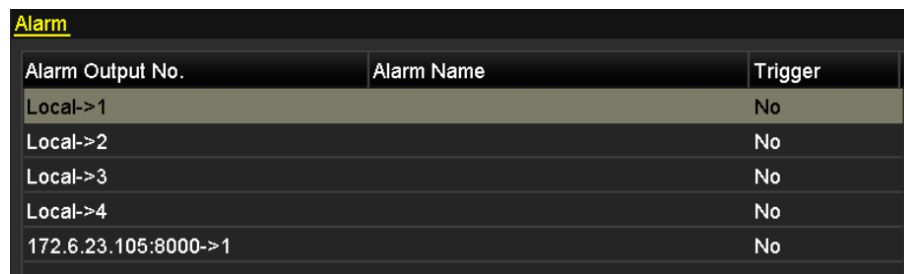

Alarm Output No.	Alarm Name	Trigger
Local->1		No
Local->2		No
Local->3		No
Local->4		No
172.6.23.105:8000->1		No

Figure 8. 24 Clear or Trigger Alarm Output Manually

Chapter 9 Network Settings

9.1 Configuring General Settings

Purpose:

Network settings must be properly configured before you operate device over network.

Steps:

1. Enter the Network Settings interface.

Menu > Configuration > Network

General	PPPOE	DDNS	NTP	Email	SNMP	UPnP	More Settings
NIC Type	10M/100M/1000M Self-adaptive						
Enable DHCP	<input type="checkbox"/>						
IPv4 Address	172 . 6 . 21 . 110						
IPv4 Subnet Mask	255 . 255 . 255 . 0						
IPv4 Default Gateway	172 . 6 . 21 . 1						
IPv6 Address 1	fe80::240:48ff:fe7e:9262/64						
IPv6 Address 2							
IPv6 Default Gateway							
MAC Address	00:40:3d:7e:92:62						
MTU(Bytes)	1500						
Preferred DNS Server							
Alternate DNS Server							

Figure 9. 1 Network Settings Interface



DS-7604HI-ST only supports 10M/100Mbps NIC type.

2. Select the **General** tab.
3. In the **General Settings** interface: you can configure the following settings: NIC Type, IPv4 Address, IPv4 Subnet Mask, IPv4 Gateway, MTU and DNS Server.

If the DHCP server is available, you can check the checkbox of **DHCP** to automatically obtain an IP address and other network settings from that server.



The valid value range of MTU is 500 ~ 9676.

4. After having configured the general settings, click **Apply** to save the settings.

9.2 Configuring Advanced Settings

9.2.1 Configuring PPPoE Settings

Purpose:

Your device also allows access by Point-to-Point Protocol over Ethernet (PPPoE).

Steps:

1. Enter the **Network Settings** interface.
Menu > Configuration > Network
2. Select the **PPPoE** tab to enter the PPPoE Settings interface.

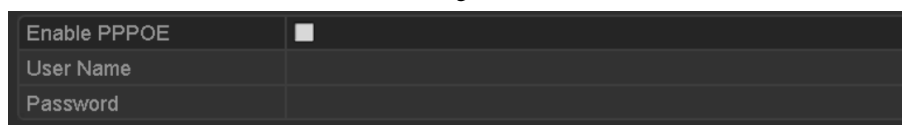


Figure 9.2 PPPoE Settings Interface

3. Check ☒ checkbox to enable PPPoE.
4. Enter **User Name**, and **Password** for PPPoE access.



The User Name and Password should be assigned by your ISP.

5. Click the **Apply** button to save and exit the interface.
6. After successful settings, the system asks you to reboot the device to activate the new settings, and the PPPoE dial-up is automatically connected after reboot.

You can go to Menu > Maintenance > System Info > Network interface to view the status of PPPoE connection. Please refer to *Chapter 12.1.5 Viewing Network Information* for PPPoE status.

9.2.2 Configuring DDNS Settings

Purpose:

If your device is set to use PPPoE as its default network connection, you may set Dynamic DNS (DDNS) to be used for network access.

Prior registration with your ISP is required before configuring the system to use DDNS.

Steps:

1. Enter the Network Settings interface.
Menu > Configuration > Network
2. Select the **DDNS** tab to enter the DDNS Settings interface.

Enable DDNS	<input type="checkbox"/>
DDNS Type	HiDDNS
Server Address	www.hiddns.com
Device Domain Name	
Status	Off-Line
User Name	
Password	
Confirm	

Figure 9. 3 DDNS Settings Interface

3. Check ☒ checkbox to enable DDNS.
4. Select **DDNS Type**. Five different DDNS types are selectable: IPSever, DynDNS, PeanutHull, NO-IP and HiDDNS.

- **IPSever:** Enter **Server Address** for IPSever, and other fields are read only.

Enable DDNS	<input checked="" type="checkbox"/>
DDNS Type	IPSever
Server Address	
Device Domain Name	
Status	Off-Line
User Name	
Password	
Confirm	

Figure 9. 4 IPSever Settings Interface

- **DynDNS:**

- 1) Enter **Server Address** for DynDNS (e.g. members.dyndns.org).
- 2) In the **Device Domain Name** text field, enter the domain obtained from the DynDNS website.
- 3) Enter the **User Name** and **Password** registered in the DynDNS website.

Enable DDNS	<input checked="" type="checkbox"/>
DDNS Type	DynDNS
Server Address	
Device Domain Name	
Status	Off-Line
User Name	
Password	
Confirm	

Figure 9. 5 DynDNS Settings Interface

- **PeanutHull:** Enter **User Name** and **Password** obtained from the PeanutHull website, and other fields are read only.

Enable DDNS	<input checked="" type="checkbox"/>
DDNS Type	PeanutHull
Server Address	
Device Domain Name	
Status	Off-Line
User Name	
Password	
Confirm	

Figure 9. 6 Peanut Hull Settings Interface

• **NO-IP:**

Enter the account information in the corresponding fields.

- 1) Enter **Server Address** for NO-IP.
- 2) In the **Device Domain Name** text field, enter the domain obtained from the NO-IP website (www.no-ip.com).
- 3) Enter the **User Name** and **Password** registered in the NO-IP website.

Enable DDNS	<input checked="" type="checkbox"/>
DDNS Type	NO-IP
Server Address	
Device Domain Name	
Status	Off-Line
User Name	
Password	
Confirm	

Figure 9. 7 NO-IP Settings Interface

-
- **HiDDNS:** You need to enter the **Server Address** and **Device Domain Name** for HiDDNS, and other fields are read only.

- 1) Edit the **Server Address** of the HiDDNS server. By default, www.hik-online.com will be automatically available in the **Server Address** field when **HiDDNS** is selected.
- 2) Enter the **Device Domain Name**. You can register the device domain name in the HiDDNS server first and then enter the name to the **Device Domain Name** in the device; you can also enter the domain name directly on the device to create a new one.




If a new device domain name is defined in the device, it will replace the old one registered on the server.

Enable DDNS	<input checked="" type="checkbox"/>
DDNS Type	HiDDNS
Server Address	www.hiddns.com
Device Domain Name	
Status	Off-Line
User Name	
Password	
Confirm	

Figure 9. 8 HiDDNS Settings Interface


Register the device on the HiDDNS server.


- 1) Go to the HiDDNS website: www.hik-online.com.
- 2) Click [Register new user](#) to register an account if you do not have one and use the account to log in.

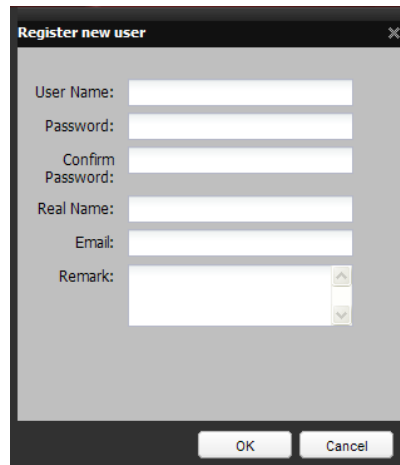

A dialog box titled "Register new user" with a close button (X) in the top right corner. It contains the following fields: User Name, Password, Confirm Password, Real Name, Email, and Remark (with a text area and up/down arrows). At the bottom are "OK" and "Cancel" buttons.

Figure 9. 9 Register an Account

- 3) In the Device Management interface, click  to register the device.

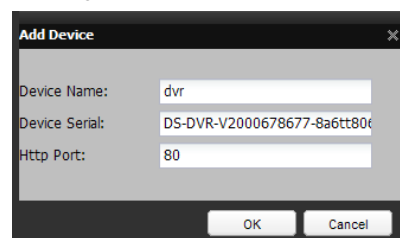

A dialog box titled "Add Device" with a close button (X) in the top right corner. It contains the following fields: Device Name (with value "dvr"), Device Serial (with value "DS-DVR-V2000678677-8a6tt806"), and Http Port (with value "80"). At the bottom are "OK" and "Cancel" buttons.

Figure 9. 10 Register the Device



The device name can only contain the lower-case English letter, numeric and '-'; and it must start with the lower-case English letter and cannot end with '-'.

Access the Device via Web Browser or Client Software

After having successfully registered the device on the HiDDNS server, you can access your device via web browser or Client Software with the **Device Domain Name (Device Name)**.

- **OPTION 1: Access the Device via Web Browser**

Open a web browser, and enter `http://www.hik-online.com/alias` in the address bar. Alias refers to the **Device Domain Name** on the device or the **Device Name** on the HiDDNS server.

Example: `http://www.hik-online.com/dvr`



If you mapped the HTTP port on your router and changed it to port No. except 80, you have to enter `http://www.hik-online.com/alias:HTTP port` in the address bar to access the device. You can refer to *Chapter 9.2.10* for the mapped HTTP port No.

- **OPTION 2: Access the Devices via iVMS-4200**

For iVMS-4200, in the Add Device window, select ☒ **HiDDNS** and then edit the device information.

Nickname: Edit a name for the device as you want.

Server Address: `www.hik-online.com`

Device Domain Name: It refers to the **Device Domain Name** on the device or the **Device Name** on the HiDDNS server you created.


User Name: Enter the user name of the device. By default it is admin.

Password: Enter the password of the device. By default it is 12345.



The default password (12345) for the Admin account is for first-time log-in purposes only. You must change this default password to better protect against security risks, such as the unauthorized access by others to the product that may prevent the product from functioning properly and/or lead to other undesirable consequences.

Figure 9. 11 Access Device via iVMS4200

5. Click  to save and exit the interface.

9.2.3 Configuring NTP Server Settings

Purpose:

A Network Time Protocol (NTP) Server can be configured on your device to ensure the accuracy of system

date/time.

Steps:

1. Enter the Network Settings interface.
Menu > Configuration > Network
2. Select the **NTP** tab to enter the NTP Settings interface.

Enable NTP	<input checked="" type="checkbox"/>
Interval (min)	60
NTP Server	210.72.145.44
NTP Port	123

Figure 9. 12 NTP Settings Interface

3. Check ☒ checkbox to enable NTP.
4. Configure the following NTP settings:
 - **Interval:** Time interval between the two synchronizing actions with NTP server. The unit is minute.
 - **NTP Server:** IP address of NTP server.
 - **NTP Port:** Port of NTP server.
5. Click **Apply** to save and exit the interface.



The time synchronization interval can be set from 1 to 10080min, and the default value is 60min. If the device is connected to a public network, you should use a NTP server that has a time synchronization function, such as the server at the National Time Center (IP Address: 210.72.145.44). If the device is setup in a more customized network, NTP software can be used to establish a NTP server used for time synchronization.

9.2.4 Configuring SNMP Settings

Purpose:

You can use SNMP protocol to get device status and parameters related information.

Steps:


1. Enter the Network Settings interface.
Menu > Configuration > Network
2. Select the **SNMP** tab to enter the SNMP Settings interface.

Enable SNMP	<input checked="" type="checkbox"/>
SNMP Version	V2
SNMP Port	161
Read Community	public
Write Community	private
Trap Address	
Trap Port	162

Figure 9. 13 SNMP Settings Interface

3. Check ☒ checkbox to enable SNMP.
4. Configure the SNMP settings.

- **Trap Address:** IP Address of SNMP host.
- **Trap Port:** Port of SNMP host.

5. Click  to save and exit the interface.



Before setting the SNMP, please download the SNMP software and manage to receive the device information via SNMP port. By setting the Trap Address, the device is allowed to send the alarm event and exception message to the surveillance center.

9.2.5 Configuring Remote Alarm Host Settings

Purpose:

With a remote alarm host configured, the device will send the alarm event or exception message to the host when an alarm is triggered. The remote alarm host must have the CMS (Client Management System) software installed.

Steps:

1. Enter the Network Settings interface.
Menu > Configuration > Network
2. Select the **More Settings** tab to enter the More Settings interface.

Alarm Host IP	
Alarm Host Port	0
Server Port	8000
HTTP Port	80
Multicast IP	
RTSP Port	554
Enable HTTPS	<input checked="" type="checkbox"/>
HTTPS Port	443
Enable High-speed Download	<input type="checkbox"/>


Figure 9. 14 More Settings Interface

3. Enter **Alarm Host IP** and **Alarm Host Port** in the text fields.

The **Alarm Host IP** refers to the IP address of the remote PC on which the CMS (Client Management System) software (e.g., iVMS-4200) is installed, and the **Alarm Host Port** must be the same as the alarm monitoring port configured in the software.

Alarm Host IP	172.6.21.58
Alarm Host Port	7200
Server Port	8000
HTTP Port	80
Multicast IP	
RTSP Port	554
Enable HTTPS	<input checked="" type="checkbox"/>
HTTPS Port	443
Enable High-speed Download	<input type="checkbox"/>

Figure 9. 15 Configure Alarm Host

4. Click  to save and exit the interface.

9.2.6 Configuring Multicast Settings

Purpose:

The multicast can be configured to realize live view for more than 128 cameras through network.

A multicast address spans the Class-D IP range of 224.0.0.0 to 239.255.255.255. It is recommended to use the IP address ranging from 239.252.0.0 to 239.255.255.255.

Steps:

1. Enter the Network Settings interface.


Menu > Configuration > Network

2. Select the **More Settings** tab to enter the More Settings interface.

3. Set **Multicast IP**, as shown in figure below. When adding a device to the CMS (Client Management System) software, the multicast address must be the same as the device's multicast IP.

Server Port	8000
HTTP Port	80
Multicast IP	239.221.2.78

Figure 9.16 Configure Multicast

4. Click  to save and exit the interface.

9.2.7 Configuring RTSP Settings

Purpose:

The RTSP (Real Time Streaming Protocol) is a network control protocol designed for use in entertainment and communications systems to control streaming media servers.

Steps:


1. Enter the Network Settings interface.

Menu > Configuration > Network

2. Select the **More Settings** tab to enter the More Settings menu.

RTSP Port	554
-----------	-----

Figure 9.17 RTSP Settings Interface

3. Enter the RTSP port in the text field of **RTSP Service Port**. The default RTSP port is 554, and you can change it according to different requirements.
4. Click  to save and exit the menu.

9.2.8 Configuring Server and HTTP Ports

Purpose:

You can change the server and HTTP ports in the Network Settings menu. The default server port is 8000 and the default HTTP port is 80.

Steps:

1. Enter the Network Settings interface.
Menu > Configuration > Network
2. Select the **More Settings** tab to enter the More Settings interface.
3. Enter new **Server Port** and **HTTP Port**.

Server Port	8000
HTTP Port	80
Multicast IP	239.221.2.78

Figure 9. 18 HTTP & Server Port Settings Interface

4. Enter the **Server Port** and **HTTP Port** in the text fields. The default Server Port is 8000 and the HTTP Port is 80, and you can change them according to different requirements.
5. Click **Apply** to save and exit the interface.



The Server Port should be set to the range of 2000-65535 and it is used for remote client software access. The HTTP port is used for remote IE access.

9.2.9 Configuring Email Settings

Purpose:

The system can be configured to send an Email notification to all designated users if an alarm event is detected, a motion detection event is detected, etc.

Before you start:

The device must be connected to a local area network (LAN) that maintains an SMTP mail server. The network must also be connected to either an intranet or the Internet depending on the location of the email accounts to which you want to send notification.

Steps:

1. Enter the Network Settings interface.
Menu > Configuration > Network
2. Set the IPv4 Address, IPv4 Subnet Mask, IPv4 Gateway and the Preferred DNS Server in the Network Settings interface.

NIC Type	10M/100M/1000M Self-adaptive
Enable DHCP	<input type="checkbox"/>
IPv4 Address	172 . 6 . 23 . 190
IPv4 Subnet Mask	255 . 255 . 255 . 0
IPv4 Default Gateway	172 . 6 . 23 . 1
IPv6 Address 1	fe80::212:42ff:fe46/64
IPv6 Address 2	
IPv6 Default Gateway	
MAC Address	00:12:42:fd:ec:46
MTU(Bytes)	1500
Preferred DNS Server	
Alternate DNS Server	
Internal NIC IPv4 Address	192 . 168 . 254 . 1

Figure 9. 19 Network Settings Interface

3. Click **Apply** to save the settings.
4. Select the **Email** tab to enter the Email Settings interface.

Enable Server Authentication	<input checked="" type="checkbox"/>
User Name	user1
Password	*****
SMTP Server	xxx.smtp.com
SMTP Port	25
Enable SSL	<input type="checkbox"/>
Sender	name1
Sender's Address	name@xxx.com
Select Receivers	Receiver 1
Receiver	name2
Receiver's Address	name2@xxx.com
Enable Attached Picture	<input checked="" type="checkbox"/>
Interval	2s

Figure 9. 20 Email Settings Interface

5. Configure the following Email settings:

Enable Server Authentication (optional): If your mail server requires authentication, check this checkbox to use authentication to log in to this server and enter the login User Name and Password.

User Name: The user account of sender's Email for SMTP server authentication.

Password: The password of sender's Email for SMTP server authentication.

SMTP Server: The SMTP Server IP address or host name (e.g., smtp.263xmail.com).

SMTP Port: The SMTP port. The default TCP/IP port used for SMTP is 25.

Enable SSL (optional): Check the checkbox to enable SSL if required by the SMTP server.

Sender: The name of sender.

Sender's Address: The Email address of sender.

Select Receivers: Select the receiver. Up to 3 receivers can be configured.

Receiver: The name of user to be notified.

Receiver's Address: The Email address of user to be notified.

Enable Attached Pictures: Check the checkbox of **Enable Attached Picture** if you want to send email with attached alarm images.

Interval: The interval refers to the time between two actions of sending attached pictures.

E-mail Test: Sends a test message to verify that the SMTP server can be reached.

6. Click **Apply** to save the Email settings.
7. You can click **Test** to test whether your Email settings work. The corresponding Attention message box will pop up.

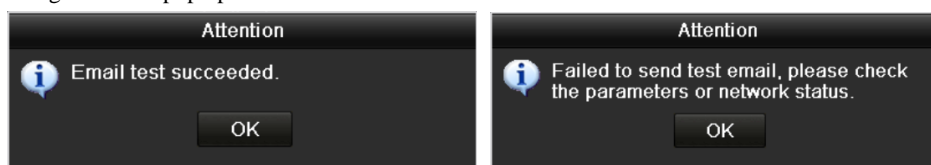


Figure 9. 21 Email Testing Attention

9.2.10 Configuring NAT

Purpose:

Two ways are provided for port mapping to realize the remote access via the cross-segment network, UPnP™ and manual mapping.

● UPnP™

Universal Plug and Play (UPnP™) can permit the device seamlessly discover the presence of other network devices on the network and establish functional network services for data sharing, communications, etc. You can use the UPnP™ function to enable the fast connection of the device to the WAN via a router without port mapping.

Before you start:

If you want to enable the UPnP™ function of the device, you must enable the UPnP™ function of the router to which your device is connected. When the network working mode of the device is set as multi-address, the Default Route of the device should be in the same network segment as that of the LAN IP address of the router.

Steps:

1. Enter the Network Settings interface.
Menu > Configuration > Network
2. Select the **NAT** tab to enter the port mapping interface.

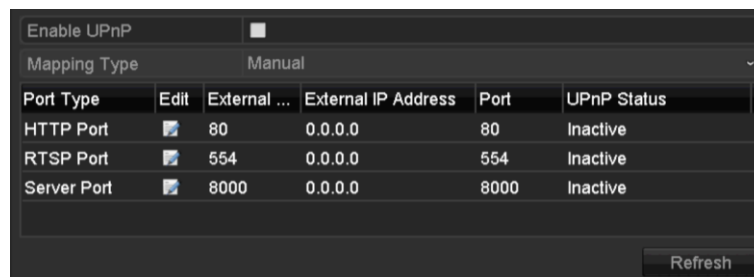


Figure 9.22 UPnP™ Settings Interface

3. Check ☒ checkbox to enable UPnP™.
4. Select the Mapping Type as Manual or Auto in the drop-down list.

OPTION 1: Auto

If you select Auto, the Port Mapping items are read-only, and the external ports are set by the router automatically.

Steps:

- 1) Select **Auto** in the drop-down list of Mapping Type.
- 2) Click **Apply** button to save the settings.
- 3) You can click **Refresh** button to get the latest status of the port mapping.

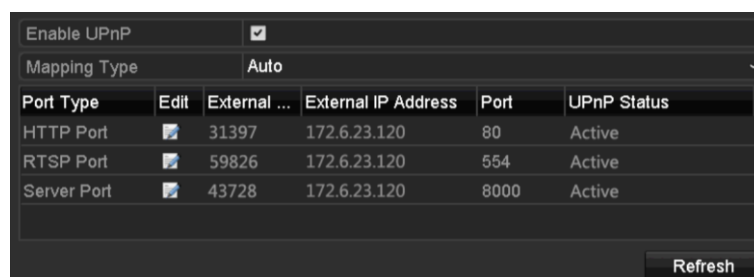




Figure 9.23 UPnP™ Settings Finished-Auto

OPTION 2: Manual

If you select Manual as the mapping type, you can edit the external port on your demand by clicking  to activate the External Port Settings dialog box.

Steps:

- 1) Select **Manual** in the drop-down list of Mapping Type.
- 2) Click  to activate the External Port Settings dialog box. Configure the external port No. for server port, http port, RTSP port and https port respectively.



- You can use the default port No., or change it according to actual requirements.
- External Port indicates the port No. for port mapping in the router.
- The value of the RTSP port No. should be 554 or between 1024 and 65535, while the value of the other ports should be between 1 and 65535 and the value must be different from each other. If multiple devices are configured for the UPnP™ settings under the same router, the value of the port No. for each device should be unique.



Figure 9. 24 External Port Settings Dialog Box

- 3) Click **Apply** button to save the settings.
- 4) You can click **Refresh** button to get the latest status of the port mapping.

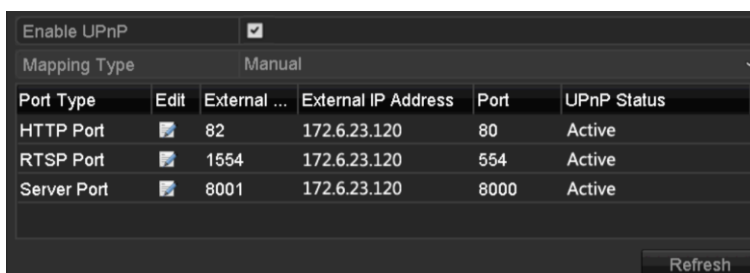


Figure 9. 25 UPnP™ Settings Finished-Manual

● Manual Mapping


If your router does not support the UPnP™ function, perform the following steps to map the port manually in an easy way.

Before you start:

Make sure the router support the configuration of internal port and external port in the interface of Forwarding.

Steps:

1. Enter the Network Settings interface.
Menu > Configuration > Network

2. Select the **NAT** tab to enter the port mapping interface.
3. Leave the Enable UPnP checkbox unchecked.
4. Click  to activate the External Port Settings dialog box. Configure the external port No. for server port, http port, RTSP port and https port respectively.



The value of the RTSP port No. should be 554 or between 1024 and 65535, while the value of the other ports should be between 1 and 65535 and the value must be different from each other. If multiple devices are configured for the UPnP™ settings under the same router, the value of the port No. for each device should be unique.

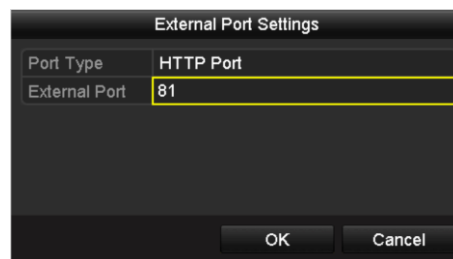


Figure 9. 26 External Port Settings Dialog Box

5. Click **OK** to save the setting for the current port and return to the upper-level menu.
6. Click **Apply** button to save the settings.
7. Enter the virtual server setting page of router; fill in the blank of Internal Source Port with the internal port value, the blank of External Source Port with the external port value, and other required contents.



Each item should be corresponding with the device port, including server port, http port, RTSP port and https port.

Delete	External Source Port	Protocol	Internal Source IP	Internal Source Port	Application
<input type="checkbox"/>	81	TCP	192.168.251.101	80	HTTP

Figure 9. 27 Setting Virtual Server Item



The above virtual server setting interface is for reference only, it may be different due to different router manufactures. Please contact the manufacture of router if you have any problems with setting virtual server.

9.3 Checking Network Traffic

Purpose:

You can check the network traffic to obtain real-time information of device such as linking status, MTU, sending/receiving rate, etc.

Steps:

1. Enter the Network Traffic interface.

Menu > Maintenance > Net Detect

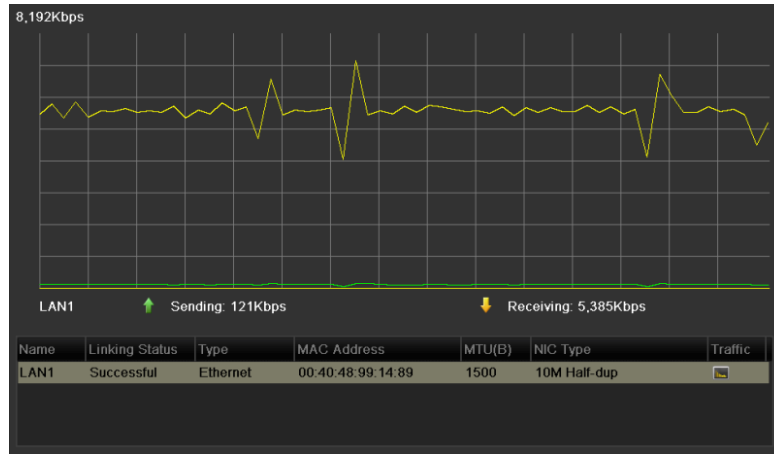


Figure 9. 28 Network Traffic Interface

2. You can view the sending rate and receiving rate information on the interface. The traffic data is refreshed every 1 second.

9.4 Network Detection

Purpose:

You can obtain network connecting status of device through the network detection function, including network delay, packet loss, etc.

9.4.1 Testing Network Delay and Packet Loss

Steps:

1. Enter the Network Detection interface.
Menu > Maintenance > Net Detect
2. Click the **Network Detection** tab to enter the Network Detection menu.

Traffic			Network Detection	Network Stat.
Network Delay, Packet Loss Test				
Select NIC	LAN1			
Destination Address	172.6.23.129		Test	
Network Packet Export				
Device Name	USB1-4		Refresh	
LAN1	172.6.23.172	15Mbps	Export	

Figure 9. 29 Network Detection Interface

3. Enter the destination address in the text field of **Destination Address**.
4. Click **Test** button to start testing network delay and packet loss. The testing result pops up on the window.
If the testing is failed, the error message box will pop up as well.

Result	Attention
<p>Average delay: 0 ms Packet loss rate: 0%</p> <p>OK</p>	<p>The destination is unreachable.</p> <p>OK</p>

Figure 9. 30 Testing Result of Network Delay and Packet Loss

9.4.2 Exporting Network Packet

Purpose:

By connecting the device to network, the captured network data packet can be exported to USB-flash disk, SATA disk, DVD-R/W and other local backup devices.

Steps:

1. Enter the Network Traffic interface.
Menu > Maintenance > Net Detect
2. Click the **Network Detection** tab to enter the Network Detection interface.
3. Select the backup device from the dropdown list of Device Name.



Click **Refresh** if the connected local backup device cannot be displayed. When it fails to detect the backup device, please check whether it is compatible with the device. You can format the backup device if the format is incorrect.

Traffic		Network Detection	Network Stat.
Network Delay, Packet Loss Test			
Select NIC	LAN1		Test
Destination Address	172.6.23.129		
Network Packet Export			
Device Name	USB1-4		Refresh
LAN1	172.6.23.172	15Mbps	Export

Figure 9. 31 Export Network Packet

- Click **Export** to start exporting.
- After the exporting is complete, click **OK** to finish the packet export, as shown in Figure 9.41.



Figure 9. 32 Packet Export Attention



Up to 1M data can be exported each time.

9.4.3 Checking Network Status

Purpose:

You can also check the network status and quick set the network parameters in this interface.

Steps:

1. Enter the Network Traffic interface.
Menu > Maintenance > Net Detect
2. Click the **Network Detection** tab to enter the Network Detection interface.
3. Click **Status** to get the network status.

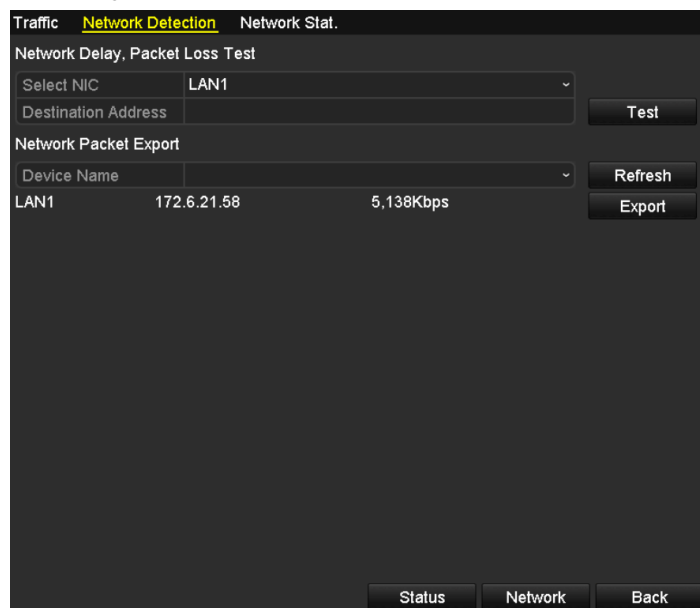


Figure 9. 33 Checking Network Status

If the network is normal the following message box pops out.

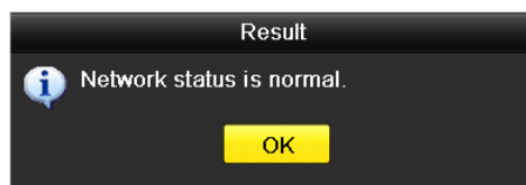


Figure 9. 34 Network Status Checking Result

If the message box pops out with other information instead of this one, you can click **Network** to show the quick setting interface of the network parameters.

9.4.4 Checking Network Statistics

Purpose:

You can check the network statistics to obtain the real-time information of the device.

Steps:

1. Enter the Network Statistics interface.

Menu > Maintenance> Net Detect

2. Click the **Network Stat.** tab to enter the Network Statistics interface.

Traffic

Network Detection

Network Stat.

Type	Bandwidth
IP Camera	11Mbps
Remote Live View	10Mbps
Remote Playback	0bps
Net Receive Idle	189Mbps
Net Send Idle	70Mbps


Refresh

Figure 9. 35 Network Stat. Interface

3. View the bandwidth of IP Camera, bandwidth of Remote Live View, bandwidth of Remote Playback, bandwidth of Net Receive Idle and bandwidth of Net Send Idle.



And the value of the bandwidth is subject to the actual model.

4. Click  to get the latest bandwidth statistics.

Chapter 10 HDD Management

10.1 Initializing HDDs

Purpose:

A newly installed hard disk drive (HDD) must be initialized before it can be used with your device.



If there is uninitialized HDD existed in the device, the following message box pops up when the device starts up.

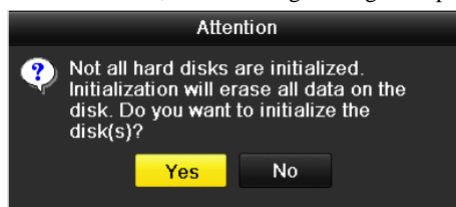


Figure 10.1 Message Box of Uninitialized HDD

Click **Yes** to initialize it immediately or you can perform the following steps to initialize the HDD(s).

Steps:

1. Enter the HDD Information interface.

Menu > HDD>General

L...	Capacity	Status	Property	Type	Free Space	Gr...	Edit	D...
1	465.76GB	Normal	R/W	Local	305GB	1		-

Figure 10.2 HDD Information Interface

2. Select HDD to be initialized.
3. Click **Init**.

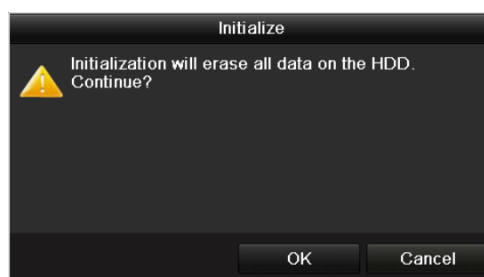


Figure 10.3 Confirm Initialization

4. Select **OK** to start initialization.

L...	Capacity	Status	Property	Type	Free Space	Gr...	Edit	D...
4	931.51GB	Initializing 44%	R/W	Local	0MB	1	-	-

Figure 10.4 Start Initialization

5. After the HDD has been initialized, the status of the HDD will change from *Uninitialized* to *Normal*.

HDD Information

<input type="checkbox"/> L...	Capacity	Status	Property	Type	Free Space	Gr...	Edit	D...
<input checked="" type="checkbox"/> 1	465.76GB	Normal	R/W	Local	465GB	1	-	-

Figure 10. 5 HDD Status Changes to Normal



NOTE Initializing the HDD will erase all data on it.

10.2 Managing Network HDD


Purpose:

You can add the allocated NAS or disk of IP SAN to device, and use it as network HDD.

Steps:

1. Enter the HDD Information interface.

Menu > HDD > General

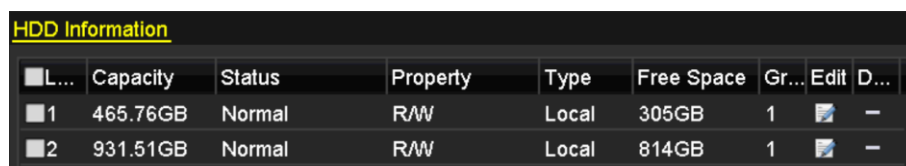

L...	Capacity	Status	Property	Type	Free Space	Gr...	Edit	D...
1	465.76GB	Normal	R/W	Local	305GB	1		-
2	931.51GB	Normal	R/W	Local	814GB	1		-

Figure 10. 6 HDD Information Interface

2. Click **Add** to enter the Add NetHDD interface, as shown in Figure 10.7.

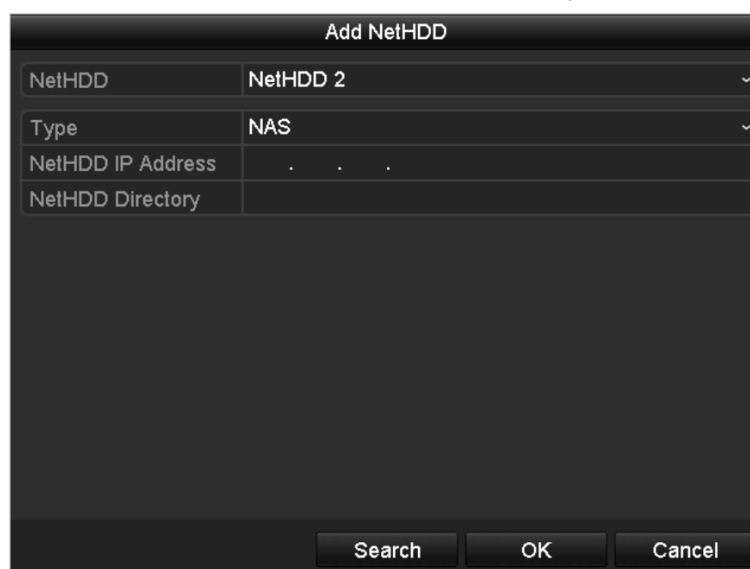


Figure 10. 7 Adding NetHDD Interface

3. Add the allocated NetHDD.
4. Select the type to NAS or IP SAN.
5. Configure the NAS or IP SAN settings.

• Add NAS disk:

- 1) Enter the NetHDD IP address in the text field.
- 2) Click **Search** to search the available NAS disks.
- 3) Select the NAS disk from the list shown below.

Or you can just manually enter the directory in the text field of NetHDD Directory.

- 4) Click **OK** to add the configured NAS disk.



Up to 8 NAS disks can be added.

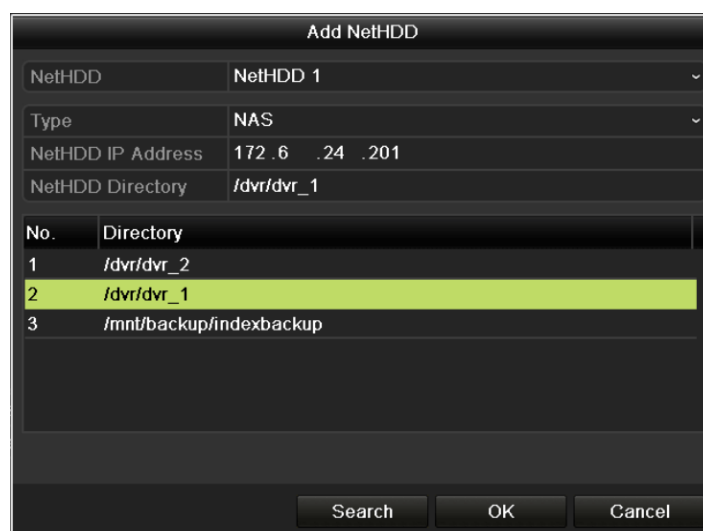


Figure 10. 8 Add NAS Disk

• **Add IP SAN:**

- 1) Enter the NetHDD IP address in the text field.
- 2) Click **Search** to search the available IP SAN disks.
- 3) Select the IP SAN disk from the list shown below.
- 4) Click **OK** to add the selected IP SAN disk.



Up to 1 IP SAN disk can be added.

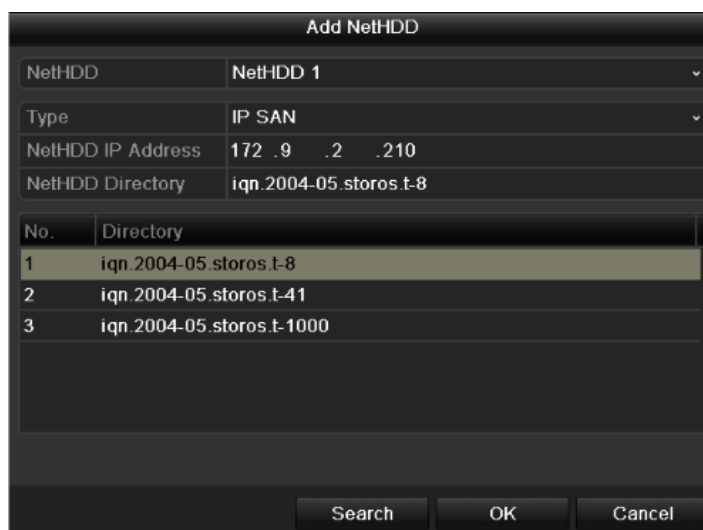


Figure 10. 9 Add IP SAN Disk

-
6. After having successfully added the NAS or IP SAN disk, return to the HDD Information menu. The added NetHDD will be displayed in the list.



If the added NetHDD is uninitialized, please select it and click **Init** for initialization.

HDD Information									
<input type="checkbox"/> L...	Capacity	Status	Property	Type	Free Space	Gr...	Edit	D...	
<input type="checkbox"/> 1	465.76GB	Normal	R/W	Local	465GB	1	-	-	
<input type="checkbox"/> 6	931.51GB	Normal	R/W	Local	814GB	1	-	-	
<input type="checkbox"/> 17	20,448MB	Normal	R/W	NAS	19,456MB	1			

Figure 10. 10 Initialize Added NetHDD

10.3 Managing HDD Group

10.3.1 Setting HDD Groups

Purpose:

Multiple HDDs can be managed in groups. Video from specified channels can be recorded onto a particular HDD group through HDD settings.

Steps:

1. Enter the Storage Mode interface.
Menu > HDD > Advanced
2. Set the **Mode** to Group, as shown below.



The device must be rebooted to activate the changes.



Figure 10. 11 Storage Mode Interface

3. Click **Apply** and the following Attention box will pop up.

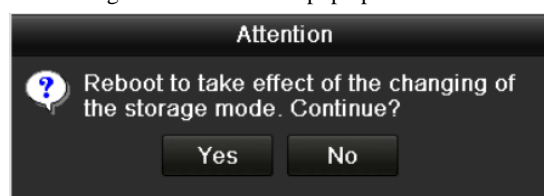


Figure 10. 12 Attention for Reboot

4. Click **Yes** to reboot the device to activate the changes.
5. After reboot of device, enter the HDD Information interface.
Menu > HDD > General
6. Select a HDD from the list and click to enter the Local HDD Settings interface.



Figure 10.13 Local HDD Settings Interface

7. Select the Group number for the current HDD.



The default group No. for each HDD is 1.

8. Click **OK** to confirm the settings.



Figure 10.14 Confirm HDD Group Settings

9. In the pop-up Attention box, click **Yes** to finish the settings.

10.3.2 Setting HDD Property

Purpose:

The HDD property can be set to redundancy, read-only or read/write (R/W). Before setting the HDD property, please set the storage mode to Group (refer to step1-4 of *Chapter 10.3.1 Setting HDD Groups*).

A HDD can be set to read-only to prevent important recorded files from being overwritten when the HDD becomes full in overwrite recording mode.

When the HDD property is set to redundancy, the video can be recorded both onto the redundancy HDD and the R/W HDD simultaneously so as to ensure high security and reliability of video data.

Steps:


1. Enter the HDD Information interface.
Menu > HDD > General
2. Select a HDD from the list and click  to enter the Local HDD Settings interface, as shown in the figure below.



Figure 10. 15 Set HDD Property

3. Set the HDD property to R/W, Read-only or Redundancy.
4. Click **OK** to save the settings and exit the interface.
5. In the HDD Information menu, the HDD property will be displayed in the list.



At least 2 disks must be installed on your device when you want to set a HDD to Redundancy, and there is one HDD or network disk with R/W property.

10.4 Configuring Quota Mode

Purpose

Each camera can be configured with allocated quota for the storage of recorded files.

Steps

1. Enter the Storage Mode interface.
Menu > HDD > Advanced
2. Set the **Mode** to Quota, as shown in the figure below.



The device must be rebooted to activate the changes.

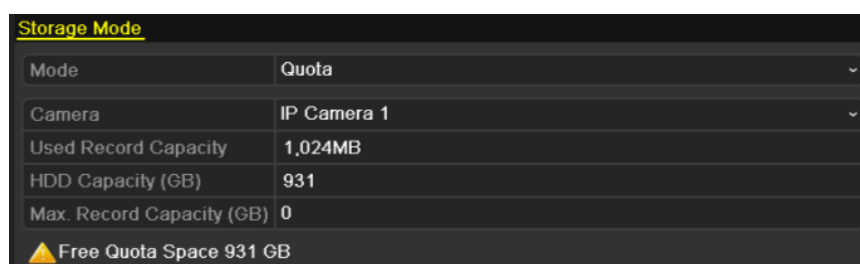


Figure 10.16 Storage Mode Settings Interface

3. Select a camera for which you want to configure quota.
4. Enter the storage capacity in the text fields of **Max. Record Capacity (GB)**, as shown in the figure below.

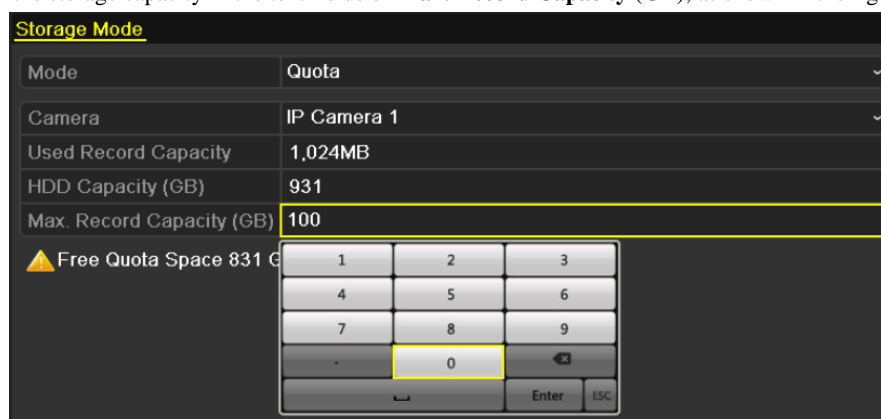


Figure 10.17 Configure Record Quota

5. You can copy the quota settings of the current camera to other cameras if required. Click **Copy** to enter the Copy Camera menu, as shown below.



Figure 10. 18 Copy Settings to Other Camera(s)

6. Select the camera (s) to be configured with the same quota settings. You can also click the checkbox of **Analog** or **IP Camera** to select all cameras.
7. Click **OK** to finish the Copy settings and back to the Storage Mode interface.
8. Click **Apply** to save the settings.



If the quota capacity is set to 0, then all cameras will use the total capacity of HDD for record.

10.5 Checking HDD Status


Purpose:

You may check the status of the installed HDDs on device so as to take immediate check and maintenance in case of HDD failure.

Checking HDD Status in HDD Information Interface

Steps:

1. Enter the HDD Information interface.
Menu > HDD>General
2. Check the status of each HDD which is displayed on the list.

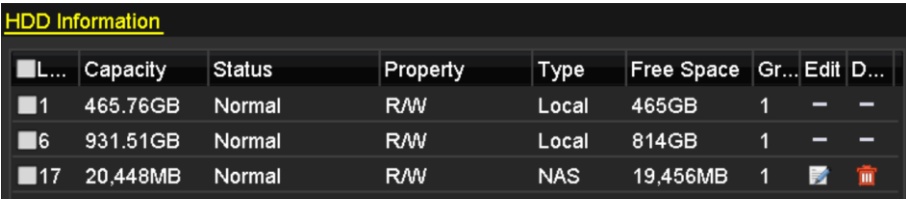

L...	Capacity	Status	Property	Type	Free Space	Gr...	Edit	D...
1	465.76GB	Normal	R/W	Local	465GB	1	—	—
6	931.51GB	Normal	R/W	Local	814GB	1	—	—
17	20,448MB	Normal	R/W	NAS	19,456MB	1		

Figure 10. 19 View HDD Status (1)




If the status of HDD is *Normal* or *Sleeping*, it works normally. If the status is *Uninitialized* or *Abnormal*, please initialize the HDD before use. And if the HDD initialization is failed, please replace it with a new one.

Checking HDD Status in HDD Information Interface

Steps:

1. Enter the System Information interface.
Menu > Maintenance > System Info
2. Click the **HDD** tab to view the status of each HDD displayed on the list.

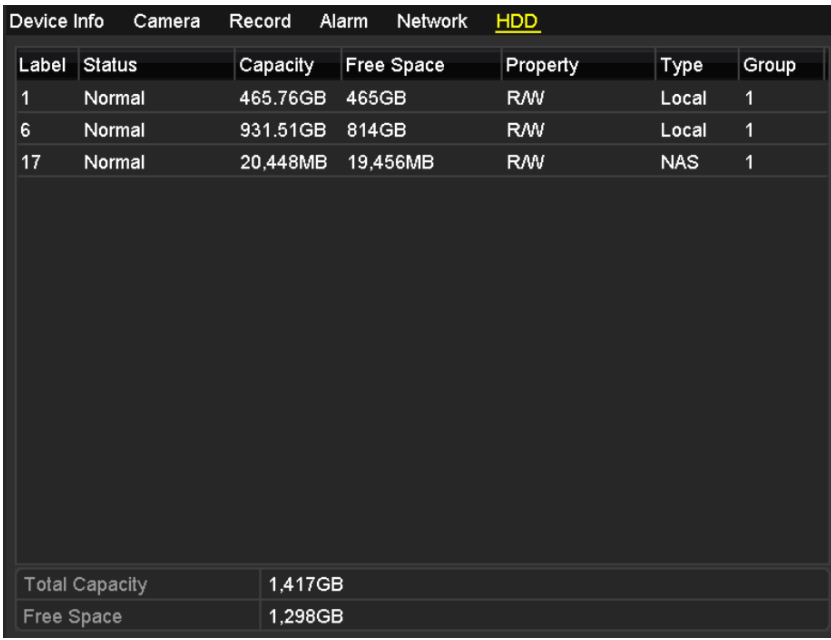

Label	Status	Capacity	Free Space	Property	Type	Group
1	Normal	465.76GB	465GB	R/W	Local	1
6	Normal	931.51GB	814GB	R/W	Local	1
17	Normal	20,448MB	19,456MB	R/W	NAS	1
Total Capacity		1,417GB				
Free Space		1,298GB				

Figure 10. 20 View HDD Status (2)

10.6 Checking S.M.A.R.T. Information

Purpose:

The S.M.A.R.T. (Self-Monitoring, Analysis and Reporting Technology) is a monitoring system for HDD to detect and report on various indicators of reliability in the hopes of anticipating failures.

Steps:

1. Enter the S.M.A.R.T. Settings interface.
Menu > Maintenance > HDD Detect > S.M.A.R.T. Settings
2. Select a HDD to view its S.M.A.R.T. information list.



If you want to use the HDD even when the S.M.A.R.T. checking is failed, you can check the checkbox before the **Continue to use this disk when self-evaluation is failed** item.

3. Three self-tests of S.M.A.R.T are provided, including Short Test, Expanded Test and Conveyance Test. You can select a self-test type and click to start self-test.

51

S.M.A.R.T. Settings		Bad Sector Detection					
<input checked="" type="checkbox"/> Continue to use this disk when self-evaluation is failed.							
HDD	1						
Self-test Status	Not tested						
Self-test Type	Short Test						
S.M.A.R.T.							
Temperature (°C)	46						
Power On (days)	146						
Self-evaluation	Pass						
All-evaluation	Functional						
S.M.A.R.T. Information							
ID	Attribute Name	Status	Flags	Thresh...	Value	Worst	Raw Value
0x1	Raw Read Error Rate	OK	f	51	200	200	0
0x3	Spin Up Time	OK	3	21	231	223	5450
0x4	Start/Stop Count	OK	32	0	98	98	2371
0x5	Reallocated Sector Co...	OK	33	140	199	199	1
0x7	Seek Error Rate	OK	f	51	100	253	0
0x9	Power-on Hours Count	OK	32	0	96	96	3514
0xa	Spin Up Retry Count	OK	12	51	100	100	0

Figure 10. 21 S.M.A.R.T. Settings Interface

10.7 Detecting Bad Sector

Purpose:

You can detect the bad sector of the HDD to check the status of the HDD.

Steps:

1. Enter the Bad Sector Detection interface.

Menu>Maintenance>HDD Detect>Bad Sector Detection

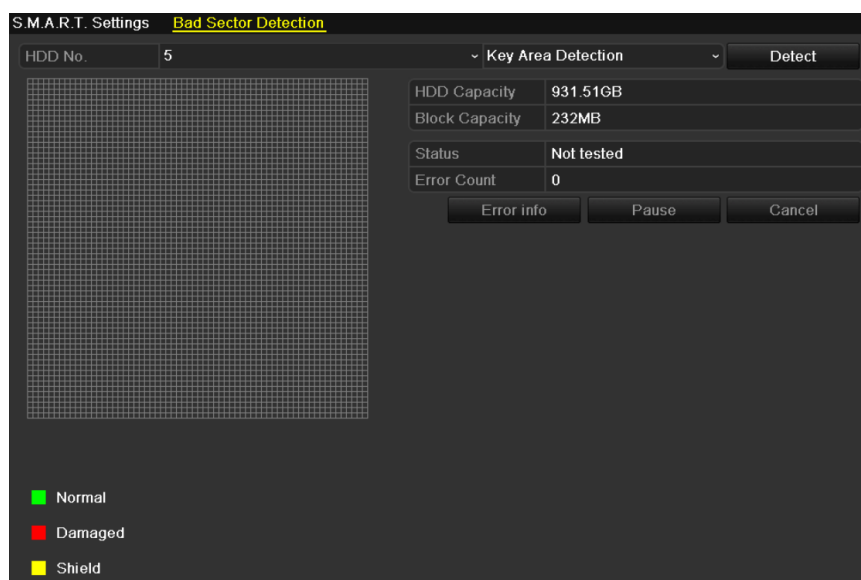


Figure 10.22 Bad Sector Detection

2. Select a HDD and choose Full Detection or Key Area Detection as the detection type.
3. Click **Detect** to start detecting.

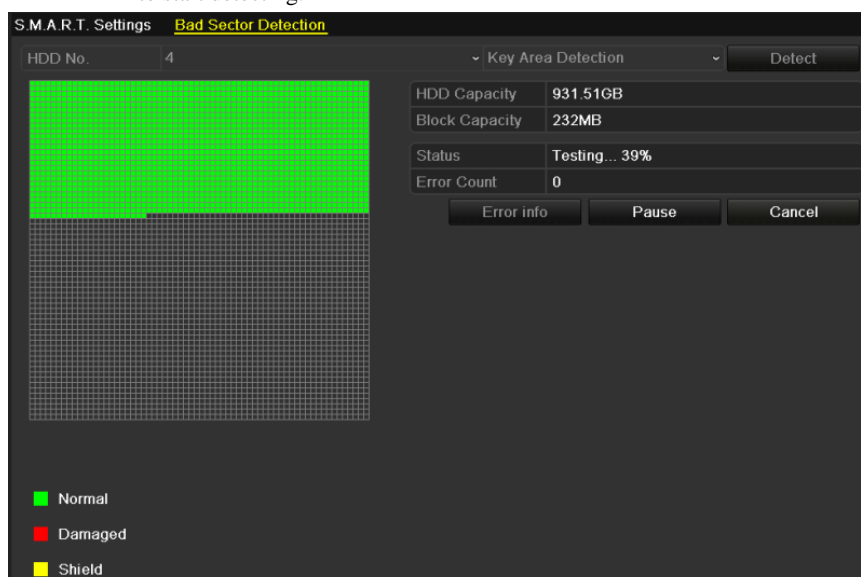


Figure 10.23 Bad Sector Detecting

4. You can click **Pause** to pause the detection and click **Resume** to resume the detection.
5. If there is error information about the HDD, you can click **Error info** to view the information.

10.8 Configuring HDD Error Alarms

Purpose:

You can configure the HDD error alarms when the HDD status is *Uninitialized* or *Abnormal*.

Steps:

1. Enter the Exception interface.
Menu > Configuration > Exceptions
2. Select the Exception Type to **HDD Error** from the dropdown list.
3. Click the checkbox(s) below to select the HDD error alarm type (s).



The alarm type can be selected to: Audible Warning, Notify Surveillance Center, Send Email and Trigger Alarm Output. Please refer to *Chapter 8.6 Setting Alarm Response Actions*.

Exception Type	HDD Error
Audible Warning	<input type="checkbox"/>
Notify Surveillance Center	<input type="checkbox"/>
Send Email	<input type="checkbox"/>
Trigger Alarm Output	<input checked="" type="checkbox"/>

Alarm Output No.	Alarm Name
<input checked="" type="checkbox"/> 172.6.23.126:8000->1	

Figure 10. 24 Configure HDD Error Alarm

4. When the Trigger Alarm Output is selected, you can also select the alarm output to be triggered from the list below.
5. Click **Apply** to save the settings.

Chapter 11 Camera Settings

11.1 Configuring OSD Settings

Purpose:

You can configure the OSD (On-screen Display) settings for the camera, including date /time, camera name, etc.

Steps:

1. Enter the OSD Configuration interface.
Menu > Camera > OSD
2. Select the camera to configure OSD settings.
3. Edit the Camera Name in the text field.
4. Configure the Display Name, Display Date and Display Week by checking the checkbox.
5. Select the Date Format, Time Format and Display Mode.

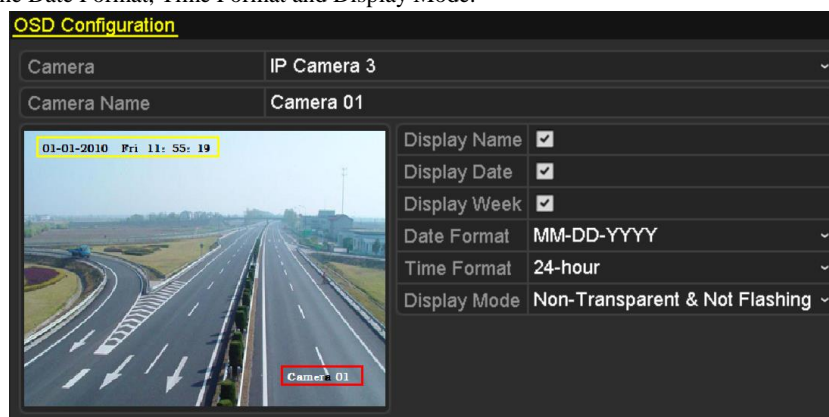


Figure 11. 1 OSD Configuration Interface

6. You can use the mouse to click and drag the text frame on the preview window to adjust the OSD position.
7. Click **Apply** to apply the settings.

11.2 Configuring Privacy Mask

Purpose:

Privacy mask enables you to cover certain areas on the live video to prevent certain spots in the surveillance area from being live viewed and recorded.

Steps:

1. Enter the Privacy Mask Settings interface.
Menu > Camera > Privacy Mask
2. Select the camera to set privacy mask.
3. Check ☒ checkbox to enable privacy mask.



Figure 11.2 Privacy Mask Settings Interface

4. Use the mouse to draw a zone on the window. The zones will be marked with different frame colors.



Up to 4 privacy mask zones can be configured, and the size of each area can be adjusted.

5. The configured privacy mask zones on the window can be cleared by clicking the corresponding Clear Zone1-4 icons on the right side of the window, or click **Clear All** to clear all zones.



Figure 11.3 Set Privacy Mask Area

6. Click **Apply** to save the settings.

11.3 Configuring Video Parameters

Steps:

1. Enter the Image Settings interface.

Menu > Camera > Image

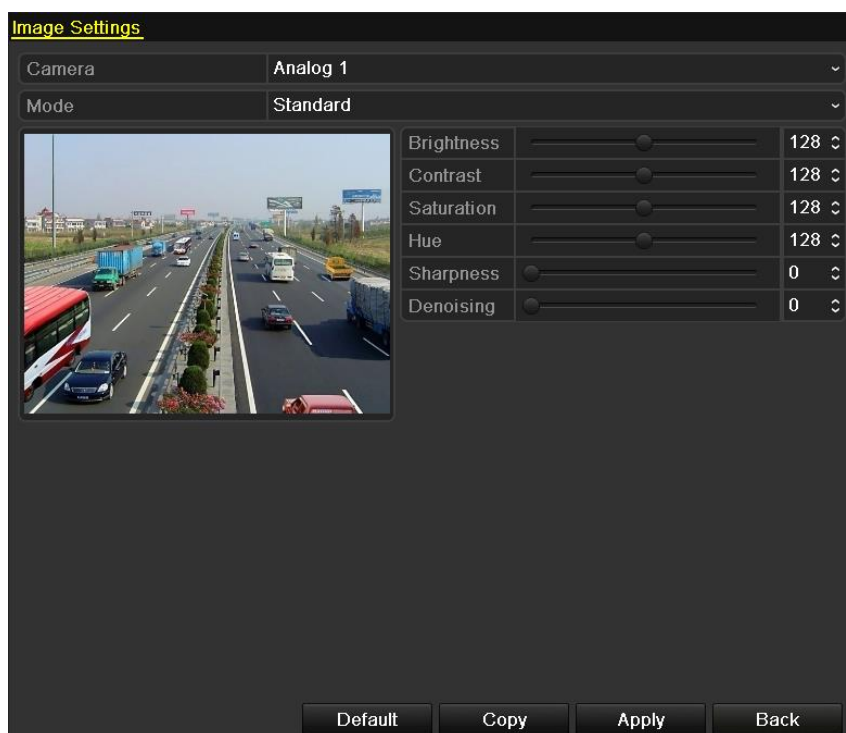


Figure 11. 4 Image Settings Interface for Analog Camera

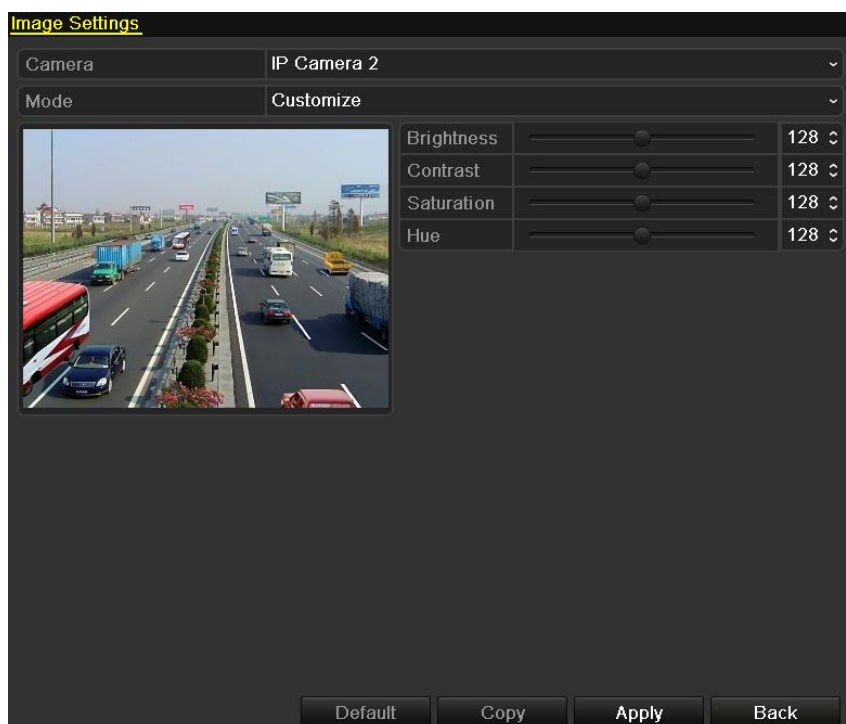


Figure 11. 5 Image Settings Interface for IPC

2. Select the camera to set image parameters.
3. Select the mode from the dropdown list of **Mode**. For analog cameras, four modes are selectable: Standard, Indoor, Dim Light and Outdoor. While for network cameras, only Customize is supported.
4. Adjust the image parameters according to actual needs. The parameters are including Brightness, Contrast,

Saturation, Hue, Sharpness and Denoising. You can also click **Default** to restore the default settings.



Sharpness, Denoising and restoring default settings are not supported by network cameras.

5. You can click **Copy** to copy the image settings of the current camera to other analog cameras. Please refer to step 7 of *Chapter 11.1 Configuring OSD Settings*.



Copying the image settings to network cameras is not available.

6. Click **Apply** to save the settings.

Chapter 12 Device Management and Maintenance

12.1 Viewing System Information

12.1.1 Viewing Device Information

Steps:

1. Enter the System Information interface.
Menu > Maintenance > System Info
2. Click the **Device Info** tab to enter the Device Information interface to view the device name, model, serial No. , firmware version and encoding version.

Device Info	Camera	Record	Alarm	Network	HDD
Device Name	Embedded Net DVR				
Model					
Serial No.	1620120518BBRR408508857WCVU				
Firmware Version					
Encoding Version	V1.0, Build 121210				

Figure 12. 1 Device Information Interface

12.1.2 Viewing Camera Information

Steps:

1. Enter the System Information interface.
Menu > Maintenance > System Info
2. Click the **Camera** tab to enter the Camera Information interface to view the status of each camera.

Device Info	Camera	Record	Alarm	Network	HDD	
Cameras	Camera Name	Status	Motion Det...	Tamper...	Video Loss	Video ...
A8	Camera 08	Enabled	Used	Not used	Not used	Used
A9	Camera 09	Enabled	Used	Not used	Not used	Used
A10	Camera 10	Enabled	Used	Not used	Not used	Used
A11	Camera 11	Enabled	Used	Not used	Not used	Used
A12	Camera 12	Enabled	Used	Not used	Not used	Used
A13	Camera 13	Enabled	Used	Not used	Not used	Used
A14	Camera 14	Enabled	Used	Not used	Not used	Used
A15	Camera 15	Enabled	Used	Not used	Not used	Used
A16	Camera 16	Enabled	Used	Not used	Not used	Used
D1	IPCamera 01	Discon...	Not supported	Not su...	Not supported	Not sup.
D2	IPCamera 02	Discon...	Not supported	Not su...	Not supported	Not sup.
D3	IPCamera 03	Conne...	Used	Not used	Not used	Not sup.
D4	IPCamera 04	Discon...	Not supported	Not su...	Not supported	Not sup.
D5	IPCamera 05	Discon...	Not supported	Not su...	Not supported	Not sup.
D6	IPCamera 06	Discon...	Not supported	Not su...	Not supported	Not sup.
D7	IPCamera 07	Discon...	Not supported	Not su...	Not supported	Not sup.
D8	IPCamera 08	Discon...	Not supported	Not su...	Not supported	Not sup.

Figure 12. 2 Camera Information Interface

12.1.3 Viewing Record Information

Steps:

1. Enter the System Information interface.

Menu > Maintenance > System Info

- Click the **Record** tab to enter the Record Information interface to view the recording status and encoding parameters of each camera.

Device Info	Camera	<u>Record</u>	Alarm	Network	HDD			
Camera...	Record...	Stream...	Frame ...	Bitrate(Kbps)	Resolution	Record...	Encodi...	Redun...
A8	Not used	Video ...	25fps	84/1792	704*576(4...		Normal	No
A9	Not used	Video ...	25fps	86/1792	704*576(4...		Normal	No
A10	Not used	Video ...	25fps	85/1792	704*576(4...		Normal	No
A11	Not used	Video ...	25fps	84/1792	704*576(4...		Normal	No
A12	Not used	Video ...	25fps	84/1792	704*576(4...		Normal	No
A13	Not used	Video ...	25fps	85/1792	704*576(4...		Normal	No
A14	Not used	Video ...	25fps	83/1792	704*576(4...		Normal	No
A15	Used	Video ...	25fps	83/1792	704*576(4...	Manual	Normal	No
A16	Used	Video ...	25fps	85/1792	704*576(4...	Manual	Normal	No
D1	Not used	Video ...	25fps	2048	Unknown R...		Event	No
D2	Not used	Video ...	25fps	2048	Unknown R...		Normal	No
D3	Used	Video ...	25fps	2048	1280*720(...	Manual	Normal	No
D4	Not used	Video ...	25fps	2048	Unknown R...		Normal	No
D5	Not used	Video ...	25fps	2048	Unknown R...		Normal	No
D6	Not used	Video ...	25fps	2048	Unknown R...		Normal	No
D7	Not used	Video ...	25fps	2048	Unknown R...		Normal	No
D8	Not used	Video ...	25fps	2048	Unknown R...		Normal	No

Figure 12. 3 Record Information Interface

12.1.4 Viewing Alarm Information

Steps:

- Enter the System Information interface.
Menu > Maintenance > System Info
- Click the **Alarm** tab to enter the Alarm Information interface to view the alarm information.

Device Info	Camera	Record	Alarm	Network	HDD
No.	Alarm Name	Alarm Type	Alarm Status	Triggered Camera	
172.6.21.51:80...		N.O	Occur	D1	
172.6.21.51:80...		Not supported	Used		

Figure 12. 4 Alarm Information Interface

12.1.5 Viewing Network Information

Steps:

- Enter the System Information interface.
Menu > Maintenance > System Info
- Click the **Network** tab to enter the Network Information interface to view the network information.

Device Info	Camera	Record	Alarm	Network	HDD
NIC		LAN1			
IPv4 Address		172.6.21.58			
IPv4 Subnet Mask		255.255.255.0			
IPv4 Default Gateway		172.6.21.1			
IPv6 Address 1		fe80::8ee7:48ff:fe16:e72d/64			
IPv6 Address 2					
IPv6 Default Gateway					
Preferred DNS Server		10.1.7.88			
Alternate DNS Server		0.0.0.0			
Enable DHCP		Disabled			
Enable PPPOE		Disabled			
PPPOE Address					
PPPOE Subnet Mask					
PPPOE Default Gateway					

Figure 12. 5 Network Information Interface

12.1.6 Viewing HDD Information

Steps:

1. Enter the System Information interface.
Menu > Maintenance > System Info
2. Click the **HDD** tab to enter the HDD Information menu to view the HDD status, free space, property, etc.

Device Info		Camera	Record	Alarm	Network	<u>HDD</u>
Label	Status	Capacity	Free Space	Property	Type	Group
1	Normal	76,319MB	23,552MB	R/W	Local	1
17	Normal	19,968MB	19,456MB	R/W	NAS	1

Figure 12. 6 HDD Information Interface

12.2 Searching & Exporting Log Files

Purpose:

The operation, alarm, exception, information and running status of the device can be stored in log files, which can be viewed and exported at any time.

Steps:

1. Enter the Log Search interface.

Menu > Maintenance > Log Information>Log Search

Figure 12. 7 Log Search Interface

2. Set the log search conditions to refine your search, including the Start Time, End Time, Major Type and Minor Type.
3. Click **Search** to start searching log files.
4. The matched log files will be displayed on the list shown below.



Up to 2000 log files can be displayed each time.

Search Result						
No.	Major Type	Time	Minor Type	Parameter	Play	Details
187	Alarm	12-26-2013 11:25:54	Video Tamperin...	N/A		
188	Alarm	12-26-2013 11:26:01	Video Tamperin...	N/A		
189	Alarm	12-26-2013 11:26:12	Video Tamperin...	N/A		
190	Alarm	12-26-2013 11:26:17	Video Tamperin...	N/A		
191	Alarm	12-26-2013 11:26:23	Video Tamperin...	N/A		
192	Information	12-26-2013 11:26:51	System Running...	N/A	—	
193	Information	12-26-2013 11:27:02	System Running...	N/A	—	
194	Operation	12-26-2013 11:27:12	Remote Operati...	IP Camera	—	
195	Operation	12-26-2013 11:27:12	Remote Operati...	N/A	—	
196	Operation	12-26-2013 11:27:12	Remote Operati...	Device	—	
197	Operation	12-26-2013 11:30:12	Remote Operati...	IP Camera	—	
198	Operation	12-26-2013 11:30:12	Remote Operati...	N/A	—	
199	Operation	12-26-2013 11:30:12	Remote Operati...	Device	—	
200	Operation	12-26-2013 11:33:11	Remote Operati...	IP Camera	—	
Total: 1067 P: 2/11						

Figure 12. 8 Log Search Results

5. You can click of each log or double-click the log to view its detailed information. And you can also click the button to view the related video files if available.

Log Information	
Time	05-30-2012 08:52:42
Type	Alarm--Start Motion Detection
Local User	N/A
Host IP Address	N/A
Parameter Type	N/A
Camera No.	A16
Description:	
N/A	

Figure 12. 9 Log Details

6. If you want to export the log files, select the log and click to enter the Export interface.
7. You can also export all the log files stored in the HDD. Enter the Log Export interface.
- Menu > Maintenance > Log Information>Log Export

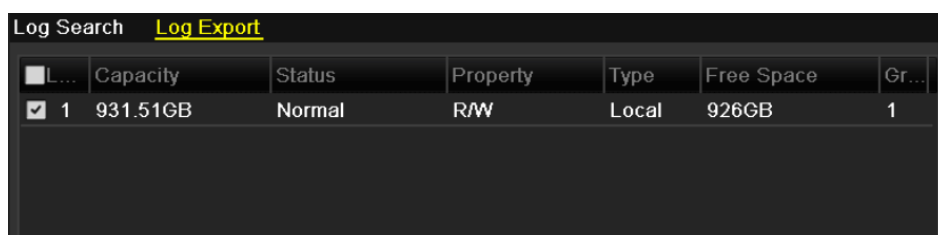


Figure 12.10 Log Export Interface

Check ☒ checkbox to select the HDD and click **Export** to enter the export interface.



Figure 12.11 Export Log Files

8. Select the backup device from the dropdown list of **Device Name**.
9. Click **Export** to export the log files to the selected backup device.
You can click **New Folder** to create new folder in the backup device, or click **Format** to format the backup device before log export.



- 1) Please connect the backup device to device before operating log export.
- 2) The log files exported to the backup device are named by exporting time, e.g.,
20120514124841logBack.txt.

To export all the log files:

Steps:

1. Enter the Log Information interface.
Menu> Maintenance> Log Information> Log Export
2. Click the **Log Export** tab.

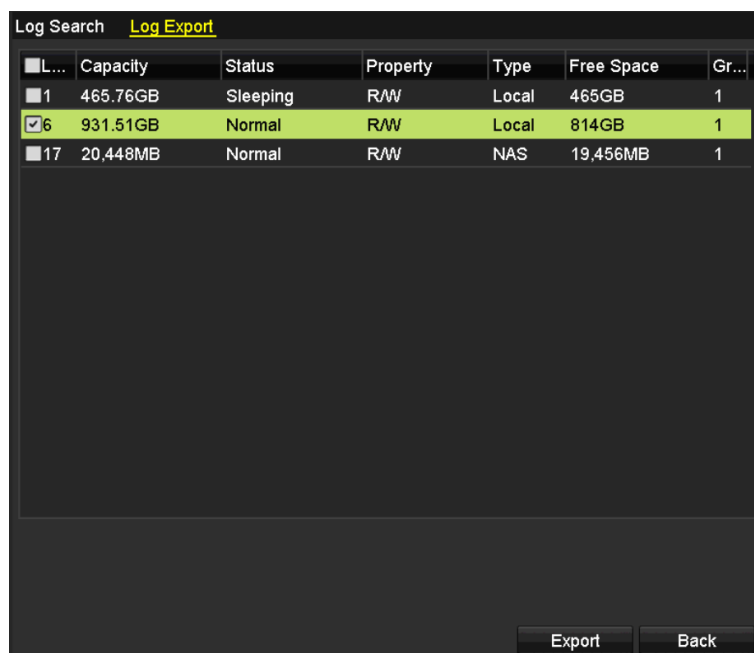


Figure 12. 12 Log Export Interface

3. You can check the checkbox of the HDD.
4. Click the **Export** button to export all the log files stored in the HDD.

12.3 Importing/Exporting Configuration Files

Purpose:

The configuration files of the device can be exported to local device for backup; and the configuration files of one device can be imported to multiple device devices if they are to be configured with the same parameters.

Steps:

1. Enter the Import/Export Configuration File interface.

Menu > Maintenance > Import/Export

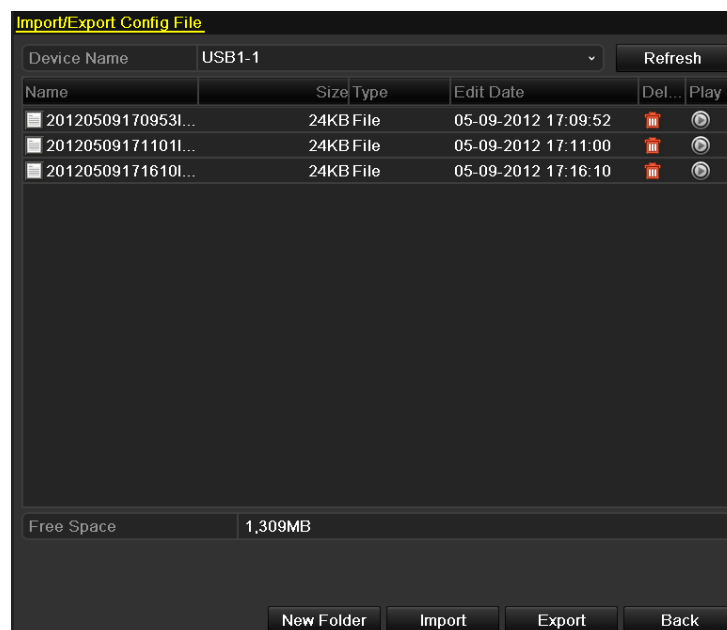


Figure 12. 13 Import/Export Config File

2. Click **Export** to export configuration files to the selected local backup device.
3. To import a configuration file, select the file from the selected backup device and click **Import**. After the import process is completed, you must reboot the device.



After having finished the import of configuration files, the device will reboot automatically.

12.4 Upgrading System

Purpose:

The firmware on your device can be upgraded by local backup device or remote FTP server.

12.4.1 Upgrading by Local Backup Device

Steps:

1. Connect your device with a local backup device where the update firmware file is located.
2. Enter the Upgrade interface.
Menu > Maintenance > Upgrade
3. Click the **Local Upgrade** tab to enter the local upgrade menu.

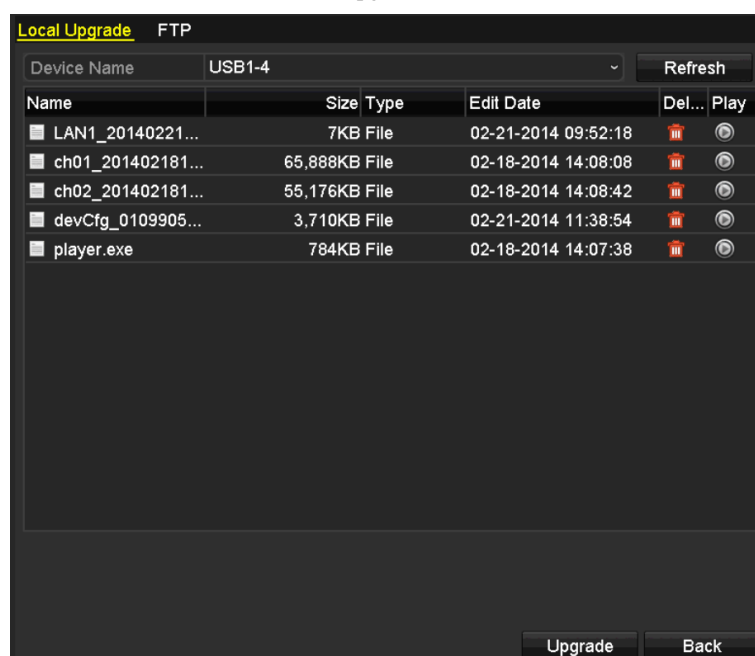


Figure 12. 14 Local Upgrade Interface

4. Select the update file from the backup device.
5. Click **Upgrade** to start upgrading.
6. After the upgrading is complete, reboot the device to activate the new firmware.

12.4.2 Upgrading by FTP

Before you start:

Ensure the network connection of the PC (running FTP server) and the device is valid and correct. Run the FTP server on the PC and copy the firmware into the corresponding directory of your PC.



Refer to the user manual of the FTP server to set the FTP server on your PC and put the firmware file into the directory as required.

Steps:

1. Enter the Upgrade interface.
Menu > Maintenance > Upgrade
2. Click the **FTP** tab to enter the local upgrade interface, as shown in the figure below.

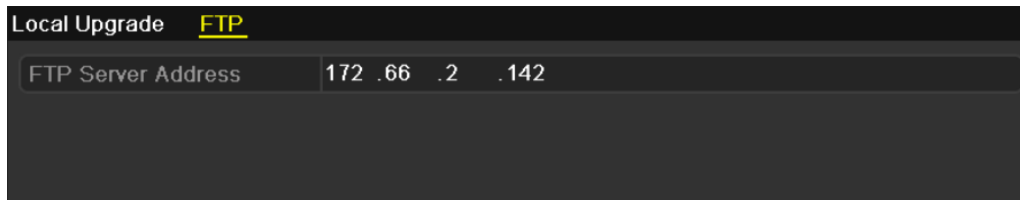


Figure 12. 15 FTP Upgrade Interface

3. Enter the FTP Server Address (the IP address of the PC that runs the FTP server) in the text field.
4. Click **Upgrade** to start upgrading.
5. After the upgrading is complete, reboot the device to activate the new firmware.

12.5 Restoring Default Settings

Steps:

1. Enter the Default interface.

Menu > Maintenance > Default

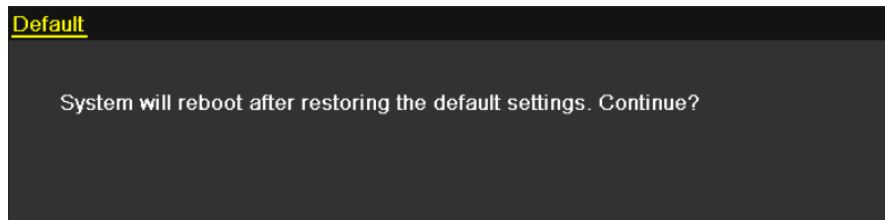



Figure 12. 16 Restore Default Settings

2. Click  to restore the default settings.



Except the network parameters (including IP address, subnet mask, gateway, MTU, NIC working mode, default route and server port), all other parameters of the device will be restored to factory default settings.

Chapter 13 Others

13.1 Configuring General Settings

Purpose:

You can configure the BNC output standard, HDMI/VGA output resolution, mouse pointer speed, etc.

Steps:

1. Enter the General Settings interface.
Menu > Configuration > General
2. Select the **General** tab.

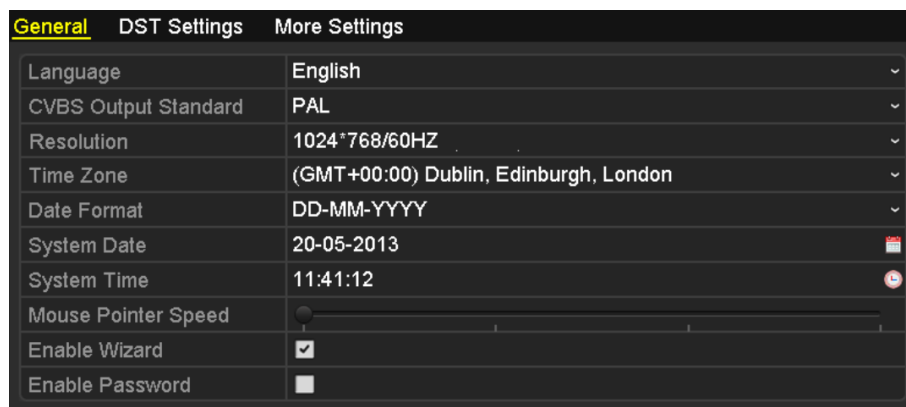


Figure 13. 1 General Settings Interface

3. Configure the following settings:
 - **Language:** The default language used is *English*.
 - **CVBS Output Standard:** Select the CVBS output standard to NTSC or PAL, which must be the same with the video input standard.
 - **Resolution:** Select the resolution for the VGA/HDMI output, which must be the same with the resolution of the monitor screen.
 - **Time Zone:** Select the time zone.
 - **Date Format:** Select the date format.
 - **System Date:** Select the system date.
 - **System Time:** Select the system time.
 - **Mouse Pointer Speed:** Set the speed of mouse pointer; 4 levels are configurable.
 - **Enable Wizard:** Enable/disable the Wizard when the device starts up.
 - **Enable Password:** Enable/disable the use of the login password.
4. Click **Apply** to save the settings.


13.2 Configuring DST Settings

Steps:

1. Enter the General Settings interface.

Menu >Configuration>General

2. Choose **DST Settings** tab.

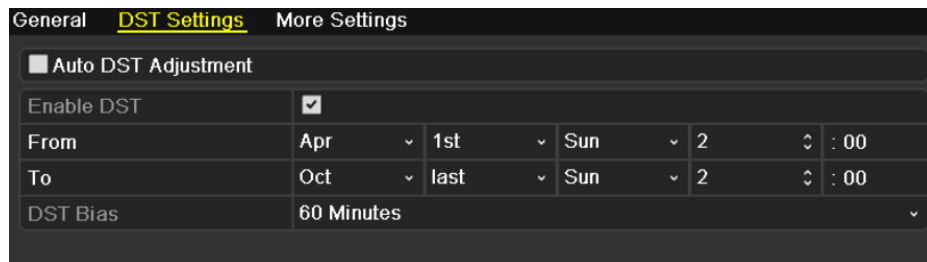

General		DST Settings		More Settings	
<input type="checkbox"/> Auto DST Adjustment					
Enable DST	<input checked="" type="checkbox"/>				
From	Apr	1st	Sun	2	: 00
To	Oct	last	Sun	2	: 00
DST Bias	60 Minutes				

Figure 13. 2 DST Settings Interface


You can check ☒ checkbox before the **Auto DST Adjustment** item.

Or you can manually check the **Enable DST** checkbox, and then you choose the date of the DST period.

13.3 Configuring More Settings

Steps:

1. Enter the General Settings interface.
Menu > Configuration > General
2. Click the **More Settings** tab to enter the More Settings interface.

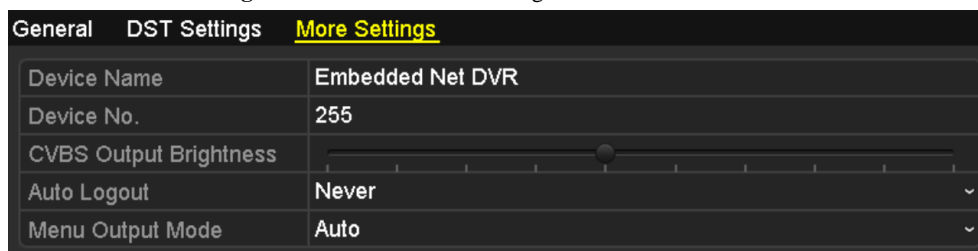

General	DST Settings	<u>More Settings</u>
Device Name	Embedded Net DVR	
Device No.	255	
CVBS Output Brightness	<input type="range"/>	
Auto Logout	Never ▾	
Menu Output Mode	Auto ▾	

Figure 13. 3 More Settings Interface

3. Configure the following settings:
 - **Device Name:** Edit the name of device.
 - **Device No.:** Edit the serial number of device. The Device No. can be set in the range of 1~255, and the default No. is 255.
 - **CVBS Output Brightness:** Adjust the video output brightness.
 - **Auto Logout:** Set timeout time for menu inactivity. E.g., when the time is set to *5 Minutes*, then the system will exit from the current operation menu to live view screen after 5 minutes of menu inactivity.
 - **Menu Output Mode:** Set the menu output mode as Auto, HDMI/VGA or Main CVBS. E.g., when HDMI/VGA is selected and HDMI/VGA output interface is connected, then the menu will be displayed on HDMI/VGA monitor.
4. Click **Apply** to save the settings.

13.4 Managing User Accounts

Purpose:

There is a default account in the device: *Administrator*. The *Administrator* user name is *admin* and the password is *12345*. The *Administrator* has the permission to add and delete user and configure user parameters.



The default user name is admin, and password is 12345.




The default password (12345) for the Admin account is for first-time log-in purposes only. You must change this default password to better protect against security risks, such as the unauthorized access by others to the product that may prevent the product from functioning properly and/or lead to other undesirable consequences.

13.4.1 Adding a User

Steps:


1. Enter the User Management interface.


Menu > Configuration > User

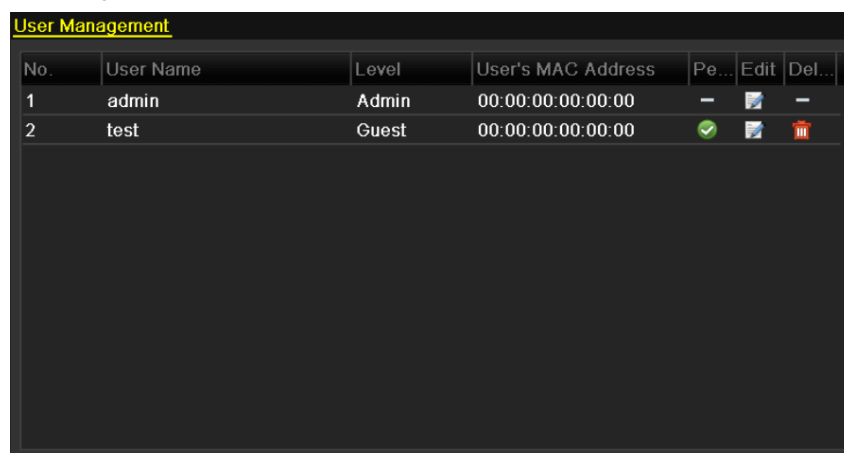A screenshot of the 'User Management' interface. It features a table with columns: No., User Name, Level, User's MAC Address, Pe..., Edit, and Del... The table contains two rows: row 1 for 'admin' (Admin level, MAC 00:00:00:00:00:00) and row 2 for 'test' (Guest level, MAC 00:00:00:00:00:00). The 'Pe...' column has a minus icon for 'admin' and a checkmark for 'test'. The 'Edit' column has a pencil icon for both. The 'Del...' column has a minus icon for 'admin' and a trash can icon for 'test'.

No.	User Name	Level	User's MAC Address	Pe...	Edit	Del...
1	admin	Admin	00:00:00:00:00:00	—		—
2	test	Guest	00:00:00:00:00:00	✓		

Figure 13. 4 User Management Interface

2. Click  to enter the Add User interface.

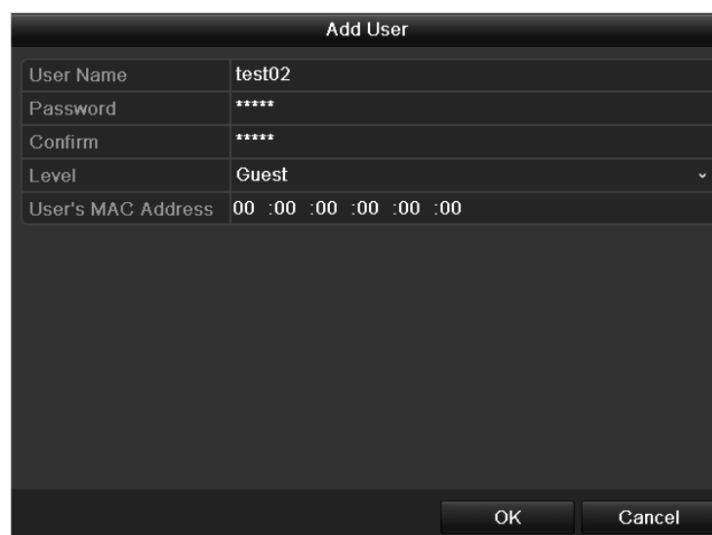


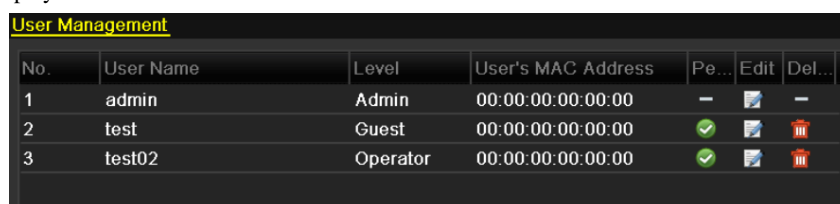
The 'Add User' dialog box contains the following fields:

User Name	test02
Password	*****
Confirm	*****
Level	Guest
User's MAC Address	00 :00 :00 :00 :00 :00

At the bottom right are 'OK' and 'Cancel' buttons.

Figure 13. 5 Add User Menu

- Enter the information for new user, including **User Name**, **Password**, **Level** and **User's MAC Address**.
Level: Set the user level to Operator or Guest. Different user levels have different operating permission.
 - Operator:** The *Operator* user level has permission of Local Log Search in Local Configuration, Remote Log Search and Two-way Audio in Remote Configuration and all operating permission in Camera Configuration.
 - Guest:** The *Guest* user has permission of Local Log Search in Local Configuration, Remote Log Search in Remote Configuration and only has the local/remote playback in the Camera Configuration.**User's MAC Address:** The MAC address of the remote PC which logs onto the device. If it is configured and enabled, it only allows the remote user with this MAC address to access the device.
- Click  to save the settings and go back to the User Management interface. The added new user will be displayed on the list.



The 'User Management' interface shows a table of users:








No.	User Name	Level	User's MAC Address	Pe...	Edit	Del...
1	admin	Admin	00:00:00:00:00:00	—		—
2	test	Guest	00:00:00:00:00:00			
3	test02	Operator	00:00:00:00:00:00			

Figure 13. 6 Added User Listed in User Management Interface

- Select the user from the list and then click the  button to enter the Permission Settings interface.

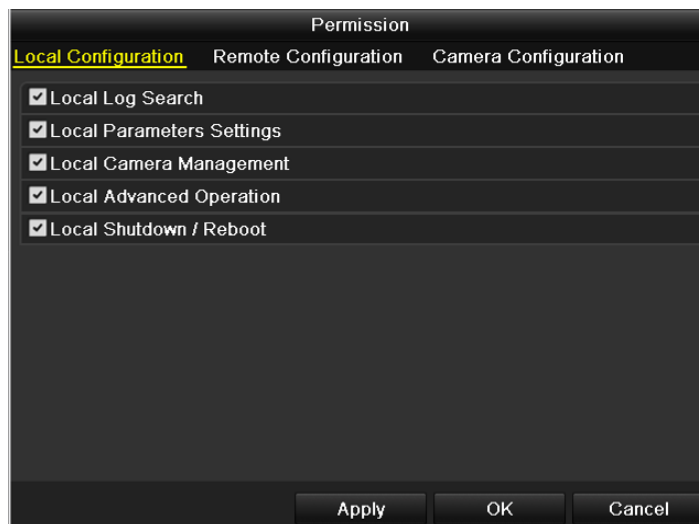


Figure 13.7 User Permission Settings Interface

6. Set the operating permission of Local Configuration, Remote Configuration and Camera Configuration for the user.

Local Configuration

- Local Log Search: Searching and viewing logs and system information of device.
- Local Parameters Settings: Configuring parameters, restoring factory default parameters and importing/exporting configuration files.
- Local Camera Management: Enabling and disabling analog camera (s). Adding, deleting and editing of network camera (s).
- Local Advanced Operation: Operating HDD management (initializing HDD, setting HDD property), upgrading system firmware, clearing I/O alarm output.
- Local Shutdown /Reboot: Shutting down or rebooting the device.


Remote Configuration

- Remote Log Search: Remotely viewing logs that are saved on the device.
- Remote Parameters Settings: Remotely configuring parameters, restoring factory default parameters and importing/exporting configuration files.
- Remote Camera Management: Remotely enabling and disabling analog camera (s), and adding, deleting and editing of network camera (s).
- Remote Serial Port Control: Configuring settings for RS-485 ports.
- Remote Video Output Control: Sending remote control panel signal.
- Two-way Audio: Realizing two-way radio between the remote client and the device.
- Remote Alarm Control: Remotely arming (notify alarm and exception message to the remote client) and controlling the alarm output.
- Remote Advanced Operation: Remotely operating HDD management (initializing HDD, setting HDD property), upgrading system firmware, clearing I/O alarm output.
- Remote Shutdown/Reboot: Remotely shutting down or rebooting the device.

Camera Configuration

- Remote Live View: Remotely viewing live video of the selected camera (s).
- Local Manual Operation: Locally starting/stopping manual recording, picture capturing and alarm output of the selected camera (s).
- Remote Manual Operation: Remotely starting/stopping manual recording, picture capturing and alarm output of the selected camera (s).
- Local Playback: Locally playing back recorded files of the selected camera (s).

- Remote Playback: Remotely playing back recorded files of the selected camera (s).
- Local PTZ Control: Locally controlling PTZ movement of the selected camera (s).
- Remote PTZ Control: Remotely controlling PTZ movement of the selected camera (s).
- Local Video Export: Locally exporting recorded files of the selected camera (s).

7. Click  to save the settings and exit interface.



Only the *admin* user account has the permission of restoring factory default parameters.

13.4.2 Deleting a User

Steps:

1. Enter the User Management interface.
Menu > Configuration > User
2. Select the user to be deleted from the list.








User Management						
No.	User Name	Level	User's MAC Address	Pe...	Edit	Del...
1	admin	Admin	00:00:00:00:00:00	—		—
2	test	Guest	00:00:00:00:00:00			
3	test02	Operator	00:00:00:00:00:00			

Figure 13. 8 Delete a User

3. Click  to delete the selected user.

13.4.3 Editing a User

Steps:

1. Enter the User Management interface.
Menu > Configuration > User
2. Select the user to be edited from the list.









User Management						
No.	User Name	Level	User's MAC Address	Pe...	Edit	Del...
1	admin	Admin	00:00:00:00:00:00	—		—
2	test	Guest	00:00:00:00:00:00			
3	test02	Operator	00:00:00:00:00:00			

Figure 13. 9 Edit a User

3. Click  to enter the Edit User interface.



The 'Edit User' dialog box contains the following fields:

User Name	test
Change Password	<input checked="" type="checkbox"/>
Password	*****
Confirm	*****
Level	Operator
User's MAC Address	00 :00 :00 :00 :00 :00

Buttons at the bottom: Apply, OK, Cancel

Figure 13. 10 Edit User Interface

4. Edit the user information, including user name, password, level and MAC address.



If you want to change the password of the user, check ☒ checkbox to enable changing the password.


5. Click **OK** to save the settings and exit the menu.

13.4.4 Changing Password of Admin

Steps:

1. Enter the User Management interface.


Menu > Configuration > User

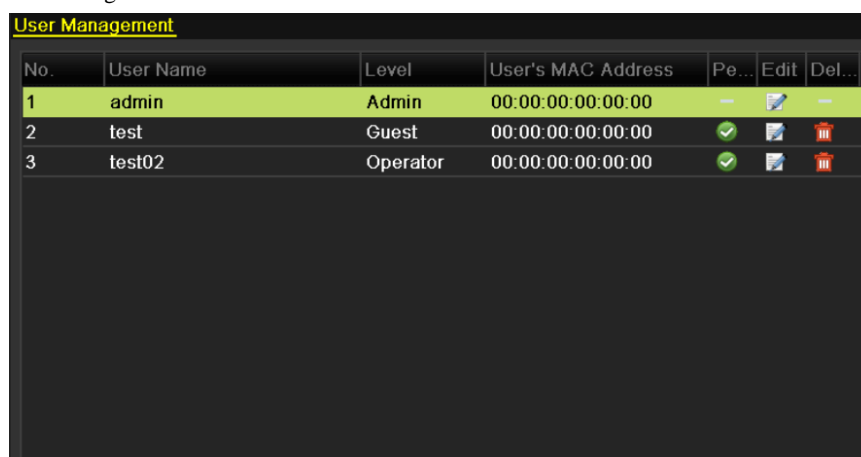

The 'User Management' interface shows a table of users:

No.	User Name	Level	User's MAC Address	Pe...	Edit	Del...
1	admin	Admin	00:00:00:00:00:00	—		—
2	test	Guest	00:00:00:00:00:00			
3	test02	Operator	00:00:00:00:00:00			

Figure 13. 11 Change Password

2. Select the *admin* user and click  to change the password.

Edit User	
User Name	admin
Old Password	
Change Password	<input checked="" type="checkbox"/>
Password	
Confirm	
User's MAC Address	00 :00 :00 :00 :00 :00

Apply OK Cancel

Figure 13. 12 Change Password

-
3. Enter the old password, check ☒ checkbox, enter new password and confirm password on the menu.
 4. Click **OK** to save the settings and exit the menu.

13.5 Logging out/Shutting down/Rebooting Device

Steps:

1. Enter the Shutdown interface.

Menu > Shutdown

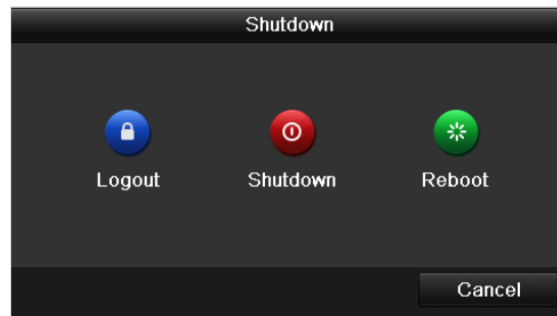





Figure 13. 13 Shutdown Menu

2. Click  to log out, or

Click  to shut down the device, or

Click  to reboot the device.



After you have logged out the system, menu operation on the screen is invalid. It is required a user name and password to log in to the system.

Appendix

Glossary

- **Dual Stream:** Dual stream is a technology used to record high resolution video locally while transmitting a lower resolution stream over the network. The two streams are generated by the device, with the main stream having a maximum resolution of 4CIF and the sub-stream having a maximum resolution of CIF.
- **DVR:** Acronym for Digital Video Recorder. A DVR is device that is able to accept video signals from analog cameras, compress the signal and store it on its hard drives.
- **HDD:** Acronym for Hard Disk Drive. A storage medium which stores digitally encoded data on platters with magnetic surfaces.
- **DHCP:** Dynamic Host Configuration Protocol (DHCP) is a network application protocol used by devices (DHCP clients) to obtain configuration information for operation in an Internet Protocol network.
- **HTTP:** Acronym for Hypertext Transfer Protocol. A protocol to transfer hypertext request and information between servers and browsers over a network
- **PPPoE:** PPPoE, Point-to-Point Protocol over Ethernet, is a network protocol for encapsulating Point-to-Point Protocol (PPP) frames inside Ethernet frames. It is used mainly with ADSL services where individual users connect to the ADSL transceiver (modem) over Ethernet and in plain Metro Ethernet networks.
- **DDNS:** Dynamic DNS is a method, protocol, or network service that provides the capability for a networked device, such as a router or computer system using the Internet Protocol Suite, to notify a domain name server to change, in real time (ad-hoc) the active DNS configuration of its configured hostnames, addresses or other information stored in DNS.
- **Hybrid DVR:** A hybrid DVR is a combination of a DVR and NVR.
- **NTP:** Acronym for Network Time Protocol. A protocol designed to synchronize the clocks of computers over a network.
- **NTSC:** Acronym for National Television System Committee. NTSC is an analog television standard used in such countries as the United States and Japan. Each frame of an NTSC signal contains 525 scan lines at 60Hz.
- **NVR:** Acronym for Network Video Recorder. An NVR can be a PC-based or embedded system used for centralized management and storage for IP cameras, IP Domes and other DVRs.
- **PAL:** Acronym for Phase Alternating Line. PAL is also another video standard used in broadcast televisions systems in large parts of the world. PAL signal contains 625 scan lines at 50Hz.
- **PTZ:** Acronym for Pan, Tilt, Zoom. PTZ cameras are motor driven systems that allow the camera to pan left and right, tilt up and down and zoom in and out.
- **USB:** Acronym for Universal Serial Bus. USB is a plug-and-play serial bus standard to interface devices to a host computer.

Troubleshooting

- **No image displayed on the monitor after the device is starting up normally.**

Possible Reasons

- a) No VGA or HDMI connections.
- b) Connection cable is damaged.
- c) Input mode of the monitor is incorrect.

Steps

1. Verify the device is connected with the monitor via HDMI or VGA cable.
If not, please connect the device with the monitor and reboot.
2. Verify the connection cable is good.
If there is still no image display on the monitor after rebooting, please check if the connection cable is good, and change a cable to connect again.
3. Verify Input mode of the monitor is correct.
Please check the input mode of the monitor matches with the output mode of the device (e.g. if the output mode of DVR is HDMI output, then the input mode of monitor must be the HDMI input). And if not, please modify the input mode of monitor.
4. Check if the fault is solved by the step 1 to step 3.
If it is solved, finish the process.
If not, please contact the engineer from our company to do the further process.

- **There is an audible warning sound “Di-Di-Di-Didi” after a new bought device starts up.**

Possible Reasons

- a) No HDD is installed in the device.
- b) The installed HDD has not been initialized.
- c) The installed HDD is not compatible with the device or is broken-down.

Steps

1. Verify at least one HDD is installed in the device.
 - 1) If not, please install the compatible HDD.



Please refer to the “Quick Operation Guide” for the HDD installation steps.

- 2) If you don't want to install a HDD, select “Menu>Configuration > Exceptions”, and uncheck the Audible Warning checkbox of “HDD Error”.
2. Verify the HDD is initialized.
 - 1) Select “Menu>HDD>General”.
 - 2) If the status of the HDD is “Uninitialized”, please check the checkbox of corresponding HDD and click the “Init” button.
3. Verify the HDD is detected or is in good condition.
 - 1) Select “Menu>HDD>General”.
 - 2) If the HDD is not detected or the status is “Abnormal”, please replace the dedicated HDD according to the requirement.

4. Check if the fault is solved by the step 1 to step 3.
 - 1) If it is solved, finish the process.
 - 2) If not, please contact the engineer from our company to do the further process.

- **The status of the added IPC displays as “Disconnected” when it is connected through the protocol of our company. Select “Menu>Camera>Camera>IP Camera” to get the camera status.**

Possible Reasons

- a) Network failure, and the DVR and IPC lost connections.
- b) The configured parameters are incorrect when adding the IPC.
- c) Insufficient bandwidth.

Steps

1. Verify the configuration parameters are correct.
 - 1) Select “Menu>Camera>Camera>IP Camera”.
 - 2) Verify the following parameters are the same with those of the connected IP devices, including IP address, protocol, management port, user name and password.
2. Verify the whether the bandwidth is enough.
 - 1) Select “Menu >Maintenance > Net Detect > Network Stat.”.
 - 2) Check the usage of the access bandwidth, and see if the total bandwidth has reached its limit.
3. Check if the fault is solved by the step 1 to step 3.

If it is solved, finish the process.

If not, please contact the engineer from our company to do the further process.

- **The IPC frequently goes online and offline and the status of it displays as “Disconnected”.**

Possible Reasons

- a) The IPC and the HDVR versions are not compatible.
- b) Unstable power supply of IPC.
- c) Unstable network between IPC and HDVR.
- d) Limited flow by the switch connected with IPC and HDVR.

Steps

1. Verify the IPC and the HDVR versions are compatible.
 - 1) Enter the IPC Management interface “Menu > Camera > Camera>IP Camera”, and view the firmware version of connected IPC.
 - 2) Enter the System Info interface “Menu>Maintenance>System Info>Device Info”, and view the firmware version of HDVR.
2. Verify power supply of IPC is stable.
 - 1) Verify the power indicator is normal.
 - 2) When the IPC is offline, please try the ping command on PC to check if the PC connects with the IPC.
3. Verify the switch is not flow control.

Check the brand, model of the switch connecting IPC and HDVR, and contact with the manufacturer of the switch to check if it has the function of flow control. If so, please turn it down.
4. Check if the fault is solved by the step 1 to step 4.

If it is solved, finish the process.

If not, please contact the engineer from our company to do the further process.

- **When there is no monitor connected to the HDVR and you add the IPC via web browser, the IPC status shows as Connected; and then you connect the HDVR with the monitor via VGA or HDMI interface and reboot the device, there is black screen with the mouse cursor.**

Connect the HDVR with the monitor before startup via VGA or HDMI interface, and manage the IPC to connect with the device locally or remotely, the status of IPC displays as Connected. And then connect the device with the CVBS, and there is black screen either.

Possible Reasons:

After connecting the IPC to the HDVR, the image is output via the main spot interface by default.

Steps:

1. Enable the output channel.
2. Select "Menu > Configuration > Live View > View", and select video output interface in the drop-down list and configure the window you want to view.



- 1) The view settings can only be configured by the local operation of HDVR.
- 2) Different camera orders and window-division modes can be set for different output interfaces separately, and digits like "D1" and "D2" stands for the channel number, and "X" means the selected window has no image output.
3. Check if the fault is solved by the above steps.

If it is solved, finish the process.

If not, please contact the engineer from our company to do the further process.

- **Live view stuck when video outputs locally.**

Possible Reasons:

- a) Poor network between device and IPC, and there exists packet loss during the transmission.
- b) The frame rate has not reached the real-time frame rate.

Steps:

1. Check the parameters of Main Stream (Continuous) and Main Stream (Event).
Select "Menu > Record > Parameters > Record", and set the resolution of Main Stream (Event) the same as the one of Main Stream (Continuous).
2. Verify the frame rate is real-time frame rate.
Select "Menu > Record > Parameters > Record", and set the Frame rate to Full Frame.
3. Check if the fault is solved by the above steps.
If it is solved, finish the process.
If not, please contact the engineer from our company to do the further process.

- **When using the device to get the live view audio, there is no sound or there is too much noise, or the volume is too low.**

Possible Reasons:

- a) Cable between the pickup and camera is not connected well; impedance mismatches or incompatible.
- b) The stream type is not set as "Video & Audio".
- c) The encoding standard is not supported with device.

Steps:

1. Verify the cable between the pickup and camera is connected well; impedance matches and compatible.
2. Verify the setting parameters are correct.
Select "Menu > Record > Parameters > Record", and set the Stream Type as "Audio & Video".

3. Verify the audio encoding standard of the camera is supported by the HDVR.

HDVR supports G722.1 and G711 standards, and if the encoding parameter of the input audio is not one of the previous two standards, you can log in the IPC to configure it to the supported standard.

4. Check if the fault is solved by the above steps.

If it is solved, finish the process.

If not, please contact the engineer from our company to do the further process.

- **The image gets stuck when HDVR is playing back by single or multi-channel IPC.**

Possible Reasons:

- a) Poor network between HDVR and IPC, and there exists packet loss during the transmission.
- b) The frame rate is not the real-time frame rate.
- c) The HDVR supports up to 16-channel synchronize playback at the resolution of 4CIF, if you want a 16-channel synchronize playback at the resolution of 720p, the frame extracting may occur, which leads to a slight stuck.

Steps:

1. Verify the frame rate is real-time frame rate.

Select “Menu > Record > Parameters > Record”, and set the Frame Rate to “Full Frame”.

2. Verify the hardware can afford the playback.

Reduce the channel number of playback.

Select “Menu > Record > Encoding > Record”, and set the resolution and bitrate to a lower level.

3. Reduce the number of local playback channel.

Select “Menu > Playback”, and uncheck the checkbox of unnecessary channels.

4. Check if the fault is solved by the above steps.

If it is solved, finish the process.

If not, please contact the engineer from our company to do the further process.

- **No record file found in the device local HDD, and the prompt “No record file found” pops up when you search the record files.**

Possible Reasons:

- a) The time setting of system is incorrect.
- b) The search condition is incorrect.
- c) The HDD is error or not detected.

Steps:

1. Verify the system time setting is correct.

Select “Menu > Configuration > General > General”, and verify the “Device Time” is correct.

2. Verify the search condition is correct.

Select “Playback”, and verify the channel and time are correct.

3. Verify the HDD status is normal.

Select “Menu > HDD > General” to view the HDD status, and verify the HDD is detected and can be read and written normally.

4. Check if the fault is solved by the above steps.

If it is solved, finish the process.

If not, please contact the engineer from our company to do the further process.

List of IP Cameras Compatible

List of Hikvision IP Cameras Compatible



For the list, our company holds right to interpret.

Type	Model	Version	Max. Resolution	Sub-stream	Audio
SD Network Camera	DS-2CD7133F-E	V5.2.0 build 140721	640*480	√	×
	DS-2CD793NFW-D-EI	V5.2.0 build 140721	704*576	√	√
	DS-2CD802NF	V2.0 build 090522	704*576	√	√
		V2.0 build 090715			
		V2.0 build 110301			
	DS-2CD833F-E	V5.2.0 build 140721	640*480	√	√
	DS-2CD893PF-E	V5.2.0 build 140721	704*576	√	√
HD Network Camera	DS-2CD2012-I	V5.2.8 build 141231	1280*960	√	×
	DS-2CD2132-I	V5.2.8 build 141231	2048*1536	√	×
	DS-2CD2410FD-I(W)	V5.2.8 build 141231	1280*720	√	√
	DS-2CD2612F-I	V5.2.8 build 141231	1280*960	√	×
	DS-2CD2612F-IS	V5.2.8 build 141231	1280*960	√	√
	DS-2CD2632F-I	V5.2.8 build 141231	2048*1536	√	×
	DS-2CD2632F-IS	V5.2.8 build 141231	2048*1536	√	√
	DS-2CD4010F	V5.2.6 build 141218	1280*960	√	√
	DS-2CD4012F	V5.2.6 build 141218	1280*1024	√	√
	DS-2CD4026FWD	V5.2.6 build 141218	1920*1080	√	√
	DS-2CD4026FWD-SDI	V5.2.6 build 141218	1920*1080	√	√
	DS-2CD4032FWD	V5.2.6 build 141218	2048*1536	√	√
	DS-2CD4065F	V5.2.6 build 141218	3072*2048	√	√
	DS-2CD4124F-I(2.8-12mm)	V5.2.6 build 141218	1920*1080	√	√
	DS-2CD4132FWD-I(2.8-12mm)	V5.2.6 build 141218	2048*1532	√	√
	DS-2CD4212F-I(2.8-12mm)	V5.2.6 build 141218	1280*1024	√	×
	DS-2CD4212F-IS(2.8-12mm)	V5.2.6 build 141218	1280*1024	√	√
	DS-2CD4212FWD-IS	V5.2.6 build 141218	1280*960	√	√
	DS-2CD4224F-I	V5.2.6 build 141218	1920*1080	√	×
	DS-2CD4232FWD-I	V5.2.6 build 141218	2048*1536	√	×
	DS-2CD4232FWD-IS(2.8-12mm)	V5.2.6 build 141218	2048*1536	√	√
	DS-2CD6213F	V5.2.0 build 140721	1280*960	√	×
	DS-2CD6223F	V5.2.0 build 140721	1920*1080	√	×
	DS-2CD6233F	V5.2.0 build 140721	2048*1536	√	×
	DS-2CD7153-E	V5.2.0 build 140721	1600*1200	√	×
	DS-2CD7164-E	V5.2.0 build 140721	1280*720	√	×

Type	Model	Version	Max. Resolution	Sub-stream	Audio
	DS-2CD754F-EI	V5.2.0 build 140721	2048*1536	√	√
	DS-2CD754FWD-E	V5.2.0 build 140721	1920*1080	√	√
	DS-2CD754FWD-EIZ	V5.2.0 build 140721	2048*1536	√	√
HD Network Camera	DS-2CD783F-EI	V5.2.0 build 140721	2560*1920	√	√
	DS-2CD8153F-E	V5.2.0 build 140721	1600*1200	√	√
	DS-2CD8464F-EI	V5.2.0 build 140721	1280*960	√	√
	DS-2CD852MF-E	V2.0 build 110614	1600*1200	√	√
		V2.0 build 110426			
		V2.0 build 100521			
	DS-2CD855F-E	V5.2.0 build 140721	1920*1080	√	√
	DS-2CD862MF-E	V2.0 build 110614	1280*960	√	√
		V2.0 build 110426			
		V2.0 build 100521			
	DS-2CD863PF/NF-E	V5.2.0 build 140721	1280*960	√	√
	DS-2CD864FWD-E	V5.2.0 build 140721	1280*720	√	√
	DS-2CD876MF/BF-E	V4.0.3 build 120913	1600*1200	√	√
	DS-2CD877BF	V4.0.3 build 120913	1920*1080	√	√
	DS-2CD886MF-E	V4.0.3 build 120913	2560*1920	√	√
	DS-2CD9111(B)	V3.7.1 build 140417	1360*1024	√	×
	DS-2CD9120-H	V3.7.1 build 140417	1600*1200	√	×
	DS-2CD9121	V3.7.1 build 140417	1600*1200	√	×
	iDS-2CD9121	V3.7.1 build 140417	1600*1200	√	×
	DS-2CD9121A	V3.7.1 build 140417	1600*1200	√	×
	iDS-2CD9121A	V3.7.1 build 140417	1600*1200	√	×
	DS-2CD9122	V3.7.1 build 140417	1920*1080	√	×
	DS-2CD9122-H	V3.7.1 build 140417	1920*1080	√	×
	DS-2CD9131	V3.7.1 build 140417	2048*1536	√	×
	iDS-2CD9131	V3.7.1 build 140417	2048*1536	√	×
	DS-2CD9131-K	V3.7.0 build 140403	2048*1536	√	√
	DS-2CD9151A	V3.7.1 build 140509	2448*2048	√	×
	iDS-2CD9151A	V3.7.1 build 140509	2448*2048	√	×
	DS-2CD9152	V3.7.1 build 140417	2560*1920	√	×
	iDS-2CD9152	V3.7.1 build 140417	2560*1920	√	×
	DS-2CD9152-H	V3.7.1 build 140417	2592*2048	√	×
	iDS-2CD9152-H	V3.7.1 build 140417	2592*2048	√	×
	DS-2CD9152-HK	V3.7.0 build 140403	2592*2048	√	√
	DS-2CD9182-H	V3.7.0 build 140403	3296*2472	√	×
	iDS-2CD9282	V3.5.0 build 130810	3296*2472	√	×
	DS-2CD966(B)	V3.1 build 120423	1360*1024	×	×
	DS-2CD966-V(B)	V3.1 build 120423	1360*1024	×	×
	DS-2CD976(C)	V3.1 build 120423	1600*1200	×	×
	DS-2CD976-V(C)	V3.1 build 120423	1600*1200	×	×

Type	Model	Version	Max. Resolution	Sub-stream	Audio
	DS-2CD977(C)	V3.1 build 120423	1920*1080	×	×
	DS-2CD986A(C)	V3.1 build 120423	2448*2048	×	×
	DS-2CD986C(B)	V2.3.6 build 120401	2560*1920	×	×
Network Dome	DS-2DF1-402	V3.2.0 build 131223	704*576	√	√
	DS-2DF1-518	V3.2.0 build 131223	704*576	√	√
	DS-2DE5172-A	V5.2.7 build 141125	1280*960	√	√
	DS-2DF5274-A	V5.2.8 build 150124	1280*960	√	√
	DS-2DF5284-A	V5.2.8 build 150124	1920*1080	√	√
	DS-2DE7186-A/AE	V5.2.7 build 141125	1920*1080	√	√
	DS-2DF7274-A	V5.2.8 build 150124	1280*960	√	√
	DS-2DM7274-A	V5.2.7 build 141125	1280*960	√	√
	DS-2DF7284-A	V5.2.8 build 150124	1920*1080	√	√
	DS-2ZCN3006	V5.2.7 build 141107	1280*960	√	√
	DS-2ZCN3007	V5.2.7 build 141107	1920*1080	√	√
SD DVS	DS-6501HC(-SATA)	V1.0.1 build130607	352*288	√	√
	DS-6501HF(-SATA)	V1.0.1 build130607	704*576	√	√
	DS-6502HC(-SATA)	V1.0.1 build130607	352*288	√	√
	DS-6502HF(-SATA)	V1.0.1 build130607	704*576	√	√
	DS-6504HC(-SATA)	V1.0.1 build130607	352*288	√	√
	DS-6504HF(-SATA)	V1.0.1 build130607	704*576	√	√
	DS-6508HC(-SATA)	V1.0.1 build130607	352*288	√	√
	DS-6508HF(-SATA)	V1.0.1 build130607	704*576	√	√
	DS-6516HC(-SATA)	V1.0.1 build130607	352*288	√	√
	DS-6516HF(-SATA)	V1.0.1 build130607	704*576	√	√
	DS-6601HC	V1.2.1 build131202	352*288	√	√
	DS-6602HC	V1.2.1 build131202	352*288	√	√
	DS-6604HC	V1.2.1 build131202	352*288	√	√
	DS-6601HF(-SATA)	V1.2.1 build131202	704*576	√	√
	DS-6602HF(-SATA)	V1.2.1 build131202	704*576	√	√
	DS-6604HF(-SATA)	V1.2.1 build131202	704*576	√	√
	DS-6701HW(-SATA)	V1.2.0 build140414	960*576	√	√
	DS-6704HW(-SATA)	V1.2.0 build140414	960*576	√	√
	DS-6708HW(-SATA)	V1.2.0 build140414	960*576	√	√
	DS-6716HW(-SATA)	V1.2.0 build140414	960*576	√	√
HD DVS	DS-6601HFH	V1.0.4 build130115	1920*1080	√	√
	DS-6601HFH/L	V1.0.4 build130115	1920*1080	√	√

List of Third-party IP Cameras Compatible



ONVIF compatibility refers to the camera can be supported both when it uses the ONVIF protocol and its private protocols. **Only ONVIF is supported** refers to the camera can only be supported when it uses the ONVIF protocol.

Only AXIS is supported refers to the function can only be supported when it uses the AXIS protocol.

IPC Manufacturer or Protocol	Model	Version	Max. Resolution	Sub-stream	Audio
ACTI	ACM3401-09L-X-00227	A1D-220-V3.13.16-AC	1208*1024	×	×
	TCM4301-10D-X-00083	A1D-310-V4.12.09-AC	1208*1024	×	√
	TCM5311-11D-X-00023	A1D-310-V4.12.09-AC	1208*960	×	√
ARECONT	AV1305 M	65175	1208*1024	√	×
	AV2815	65220	1920*1080	√	×
	AV3105M	65175	1920*1080	√	×
	AV8185DN	65172	1600*1200	×	×
AXIS	M1114	5.09.1	1024*640	√	×
	M3011(ONVIF compatibility)	5.21	640*480 (704*576)	√(×)	×
	M3014(ONVIF compatibility)	5.21.1	1280*800	√	×
	P1346	5.40.9.2	2048*1536	√	√
	P3301(ONVIF compatibility)	5.11.2	640*480(768*576)	√	√(×)
	P3304(ONVIF compatibility)	5.20	1280*800(1440*900)	√	√(×)
	P3343(ONVIF compatibility)	5.20.1	800*600	√	√(×)
	P3344(ONVIF compatibility)	5.20.1	1280*800(1440*900)	√	√(×)
	P5532	5.15	720*576	√	×
	Q7404	5.02	720*576	√	√
Bosch (ONVIF compatibility)	AutoDome Jr 800 HD				
	(ONVIF compatibility)	39500450	1920*1080	×	√ (×)
	Dinion NBN-921-P				
Brickcom	CB-500Ap(Brickcom-50xA)(ONVIF compatibility)	v3.2.1.3	1920*1080	×	√(×)
Canon	VB-H410(ONVIF compatibility)	Ver.+1.0.0	1920*1080 (1280*960)	×	√
	VB-S9000F	Ver. 1.0.0	1920*1080	×	×
	VB-S300D	Ver. 1.0.0	1920*1080	×	×
	VB-H6100D	Ver. 1.0.0	1920*1080	×	×

IPC Manufacturer or Protocol	Model	Version	Max. Resolution	Sub-stream	Audio
	VB-H7100F	Ver. 1.0.0	1920*1080	×	√
	VB-S8000	Ver. 1.0.0	1920*1080	×	×
Panasonic	SP306H(ONVIF compatibility)	Application: 1.34 Image data: 1.06	1280*960	√(×)	√
	SF336H	Application: 1.06 Image data: 1.06	1280*960	√	√
PELCO	D5118(ONVIF compatibility)	1.8.2-20120327-2.9310-A1.785 2	1280*960	√	×
	IX30DN-ACFZHB3 (ONVIF compatibility)	1.8.2-20120327-2.9080-A1.785 2	2048*1536	√	×
	IXE20DN-AAXVUU2 (ONVIF compatibility)	1.8.2-20120327-2.9081-A1.785 2	1920*1080	√	×
SAMSUNG (ONVIF compatibility)	SND-5080 (ONVIF compatibility)	3.10_130416	1280*1024	√	√
SANYO	2300P (with lens)	2.03-02 (110318-00)	1920*1080	×	×
	2500P (with lens)	2.02-02 (110208-00)	1920*1080	×	√
	4600P	2.03-02 (110315-00)	1920*1080	×	√
SONY	SNC-CH220	1.50.00	1920*1080	×	×
	SNCDH220T(ONVIF only)	1.50.00	2048*1536	×	×
	SNC-EP580(ONVIF compatibility)	1.53.00	1920*1080	√	√
	SNC-RH124(ONVIF compatibility)	1.79.00	1280*720	√	√
Vivotek	IP7133	0203a	640*480	×	×
	FD8134(ONVIF compatibility)	0107a	1280*800	×	×
	IP8161(ONVIF compatibility)	0104a	1600*1200	×	√(×)
	IP8331(ONVIF compatibility)	0102a	640*480	×	×
	IP8332(ONVIF compatibility)	0105b	1280*800	×	×
ZAVIO	D5110(ONVIF compatibility)	MG.1.6.03P8	1280*1024	√(×)	×
	F3106(ONVIF compatibility)	M2.1.6.03P8	1280*1024	√(×)	√
	F3110(ONVIF compatibility)	M2.1.6.01	1280*720	√(×)	√
	F3206(ONVIF compatibility)	MG.1.6.02c045	1920*1080	√(×)	√
	F531E(ONVIF compatibility)	LM.1.6.18P10	640*480	√(×)	√

0203041030719



First Choice for Security Professionals